



## How to remove the leak standard


-Remove the black plastic plate on the top of the unit.



-Use a T10 screwdriver to remove the 4 screws under the black plastic plate



-Use a T20 screwdriver or a 3mm allen wrench to remove the 2 screws on the back of the unit

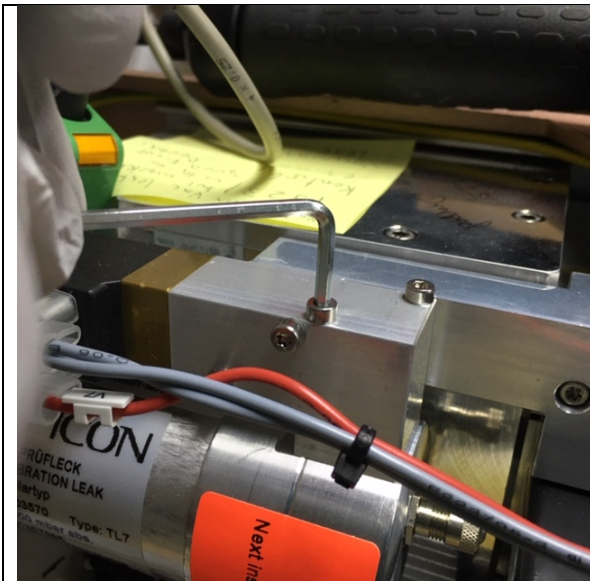

-Use a 2.5mm allen wrench to remove the 2 screws that connect the leak standard.

-Send in the leak standard only. Make sure it is well packaged, it is extremely fragile. Double box the leak standard with bubble wrap or foam.

-Follow these instructions in reverse to install the newly calibrated leak standard once you receive it back.


**When reinstalling the leak make sure the black O-ring is clean and installed where the leak standard connects.**



### Programming the new leak standard valves

-Select the supervisor icon

-Select logoff

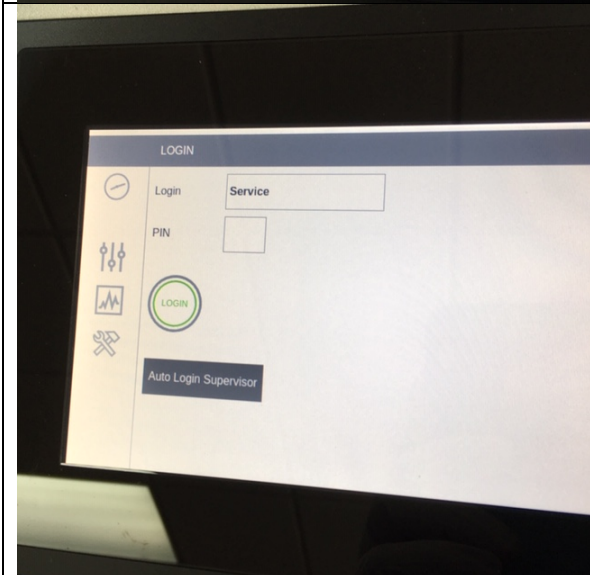


-Select login

-Type Service in Login

-Type 0130 in PIN


-Select LOGIN in the green circle

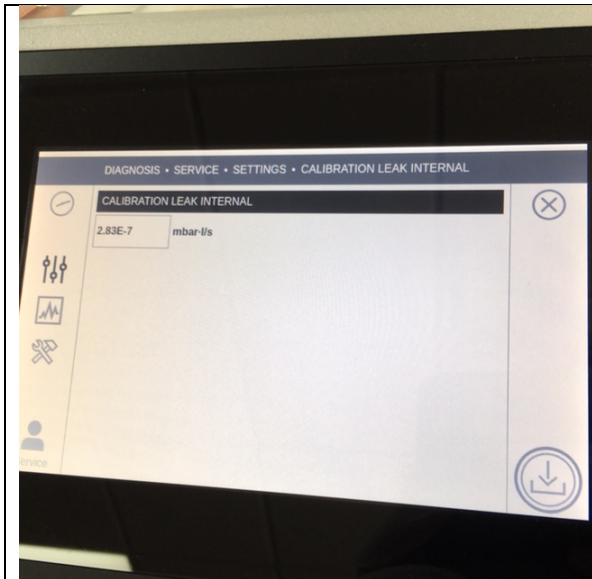

-Select: Diagnosis>Service>Setting>Calibration Leak Internal

-Enter the new value from the leak standard

-Select the circle icon in the lower right-hand side of the screen to save the new valve

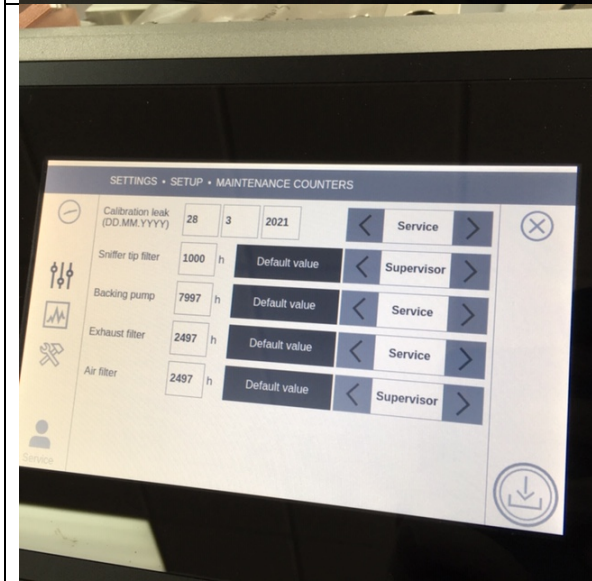

-Select: Setting>Setup>Maintenance Counters

-Enter the "calibration leak" value for one year from the stated date on the newly calibrated leak.

-Select the circle icon in the lower right-hand side of the screen to save the new valve

**Call us at: 603-284-6306 if you have any questions.**