

# PhoeniXL300

## Leak detector

Operating Manual 10218\_002\_A2

Part numbers

250000

250001

250002

251000

251001

251100

251101



# Contents

<b>Important safety informations</b>	<b>4</b>
<b>1 Description</b>	<b>8</b>
1.1 Design and Function .....	8
1.1.1 Vacuum diagram PhoeniXL300 .....	9
1.1.2 Vacuum diagram PhoeniXL300 dry .....	10
1.1.3 Vacuum diagram PhoeniXL300 Modul .....	11
1.1.4 Vacuum method .....	12
1.1.5 Partial Flow Method .....	13
1.1.6 Sniffer mode .....	13
1.2 Supplied Equipment .....	13
1.3 Technical Data .....	14
1.3.1 Technical data PhoeniXL300 .....	14
1.3.2 Technical data PhoeniXL300 dry .....	16
1.3.3 Technical data PhoeniXL300 Modul .....	18
1.3.4 Dimensional drawings .....	20
1.4 Ordering Information .....	23
1.5 Accessories .....	23
<b>2 Installation</b>	<b>30</b>
2.1 Placement .....	30
2.2 Conforming Utilisation .....	30
2.3 Ambient conditions .....	30
2.4 Electrical connections .....	30
2.4.1 Mains power .....	30
2.4.2 Connection for the controller signal and accessories .....	32
2.4.3 Vacuum connections .....	34
<b>3 Operation</b>	<b>36</b>
3.1 Media compatibility/Purge gas .....	36
3.2 Start-up .....	36
3.2.1 Display .....	36
3.2.2 The Display in Run-Up Mode .....	37
3.2.3 The Display in stand-by mode .....	37
3.2.4 Gas Ballast/Purge .....	37
3.2.5 The Display in Measurement Mode .....	37
3.2.6 Call for calibration .....	38
3.2.7 Speaker Volume .....	38

# Contents

3.2.8	Status Line in the Display .....	38
3.2.9	Measurement Mode with bargraph .....	39
3.2.10	Measurement Mode with trend information .....	39
3.3	Interfaces .....	45
3.4	Operation .....	52
3.4.1	Main Menu .....	52
3.4.2	View .....	55
3.4.3	Scale linear/logarithmic .....	55
3.4.4	Display-range auto/manual .....	56
3.4.5	Time axis .....	57
3.4.6	Contrast .....	57
3.4.7	Background in Stand-by .....	58
3.4.8	Lower display limit .....	58
3.5	Mode .....	59
3.6	Trigger & Alarms .....	60
3.6.1	Trigger Level 1 .....	60
3.6.2	Trigger Level 2 .....	61
3.6.3	Trigger Level 3 .....	61
3.6.4	Units .....	61
3.6.5	Volume .....	62
3.6.6	Alarm delay .....	62
3.6.7	Audio alarm type .....	63
3.7	Calibration .....	64
3.8	Settings .....	65
3.8.1	Vacuum settings .....	66
3.8.2	Filter & Background .....	74
3.8.3	Mass .....	76
3.8.4	Miscellaneous (Language, Calibration request, Service interval...) .....	76
3.8.5	Parameter save / load .....	79
3.8.6	Monitoring functions .....	79
3.9	Information .....	82
3.9.1	Service .....	83
3.10	Access Control .....	83
3.10.1	Zero .....	83
3.10.2	Access to CAL function .....	84
3.10.3	Change Menu-PIN .....	84

# Contents

3.11	Calibration .....	84
3.11.1	Introduction .....	84
3.11.2	The calibration routines .....	85
3.11.3	Internal Calibration .....	85
3.11.4	External Calibration .....	86
3.12	Switching off/Shutting down .....	88
<b>4</b>	<b>Maintenance</b> .....	<b>90</b>
4.1	Safety Information .....	90
4.2	Maintenance Intervals .....	90
4.3	Oerlikon Leybold Vacuum Service .....	90
4.4	Maintenance Work .....	91
4.4.1	Opening of the PhoeniXL .....	91
4.4.2	Exchanging the filter mats .....	92
4.4.3	Exchanging the oil .....	93
4.4.4	Cleaning .....	93
4.4.5	Exchanging the fuses .....	93
4.4.6	Exhaust Oil filter .....	95
4.4.7	Turbo molecular pump .....	96
4.5	Calibrated leak TL7 .....	96
4.5.1	Technical Data .....	96
4.5.2	Factory Inspection .....	96
<b>5</b>	<b>Troubleshooting</b> .....	<b>98</b>
5.1	Hints for troubleshooting .....	98
5.2	List of Errors & Warnings .....	98
<b>6</b>	<b>Waste Disposal</b> .....	<b>106</b>

# Safety Information

## Important Safety Information

Indicates procedures that must be strictly observed to prevent hazards to persons.

Indicates procedures that must be strictly observed to prevent damage to, or destruction of the product.

Emphasises additional application information and other useful information provided within these Operating Instructions.

The Oerlikon Leybold Vacuum PhoeniXL<sup>300</sup> leak detector has been designed for safe and efficient operation when used properly and in accordance with these Operating Instructions. It is the responsibility of the user to carefully read and strictly observe all safety precautions described in this section and throughout the Operating Instructions. The PhoeniXL<sup>300</sup> must only be operated in the proper condition and under the conditions described in the Operating Instructions. It must be operated and maintained by trained personell only. Consult local, state, and national agencies regarding specific requirements and regulations. Adress any further safety, operation and/or maintenance questions to our nearest office.

## Failure to observe the following precautions could result in serious personal injury!

### Electrical hazards

During all maintenance and connection work work, make sure that the mains cable have been reliable disconnected and do not carry a mains voltage. The leak detector must only be used in with the hoods closed. The electrical connections must only be provided by a trained electrician as specified, for example, by the regulations EN 50110-1.

Avoid exposing any part of the human body to the vacuum. Only handle the leak detector when the pump is vented.

After a mains power failure the leak detector can run up automatically once more.

Before changing oil or fuses, make sure that the mains cable have been diconnected.

The leak detector is not suited for operation in explosion hazard areas.

---

### Warning

---

### Caution

---

### Note

---

---

### Warning



# Safety Information



During operation the pump can become so hot that there is a danger of burns (>70°C, 158°F). Provide protection against contact with the hot components.

Contaminated parts can be detrimental to health and environment. Before beginning to work, find out whether any parts are contaminated. Adhere to the relevant regulations and take the necessary precautions when handling contaminated parts.

---

## Caution

### **Failure to observe the following precautions could result in damage to the pump!**

Unauthorized opening or modifications of the mechanical or electrical components of the leak detector void the warranty.

The leak detector must only be opened by such persons who have been authorised by Oerlikon Leybold Vacuum to do so.

The leak detector can be damaged when using the wrong voltage. The voltage must be in the range 230V (+/- 5%), 115V (+/- 5%) e.g. 100V (+/- 5%) depending on the leak detector version. Make sure that the mains voltage rating on the PhoeniXL coincides with the locally available mains voltage.

When the PhoeniXL is running in closed rooms the exhaust has to be put out of doors so that the oil vapor can not be breathed in.

Ensure a sufficient air cooling. The air inlet as well the air discharge openings must never be obstructed.

The PhoeniXL is designed for indoor use only.

Operate the PhoeniXL only in the permitted temperature range between +10°C and +40°C.

Only arctic oil (cat. no. 20028181) must be used in the TIVAC D2,5E.

Pumping condensable gases and steams: When pumping test sample water vapour that is inside the test object can attain to the fore pump. With the water vapor that is in the air - especially in humid areas or when using humid or wet test samples - the acceptable compatibility of water vapor or capacity of water vapor respectively can be exceeded.

The steam in the oil of the pump condenses when the water vapor rises over the acceptable value. So the attribute of the oil changes and danger of corrosion occurs for the pump.

While using the leak detector with condensable gases and steams the oil of the fore pump has to be controlled regularly. So you can recognize a condensation of water vapor in the pump. Usually the oil is light and lucent. When water vapor is inside it gets blear and milky at operating state temperature.

# Safety Information

When turning the pump off water vapor condensates and raises the part of water in the oil.

The leak detector must not directly be switched off after the process, in which condensable gases or steams are pumped, is finished. It must be running (at least 20 minutes) with open gas ballast valve (see Chapter ) until the oil of the pump is freed from detached steam.

When not taking care of this instruction there can be a corrosion within the pump, which will not be covered by our warranty.

The height of the oil of the pump has to be controlled regularly.

The normal intervals of changing the oil from the producer have to be taken care of. See instructions of the rotary vane pump.

The references to diagrams, e.g. (1/2) consist of the Fig. no. and the item No. in that order.

We reserve the right to alter the design or any data given in these Operating Instructions. The illustrations are not binding.

Retain the Operating instructions for further use.

## Figures

Symbols of vacuum technology

Given in the following are some important symbols which are used in this Operating Instructions.



Vacuum pump in general



Turbomolecular pump



Measuring instrument



Valve

## Definiton of Terms

The range of the preamplifier and the vacuum ranges are selected automatically.

The autoranging feature of the PhoeniXL covers the entire range or leak rates depending on the selected operating mode. Not only the leak rate signal, but also the pressure in the test sample (inlet pressure P1) and the forevacuum pressure (P2) are used for control purposes. Range switching between the main ranges is performed via valves. Fine range switching within the main ranges is implemented by switching over the gain factor of the preamplifier.

## Autoranging

# Safety Information

<b>Mass alignment</b>	<p>Mass alignment</p> <p>This function automatically aligns the mass spectrometer so that a maximum leak rate is displayed. The control processor changes the voltage which erates the ions in the selected mass range until a maximum ion current is detected by the ion detector. During each calibration the mass alignment is run automatically.</p>
<b>Auto Zero</b>	<p>Determination and automatic adaptation of the internal background.</p> <p>Through this function, the internal zero level of the instrument is determined which is then subtracted from the current leak rate signal. This fuction is run during the calibration process or when operating the start pushbutton, provided the PhoeniXL has been running previously for at least 20 seconds in the stanby or vent mode.</p>
<b>GROSS</b>	<p>GROSS is a measurement mode which allows high inlet pressure (15 to 0,2 mbar). The smallest detectable leak rate is <math>1 \cdot 10^{-7}</math> mbar l / s.</p>
<b>FINE</b>	<p>FINE is a measurement mode with inlet pressure <math>&lt; 0.2</math> mbar. The minimum detectable leak rate is <math>\text{£ } 5 \cdot 10^{-12}</math> mbar l / s</p>
<b>PRECISION</b>	<p>Precision is a measurement mode for the PhoeniXL<sup>300 dry</sup> only from an inlet pressure <math>&lt; 0,1</math> mbar. In this mode the PhoeniXL<sup>300 dry</sup> has the highest sensitivity, the minimum detectable leak rate is <math>\text{£ } 3 \cdot 10^{-11}</math> mbar l / s.</p>
<b>Foreline Pressure</b>	<p>Pressure in the foreline between Turbo pump and rotary vane pump.</p>
<b>Internal helium background</b>	<p>The existing helium partial pressure in the measurement system. The level of the internal helium background is measured in the Stand-by mode and subtracted from the measured signal.</p>
<b>Minimum detectable leak rate</b>	<p>The smallest leak rate the PhoeniXL is able to detect (<math>\text{£ } 5 \cdot 10^{-12}</math> mbar l / s) in vacuum mode.</p>
<b>Menu</b>	<p>The menu allows the user to program the PhoeniXL according to his requirements. The menu has a tree architecture.</p>
<b>Measurement mode</b>	<p>The PhoeniXL measures the leak rate of the test sample.</p>
<b>Default</b>	<p>Status of the PhoeniXL when supplied by the factory.</p>



## 1 Description

The PhoeniXL is a leak detector for helium or hydrogen. This instrument may be used to detect the location and the size of leaks on objects under test in two different ways:

When the test sample has been evacuated first and is sprayed with helium on the outside. It is required that a vacuum connection is provided between the PhoeniXL and the test sample (vacuum mode).

or

when a helium overpressure is provided in the test sample and the test sample is searched from the outside with a sniffer probe which is attached to the inlet port (sniffer mode).

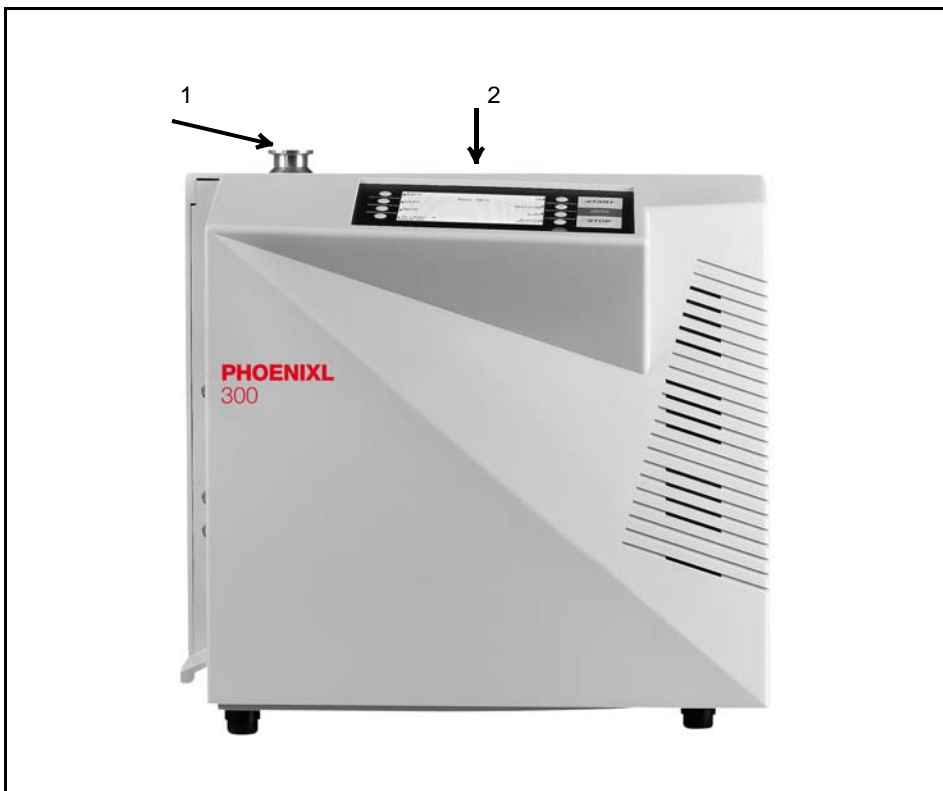


Fig. 1 View of the PhoeniXL

1 inlet flange

2 control panel

### 1.1 Design and Function

The PhoeniXL basically is a helium leak detector for vacuum applications, i.e. the part under test is evacuated while the test is performed. The vacuum is achieved with a pumping system that is part of the PhoeniXL. In addition the vacuum can be generated by pumps which are set up in parallel to the PhoeniXL.

The PhoeniXL<sup>300 Modul</sup> needs a forevacuum pump, dry or wet version, to be connected because this unit has no internal roughing pump. The connection (DN25 KF) is on the side or under the bottom of the PhoeniXL<sup>300 Modul</sup> (Fig. 7).

# Description

Another operating mode of the PhoeniXL is the Sniffer mode which can only be used when a sniffer line (See Chapter 1.1.6) is hooked up.

## 1.1.1 Vacuum diagram PhoeniXL<sup>300</sup>

The vacuum diagram below shows the major components inside the PhoeniXL<sup>300</sup>.

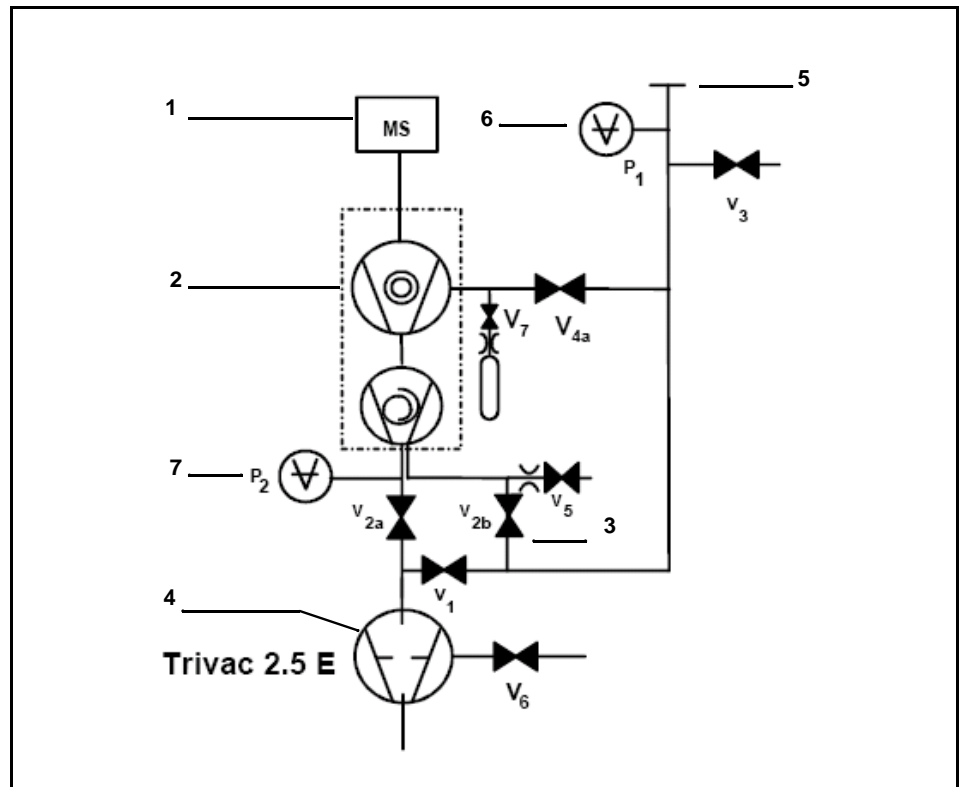


Fig. 2 Vacuum diagram PhoeniXL<sup>300</sup>

Pos.	Description
1	MS: Mass Spectrometer, Helium sensor (180° magnetic field mass spectrometer)
2	Turbomolecular Pump (TMP, provides high vacuum conditions in the MS)
3	Pirani gauge P2 (fore vacuum pressure)
4	Fore pressure pump (provides the foreline pressure for the TMP and pumps down the parts under test)
5	Inlet Port
6	Pirani gauge P1 (inlet pressure)
V1 ... V7:	Electromagnetic Valves to control the gas flows

The mass spectrometer (MS) is mainly composed of the ion source with cathode, the magnetic separator and the ion collector.

Gas molecules getting into the mass spectrometer are ionized by the ion source. These positively charged particles are accelerated into the magnetic field following a circular path, the radius of which depends on the mass-to-charge ratio of the ions. When mass 4 is selected (Default setting) only helium ions can pass this filter and reach the ion collector where the stream of the ions is measured as a electrical

current. When selected another mass than 4, only the corresponding ions can pass the filter.

For operation the mass spectrometer requires a vacuum level in the range of  $1 \cdot 10^{-4}$  mbar and lower. This pressure is provided by the turbomolecular pump which in turn is backed up by a fore vacuum pump.

Besides maintaining the pressure in the mass spectrometer the pump system is used to evacuate the test parts. It is made sure that the pressure in the mass spectrometer is low enough under all circumstances. The valves V1, V2a, V2b, V4a control the gas flows when measuring. Valves V3 and V5 are used to vent the system and the Turbo pump, valve V6 controls the gas ballast function of the fore vacuum pump. Valve V7 opens and closes the internal test leak during calibration.

With the pressure in the test part being lower than ambient pressure sprayed helium (or Hydrogen as forming gas) can penetrate into the part in case of a leakage. As soon as the pressure conditions allow it one of the valves to the TMP opens. Now Helium can penetrate into the mass spectrometer contrary to the pumping direction of the TMP.

## 1.1.2 Vacuum diagram PhoenixXL<sup>300</sup> dry

The PhoenixXL<sup>300</sup> dry has a diaphragm pump as forevacuum pump, making it suitable for applications where oil sealed systems can not be used. Furthermore the PhoenixXL<sup>300</sup> dry contains one more valve, the valve 4b. This valve opens step by step to regulate the inlet pressure into the turbo pump.

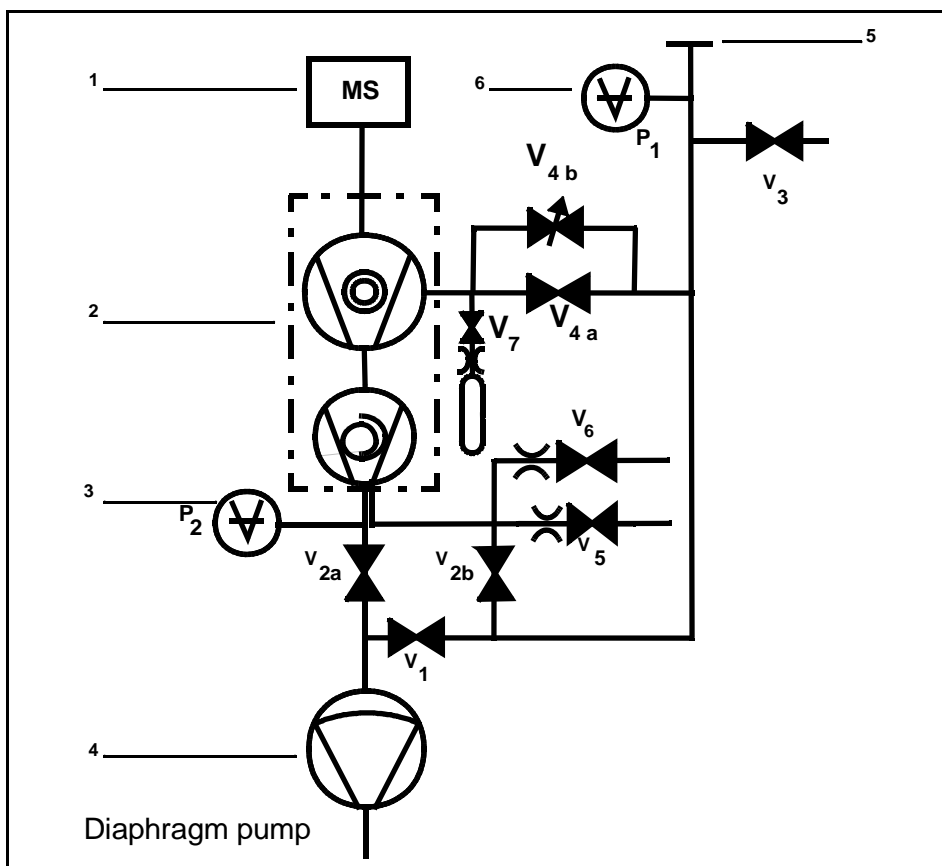


Fig. 3 Vacuum diagram PhoenixXL<sup>300</sup> dry

# Description

- | Pos. | Description   |
|------|---|
| 1    | MS: Mass Spectrometer, Helium sensor (180° magnetic field mass spectrometer)                    |
| 2    | Turbomolecular Pump (TMP, provides high vacuum conditions in the MS)                            |
| 3    | Pirani gauge P2 (fore vacuum pressure)  |
| 4    | Diaphragm pump (provides the foreline pressure for the TMP and pumps down the parts under test) |
| 5    | Inlet Port  |
| 6    | Pirani gauge P1 (inlet pressure)  |
- V1 ... V7: Electromagnetic Valves to control the gas flows

## 1.1.3 Vacuum diagram Phoenix<sup>300</sup> Modul

The Phoenix<sup>300</sup> Modul has no roughing pump integrated as the other models. Therefore it can be used with an external pump only. This pump can be oil sealed or a dry version with a roughing capacity between 2.5 and 65 m<sup>3</sup>/h. This pump has to be connected to the DN25 KF at the side or under the bottom of the Phoenix<sup>300</sup> Modul.

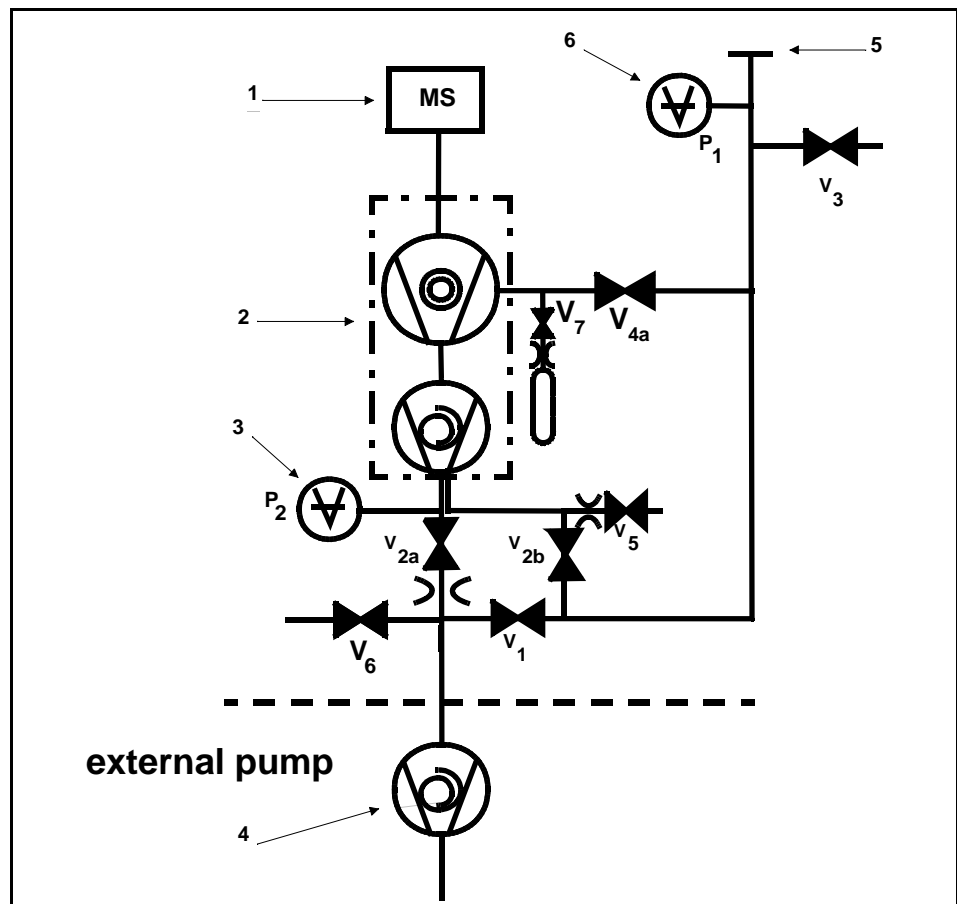


Fig. 4 Vacuum diagram Phoenix<sup>300</sup> Modul

Pos.	Description
1	MS: Mass Spectrometer, Helium sensor (180° magnetic field mass spectrometer)
2	Turbomolecular Pump (TMP, provides high vacuum conditions in the MS)
3	Pirani gauge P2 (forevacuum pressure)
4	Fore pressure pump (provides the foreline pressure for the TMP und pumps down the parts under test)
5	Inlet Port
6	Pirani gauge P1 (inlet pressure)
V1 ... V7:	Electromagnetic Valves to control the gas flows

## 1.1.4 Vacuum method

For the purpose of leak detection on a test sample (vacuum method), the sample has to be evacuated so that Helium or Hydrogen which is sprayed on to the outside, can enter through any leaks due to the pressure differential for detection by the PhoeniXL.

The test sample is evacuated - START button (Fig 16./10) - by the backing pump or the external pump. In the case of larger test samples an additional external partial flow pump with a corresponding linking valve may be connected in parallel as required.

Inlet valve V1 is opened so that the evacuation can take place. At the same time all other valves are closed in order to prevent an unacceptable pressure increase in the mass spectrometer.

In this context (valve V2a closed) the turbomolecular pump is operated without being supported by the rotary vane pump. Since generally no gas is pumped out of the mass spectrometer,  $p_2$  remains constant or increases only slowly.

The condition for the evacuation process described here is maintained until the inlet pressure  $p_1$  has dropped  $<15$  mbar. Now the valves V2a and V2b are opened additionally. Possibly present Helium or Hydrogen may now flow upstream against the pumping direction of the turbomolecular pump into the mass spectrometer where it is detected. This measurement mode is called GROSS. In this mode, leak rates down to  $10^{-8}$  mbar l/s can be detected.

Since the rotary vane vacuum pump continues to evacuate the test sample via valves V2a, V2b and V1 the inlet pressure  $p_1$  will continue to drop. When the pressure drops below  $p_1 < 0.2$  mbar, the PhoeniXL will switch to the FINE mode, i.e. valve V1 and V2b closes and valve V4a opens so that the gas flow enters the turbomolecular pump at the side. This offers two advantages:

- A part of the high pumping speed of the turbomolecular pump remains available for further evacuation of the test sample. The response time is inversely proportional to pumping speed.).
- The advantages offered by the counterflow principle can still be utilized

In the FINE mode the full sensitivity of the PhoeniXL is reached.

Because of the higher base pressure of the diaphragm pump the switching from GROSS to FINE mode of the PhoeniXL<sup>300 dry</sup> is done by the valve V4b. When the pressure drops below 3,5 mbar the valves V1 and V2b will be closed and V4b opens

# Description

step by step. When valve V4b is open completely, pressure  $< 0,1$  mbar, V4a will open also to get the maximum pumping speed. In PRECISION mode the PhoeniXL<sup>300</sup> dry opens the valve V4b only, with the disadvantage of low pumping speed but with the highest sensitivity.

When the leak detection process is stopped – STOP-button – all valves except valve V2a are closed.

Valve V3 is opened during venting of the inlet or test sample.

## 1.1.5 Partial Flow Method

In the partial flow mode the test sample is additionally evacuated by an auxiliary pump. Using the optional partial flow pump set offers to the user the following advantages ( PhoeniXL<sup>300</sup> and PhoeniXL<sup>300</sup> Modul):

- faster response time
- entry into the measure mode already at an inlet pressure of 1000 mbar
- faster venting of large test objects

Alternatively to a partial flow pump set an external auxiliary pump may also be connected via a tee, this option is possible for the PhoeniXL300 dry and PhoeniXL300 Modul also. However, in such a case the PhoeniXL will not be able to make measurements already at an inlet pressure of 1000 mbar.

## 1.1.6 Sniffer mode

The PhoeniXL may simply be converted into a sniffer leak detector via the rugged sniffer line (Cat. No. 252003)

For this the KF flange of the sniffer line is connected to the inlet flange (Fig. 1/1) and the sniffer mode is selected through menu mode. After pressing START, the inlet valve V1 (Fig.2) opens. The sniffer lines have been designed in such a way that the PhoeniXL is operated in the FINE mode. If the forevacuum pressure P2 increases over 0,2 mbar respectively 0,1 mbar a warning sign and audio alarm comes up in the display

In the measurement mode the helium present in the ambient air is now indicated as the leak rate (about  $2 \cdot 10^{-6}$  mbar l/s). Smaller leaks may be detected by pressing the ZERO-button. In sniffer mode the smallest detectable leak rate is  $< 1 \cdot 10^{-7}$  mbarl/s.

## 1.2 Supplied Equipment

The PhoeniXL will be shipped in a special cardboard packed separately in a plastic foil as protection against dust..

Supplied equipment includes:

- Leak Detector PhoeniXL
- Set of fuses
- Power cord
- Folder with documents (Operating instructions, Spare part list)
- 2 L-type screwed connections (hose connections)
- 1 hose nozzle
- Blank flange DN 25 KF
- Clamping ring DN 25 KF
- Centering ring DN 25 KF

## 1.3 Technical Data

### 1.3.1 Technical data PhoeniXL<sup>300</sup>

Physical data

**Physical data**

Max. inlet pressure	15 mbar
Minimum detectable Helium leak rates	
- in vacuum mode	$<5 \cdot 10^{-12}$ mbar l / s
- in sniffer mode	$<1 \cdot 10^{-7}$ mbar l / s
Minimum detectable Hydrogen leak rates	
- in vacuum mode	$<1 \cdot 10^{-8}$ mbar l / s
- in sniffer mode	$<1 \cdot 10^{-7}$ mbar l / s
Maximum Helium leak rate which can be displayed	0.1 mbar l / s
Measurement range	12 decades
Time constant of the leak rate signal (blanked off, 63% of the final value)	<1 s
Pumping speed (Helium) at the inlet	
- GROSS mode	0.4 l/s
- FINE mode	> 2.5 l/s
Detectable masses	2, 3 and 4
Mass spectrometer	180° magnetic sector field
Ion source	2 filaments; Iridium/Yttria-oxide
Inlet port	DN 25 KF
Run-up time (after starting)	< 2 min

To get down to the minimum detected leak rate range some conditions must be fulfilled:

PhoeniXL has to run at least 20 minutes

Ambient conditions must be stable (temperature, no vibration/accelerations.)

The part under test has been evacuated long enough without using the zero function (background is no longer decreasing)

ZERO must be active

# Description

## **Electrical data** Electrical data

Power supply	230 V, +/- 5%, 50/60 Hz 115 V, +/- 5%, 60 Hz 100 V, +/- 5%, 50/60 Hz
Power consumption	420 VA
Type of protection	IP40

## **Other data** Other data

Valves	solenoid
Dimensions (L x W x H) in mm	495 x 456 x 314
Weight in kg	40.0
Noise level dB (A)	< 54
max. Audio alarm dB (A)	90
Contamination level (to IEC 60664-1)	2
Overvoltage category (to IEC 60664-1)	II

## **Ambient conditions** Ambient conditions

For use within buildings	
Permissible ambient temperature (during operation)	+10 °C ... +40 °C
Permissible storage temperature	-10 °C ... +60 °C
Max. rel. humidity	80% (up to 31°C) linear decreasing to 50% at 40°C
Max. permissible height above sea level (during operation)	2000 m



## 1.3.2 Technical data PhoeniXL300 dry

### Physical data

Max. inlet pressure	15 mbar
Minimum detectable Helium leak rates	
- in vacuum mode	$< 3 \cdot 10^{-11}$ mbar l / s
- in sniffer mode	$< 1 \cdot 10^{-7}$ mbar l / s
Minimum detectable Hydrogen leak rates	
- in vacuum mode	$< 1 \cdot 10^{-8}$ mbar l / s
- in sniffer mode	$< 1 \cdot 10^{-7}$ mbar l / s
Maximum Helium leak rate which can be displayed	0.1 mbar l / s
Measurement range	11 decades
Time constant of the leak rate signal (blanked off, 63% of the final value)	$< 1$ s
Pumping speed (Helium) at the inlet	
GROSS mode	0.02 l / s
PRECISION mode	0,4 l / s
FINE mode	$> 2.5$ l / s
Detectable masses	2, 3 and 4
Mass spectrometer	180° magnetic sector field
Ion source	2 filaments; Iridium/Yttria-oxide
Inlet port	DN 25 KF
Run-up time (after starting)	$< 2$ min

To get down to the minimum detected leak rate range some conditions must be fulfilled:

PhoeniXL has to run at least 20 minutes

Ambient conditions must be stable (temperature, no vibration/accelerations.)

The part under test has been evacuated long enough without using the zero function (background is no longer decreasing)

ZERO must be active

### Electrical data

Power supply	230 V, 50 Hz 115 V, 60 Hz 100V, 50/60 Hz
Power consumption	350 VA
Type of protection	IP40

### Physical data

### Electrical data

# Description

## **Other data** Other data

Valves	solenoid
Dimensions (L x W x H) in mm	495 x 456 x 314
Weight in kg	35.5
Noise level dB (A)	< 54
max. Audio alarm dB (A)	90
Contamination level (to IEC 60664-1)	2
Overvoltage category (to IEC 60664-1)	II

## **Ambient conditions** Ambient conditions

For use within buildings	
Permissible ambient temperature (during operation)	+10 °C ... +40 °C
Permissible storage temperature	-10 °C ... +60 °C
Max. rel. humidity	80% (up to 31°C) linear decreasing to 50% at 40°C
Max. permissible height above sea level (during operation)	2000 m

## 1.3.3 Technical data PhoeniXL<sup>300</sup> Modul

Physical data

**Physical data**

Max. inlet pressure	15 mbar
Minimum detectable Helium leak rates in vacuum mode	
- with Scroll pump	$< 8 \cdot 10^{-12}$ mbar l / s
- with oil sealed pump	$< 5 \cdot 10^{-12}$ mbar l / s
in sniffer mode	$< 1 \cdot 10^{-7}$ mbar l / s
Minimum detectable Hydrogen leak rates	
- in vacuum mode	$< 1 \cdot 10^{-8}$ mbar l / s
- in sniffer mode	$< 1 \cdot 10^{-7}$ mbar l / s
Maximum Helium leak rate which can be displayed	0.1 mbar l / s
Measurement range	12 decades
Time constant of the leak rate signal (blanked off, 63% of the final value)	$< 1$ s
Pumping speed (Helium) at the inlet	
GROSS mode	1,0 l / s
FINE mode	$> 2.5$ l / s
Detectable masses	2, 3 and 4
Mass spectrometer	180° magnetic sector field
Ion source	2 filaments; Iridium/Yttria-oxide
Inlet port	DN 25 KF
Run-up time (after starting)	$< 2$ min

To get down to the minimum detected leak rate range some conditions must be fulfilled:

PhoeniXL has to run at least 20 minutes

Ambient conditions must be stable (temperature, no vibration/accelerations.)

The part under test has been evacuated long enough without using the zero function (background is no longer decreasing)

ZERO must be active

# Description

## **Electrical data** Electrical data

Power supply	100V ...230 V, 50/60 Hz
Power consumption	350 VA
Type of protection	IP40
Power cords (EU, USA, UK)	2.5 m

## **Other data** Other data

Valves	solenoid
Dimensions (L x W x H) in mm	495 x 456 x 314
Weight in kg	35.5
Noise level dB (A)	< 54
max. Audio alarm dB (A)	90
Contamination level (to IEC 60664-1)	2
Overvoltage category (to IEC 60664-1)	II

## **Ambient conditions** Ambient conditions

For use within buildings	
Permissible ambient temperature (during operation)	+10 °C ... +40 °C
Permissible storage temperature	-10 °C ... +60 °C
Max. rel. humidity	80% (up to 31°C) linear decreasing to 50% at 40°C
Max. permissible height above sea level (during operation)	2000 m

## 1.3.4 Dimensional drawings

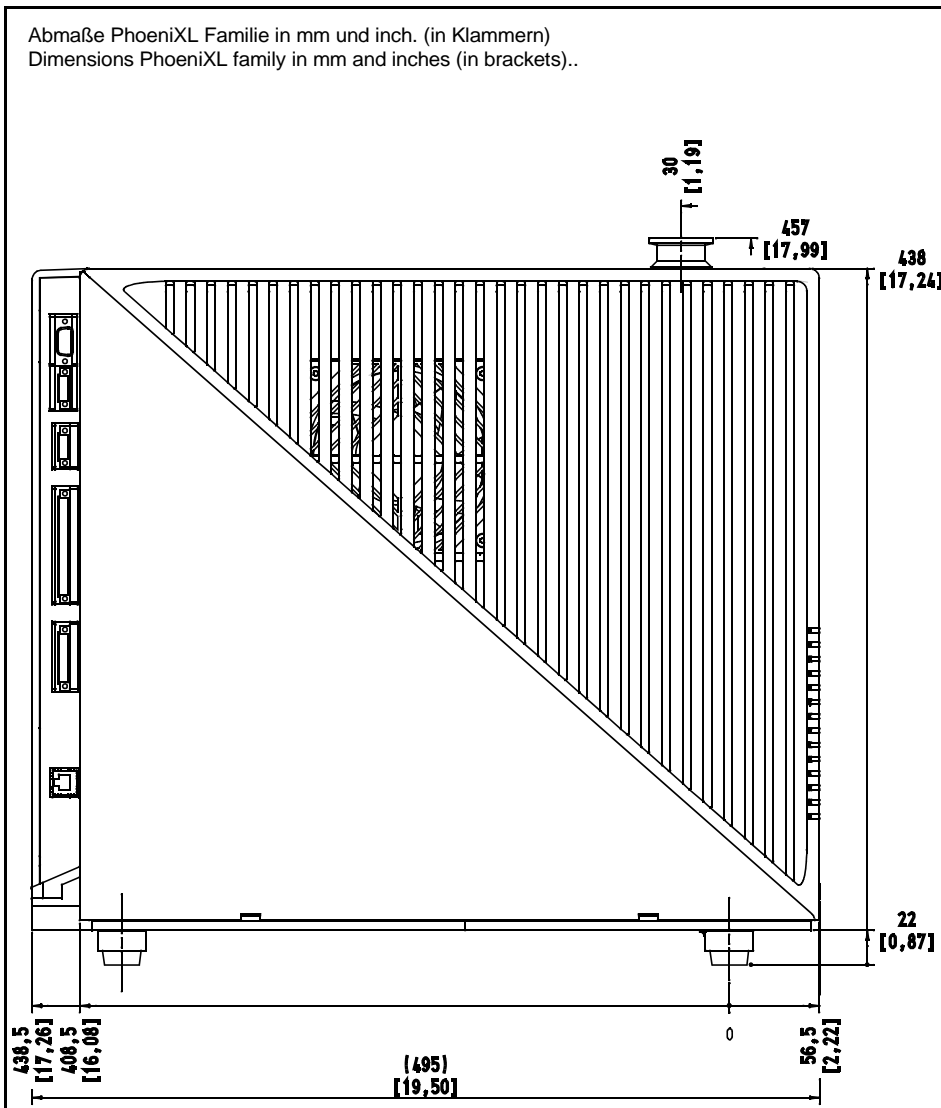


Fig. 5 Dimensions PhoeniXL

# Description

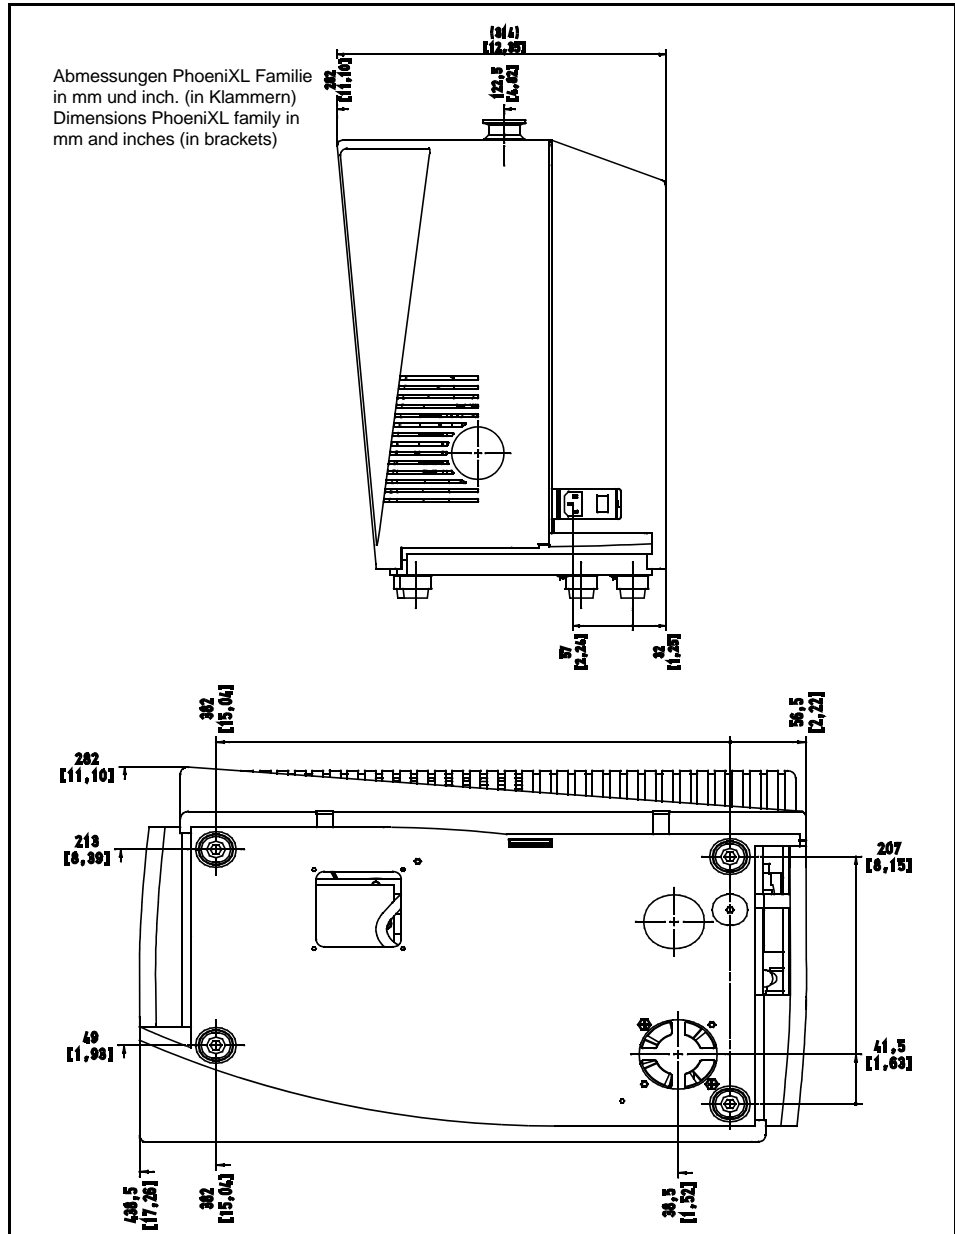


Fig. 6 Dimensions PhoeniXL<sup>300</sup> side view

# Description

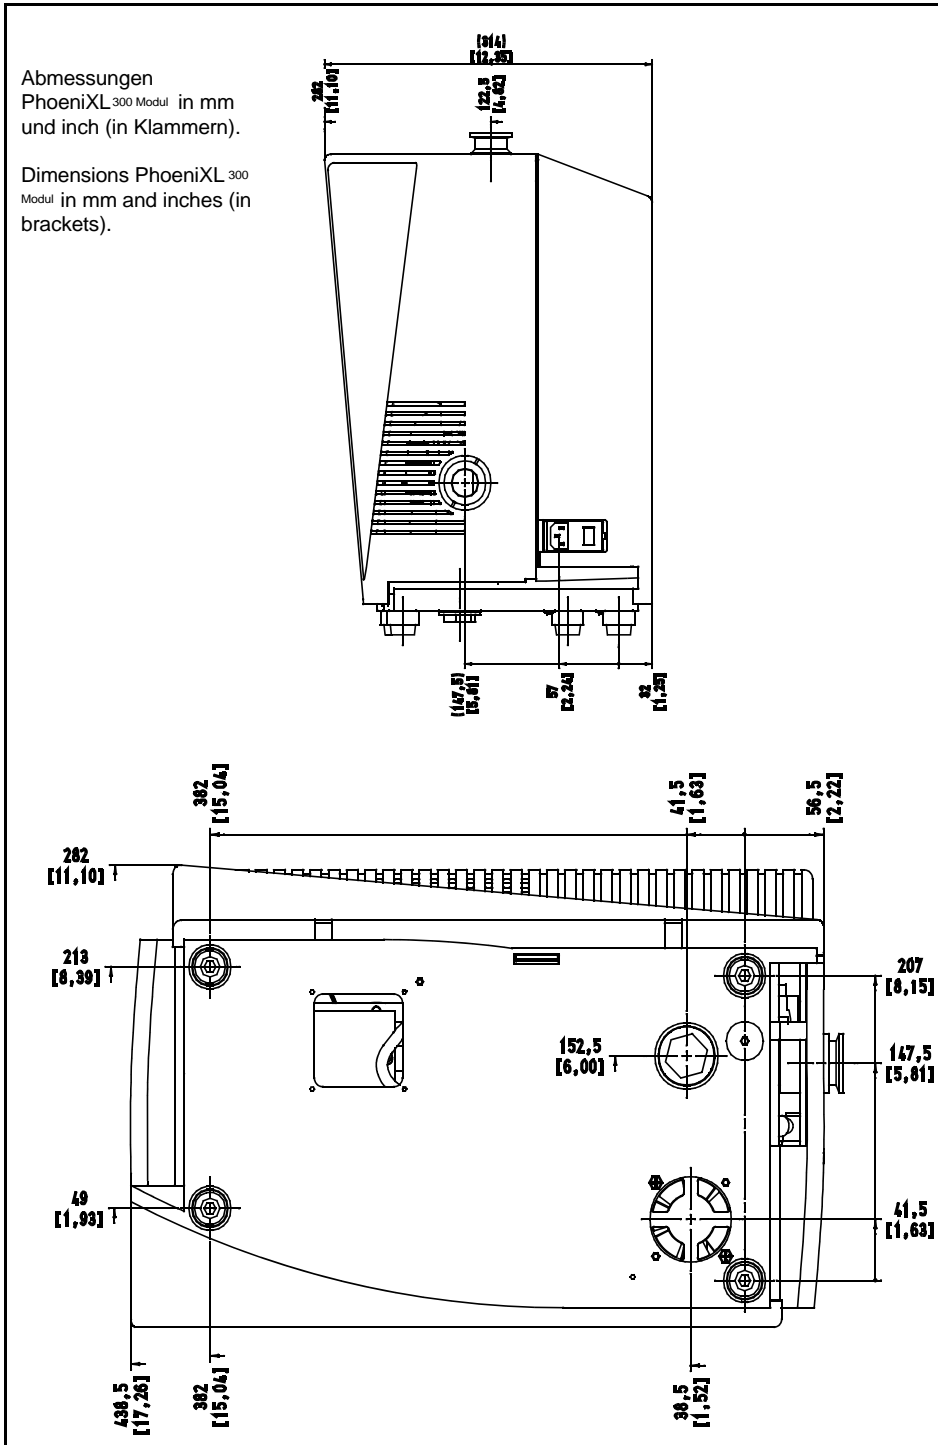


Fig. 7 Dimensions PhoeniXL<sup>300</sup> Modul

# Description

## 1.4 Ordering Information

PhoeniXL <sup>300</sup> EU-Version	250000
PhoeniXL <sup>300</sup> dry EU-Version	250001
PhoeniXL <sup>300</sup> Modul	250002
PhoeniXL <sup>300</sup> US-Version	251000
PhoeniXL <sup>300</sup> dry US-Version	251001
PhoeniXL <sup>300</sup> JP-Version	251100
PhoeniXL <sup>300</sup> dry JP-Version	251101

## 1.5 Accessories

The following parts can be ordered additionally:

Sniffer line SL300	252003
Leak Ware ( Software for data aquisition )	14090
Helium Sniffer QUICK-TEST Qt 100	15594
Remote control set RC310C consisting of:	252013V01
- Remote control	
- cable 4 m	
- mounting parts	
Extension cable for remote control, 10m	14022
Remote control set RC310WL wireless consisting of:	252014V01
- Remote control	
- Radio transmitter	
- mounting parts	
Radio transmitter for remote control	252015V01
Spray gun with hose	16555
Set of connection plugs	20099024
Partial flow system ( PhoeniXL <sup>300</sup> and PhoeniXL <sup>300</sup> Modul )	14020

### Sniffer line SL300

Sniffer line SL300

By use of the sniffer line the PhoeniXL can easily be converted to a sniffer leak detector. The length of the sniffer line is 4m (i.e. 12 feet).

Installation:

The sniffer line is to be adapted to the KF 25 of the PhoeniXL (Fig. 1/1) with the small flange. The electrical plug of the sniffer line is to be connected to the input „Options“ (Fig. 9/9) of the PhoeniXL.



Function:

The green LED is on when

- the PhoeniXL is ready for use and
- the selected trigger level is not exceeded

The red LED is on when

- the PhoeniXL is not ready for use or
- the selected trigger level is exceeded.

The pushbutton in the grip is for the zero function. When pushing the button the helium background will be suppressed. For cancelling the zero function push the button once more.

Options for the sniffer line:

Sniffer tip rigid 120 mm	12213
Sniffer tip rigid 385 mm	12215
Sniffer tip flexible 120 mm	12214
Sniffer tip flexible 385 mm	12216
Capillary filter metal ( for rough conditions)	12217

Spare parts for the sniffer line

Capillary filter plastic (5 pcs)	20003501
Sinter filter with seal (5 pcs)	20003500
Felt disc for capillary filter (50 pcs)	200001116

## Remote Control RC310WL wireless and RC310C wired

## Remote control



Fig. 8 Remote Control RC310WL wireless

For further information of the remote control RC310WL and RC310C see instruction manual with the document number 300306406\_002\_A1.

# Description

## Remote control Remote Control

The remote control is to operate the PhoeniXL from distance up to 30 m (100 ft) depending on the cable length. It provides the functions START, STOP/VENT, ZERO and speaker volume, and displays leak rates in the bargraph. (refer to Chapter and )

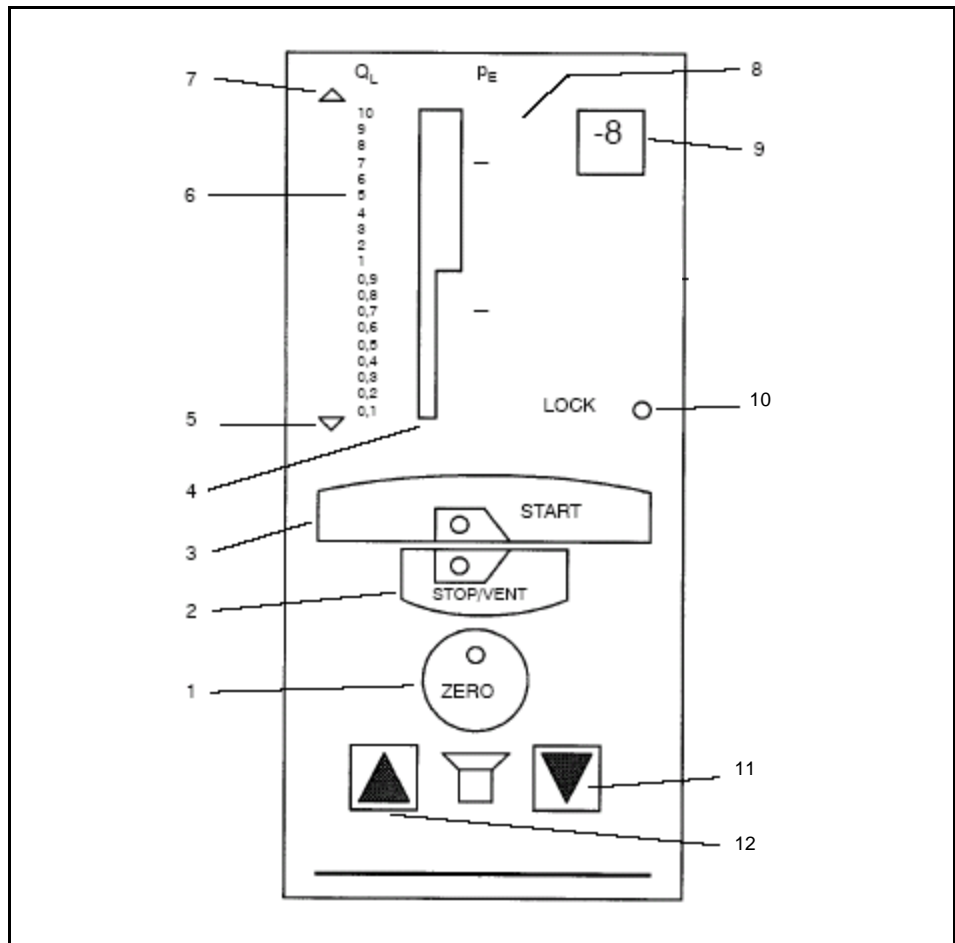


Fig. 9 View of remote control

- |   |                                 |    |   |
|---|---------------------------------|----|---|
| 1 | ZERO button                     | 8  | Scale for the pressure in the test sample |
| 2 | STOP / VENT button              | 9  | Exponent                                  |
| 3 | START button                    | 10 | LED Lock                                  |
| 4 | LED Bargraph display            | 11 | Acoustic signal quieter                   |
| 5 | Underflow display (under range) | 12 | Acoustic signal louder                    |
| 6 | Leak rate scale                 |    |   |
| 7 | Overflow display (over range)   |    |   |

An overview of the controls on the remote control is given in Fig.8.

## Start button

Based on the operating modes Standby or Vent of the PhoeniXL, the START-button is used to start the measurement mode by evacuating the connected test sample. Here the PhoeniXL will operate either with automatic ranging or it will only display the measured values within a fixed range which has been selected by the operator.

The status of measurement readiness is indicated to the operator by a green LED at the START-button. During the pumpdown phase this LED flashes. As soon as the status of measurement readiness has been reached, this LED stays on continuously.

When pressing the START-button in the Standby mode, the internal Zero level is taken over anew, provided the PhoeniXL has been running in the Standby or Vent status for at least 20s.

The STOP/VENT-button has two different functions, depending on how long it is pressed:

## STOP function

Based on the measurement mode of the PhoeniXL, a brief press of the STOP-button interrupts the evacuation process of the test sample and the measurement mode is interrupted. The duration of this key press must be no longer than the time which is defined in the menu. The default time is 1.5 s. The PhoeniXL will return to the Standby mode, i.e. all valves except valve V2a are closed. This condition is indicated to the operator by the green LED in the START-button which is turned off.

After pressing the STOP/VENT-button the display will indicate the message "Standby Vacuum".

## VENT function

When pressing the STOP/VENT-button for a period of time which exceeds the time as defined in the menu, the connected test sample is vented as soon as this time has elapsed. This is done by opening of the venting valve V3. This operating mode is indicated to the operator by the green LED in the STOP/VENT-button which comes on.

The venting valve may be closed again by pressing the STOP/VENT-button briefly once more. The PhoeniXL will return to the Standby mode. The "Vent Vacuum" display is turned off.

## ZERO-button

A constant leak rate reading may be suppressed by pressing the ZERO-button, i.e. a constant helium background within a test sample. This button is only active in the measurement mode. (see Chapter xx)

In AUTO mode and ZERO activated the indication limit is set to the highest sensitivity range, for. ex.  $1\text{E-}12$  mbar l/s

The exponent on the remote control is retained in the case of "Zero" when the leak rate display always remains at the upper decade of the bargraph display. If the leak rate is indicated in the lower decade, the exponent is decremented by one in the case of "Zero". Thus the displayed leak rate can always be suppressed by at least

# Description

one decade so as to increase resolution.

Example:

A leak rate of  $4,1 \cdot 10^{-8}$  mbar l/s can be displayed in two ways on the remote control:

- a) The exponent indicates -8 and the narrow part of the bargraph display is fully on the wider section is on up to number 4.
- b) The exponent indicates -7 and only the lower narrow section of the bargraph display is on up to number 0.4.

In both cases the exponent -8 and the bargraph display is dark after pressing ZERO.

With the background set to off pressing the zero button saves the currently measured value as the "zero level". However, the internal zero level setting as in use remains unchanged.

After operating the zero button, only that amount of the currently measured value is subtracted so that the display limit is just reached. The displayed results of a leak rate measurement will be too high by an amount which corresponds to the display limit. Thus also increases in the leak rate will be visible, which are less than the display limit. Here the internal zero level is not changed.

It is not possible to reduce the detection limit of the instrument by pressing the ZERO-button. The ZERO function is cancelled by pressing the ZERO-button once more. The ZERO function is also cancelled automatically as soon as the STOP/ VENT-button is pressed.

The ZERO function has an effect on all output devices such as display, chart recorder, triggers and RS232 interface.

Acoustic signal

The acoustic signal is used to indicate the leak rate. An acoustic signal is also generated in the case of warning and error messages.

The volume of the acoustic signal can be increased by operating the button to the left of the loudspeaker. With the button to the right of the loudspeaker the volume of the acoustic signal may be reduced.

To check this, a signal will be output at the selected volume for 2 seconds after operating the button. At the same time the volume is indicated on the seven segment display on the hand unit (Fig.xx/4).

Displays on the Remote Control

Measurement range

Here the leak rate is indicated as a bar. In case of a range overflow, the upper arrow at the bargraph on the hand unit comes on and in the case of range underflow, the lower arrow at the bargraph on the hand unit comes on.

The corresponding exponent is indicated at the tip to the right of the bargraph display.

Two leak rate decades can be indicated by the bargraph display. The panel for the

upper leak rate decade (1...10) is twice as wide as that for the lower decade (0.1...1).

## LOCK LED

The LOCK LED comes on when the remote control has been locked.

## Partial flow system

### Partial flow system (PhoeniXL<sup>300</sup> and PhoeniXL<sup>300</sup> Modul)

In the partial flow mode the test sample is additionally evacuated by an auxiliary pump. Using the optional partial flow pump set offers to the user the following advantages:

- faster response time
- entry into the measurement mode already at an inlet pressure of 1000 mbar
- faster venting of large test objects

The partial flow system consists of the components partial flow valve block, right angle valve DN 25 KF, control cable and vacuum hose with flange connections.

The partial flow valve block with the right angle valve has to be connected to the inlet flange of the PhoeniXL. Connect the control cable to the Option port and the vacuum hose to the auxiliary pump. The PhoeniXL has to be configured as described in chapter .

For further detailed information please refer to operating instructions GA 10.277 partial flow system.

## Default settings

The following parameters are set like shown when in the menu of the PhoeniXL under Settings > Parameters, Load / Save is chosen.

Scale	linear
Display range:	4 decades
Time axis:	32 seconds
LCD inverted	off
Background in stand by mode:	off
Calibration request:	off
Mass:	4 (helium)
Recorder:	leak rate
Volume:	2
Leak rate unit:	mbar l/s
Mode:	Vacuum
Trigger level 1:	1E-9 mbar l/s
Trigger level 2:	1E-8 mbar l/s
Trigger level 3:	1E-7 mbar l/s
Leak rate external test leak (vacuum):	1E-7 mbar l/s
Leak rate external test leak (sniffer):	1E-5 mbar l/s

# Description

Vent delay:	2 seconds
Automatic purge (PhoeniXL <sup>300</sup> dry and PhoeniXL <sup>300</sup> Modul only)	on
Pressure:	mbar
Minimum volume:	0
Beep:	on
Maximum evacuation time:	30 minutes
Audio Alarm Type:	Trigger Alarm
Max. pressure limit for sniff mode	0.15 mbar
Min. pressure limit for sniff mode	0.05 mbar
Control location	local
Alarm delay:	30 seconds
Leak rate filter:	auto
Zero:	enable
Vacuum ranges	normal
Upper display limit	1E-5 mbar l/s
Service message exhaust oil filter (PhoeniXL <sup>300</sup> only)	on

## 2 Installation

### 2.1 Placement

Unpack the PhoeniXL immediately after delivery, even if it will be installed later on.

Examine the shipping container for any external damage. Completely remove the packaging materials.

Check the PhoeniXL is complete (see Chapter 1.2) and carefully examine the PhoeniXL visually.

If any damage is discovered, report it immediately to the forwarding agent and insurer. If the damaged part has to be replaced, please contact the orders department.

Retain the packaging materials in the case of complaints about damage.

### 2.2 Conforming Utilisation

The PhoeniXL is a leak detector for Helium or Hydrogen. This instrument may be used to detect the location and the size of leaks on objects under test in two different ways:

when the test sample has been evacuated first and is sprayed with helium on the outside. It is required that a vacuum connection is provided between the PhoeniXL and the test sample (vacuum mode).

or

when a helium overpressure is provided in the test sample and the test sample is searched from the outside with a sniffer probe which is attached to the inlet port (sniffer mode).

The PhoeniXL is to be used for leak detection only. It must not be used as a pumping system (esp. pumping aggressive or humid gases.)

The leak detector is not suitable for

- pumping liquids or gases containing dust or particles
- pumping corrosive or reactive gases

### 2.3 Ambient conditions

The permissible ambient temperature is between +10°C (50°F) and +40°C (104°F).

The PhoeniXL must not be operated in explosive gas atmospheres.

Make sure to avoid dripping water.

Ensure a sufficient air cooling.

### 2.4 Electrical connections

#### 2.4.1 Mains power

Generally the local regulations for electrical connections must be observed.

Before connecting the PhoeniXL to the mains you must make sure that the mains voltage rating of the PhoeniXL coincides with the locally available mains voltage. The instrument must exclusively be connected to a single phase supply with fuses for installation (Circuit breaker 10A max. according to IEC/EN 60898 with tripping characteristic B).

#### Ambient temperatures

---

#### Warning



# Installation

Only 3-core mains cables having a protection ground conductor must be used. Operation of the PhoeniXL where the ground conductor has been left unconnected is not permissible. The PhoeniXL can be damaged when using the wrong voltage. The voltage must be in the range 230V (+/- 5%), 115V (+/- 5%) or 100V (+/- 5%) depending on the version.

The mains voltage rating for the PhoeniXL can be read off from the name plate beneath the mains socket Fig.9 /4 at the side. This voltage is fixed and can not be changed.

A separate fuse for each of the mains conductors has been integrated into the mains switch.

The mains voltage is applied to the instrument via the detachable mains cable which is supplied with the instrument. A mains socket Fig.9 /4 is available for this purpose at the side of the instrument.

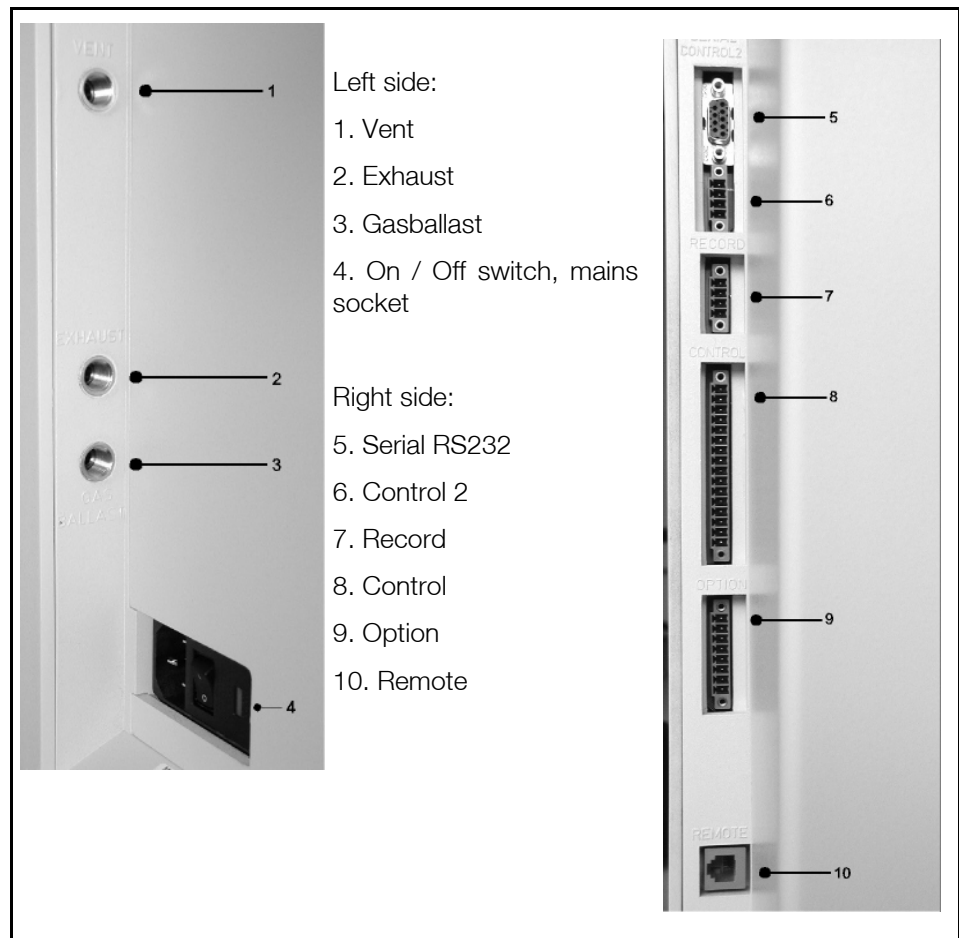


Fig. 10 Side views of the PhoeniXL



## 2.4.2 Connection for the controller signal and accessories

### Option

Option (Accessories)

The sniffer line SL300 or the partial flow system may be connected to the option port (Fig.9/9):

Contact pins 1 and 3 are fused together with a 0.8 A slow-blow fuse. The amount of power which can be drawn is limited to 10 W.

The contacts are numbered from bottom to top.

Pin	Assignment
1	+24 V, constantly applied, power supply for the Leybold partial flow valve or sniffer line.
2	GND
3,	+24V switched by the PhoenixXL for an external venting valve
4, 5, 6, 7, 8	These pins are used in connection with accessories.

Digital Out (Control)

### Digital out (Control)

The following relay outputs Fig.9./8 are available for further signal processing. The maximum rating for the relay contacts is 60V AC/1A.

The contacts are numbered from bottom to top.

Pin	Assignment
1	PLC in free selectable
2	PLC in free selectable
3	PLC in free selectable
4	GND
5 to 7	Digital out free selectable, 5 center contact, 6 normally open contact, 7 normally closed contact
8 to 10	Digital out free selectable
11 to 13	Digital out free selectable
14 to 16	Digital out free selectable

The pin assignment for contacts 8 to 16 follows the same order as for pins 5 to 7.

For further information see chapter 3.3.

# Installation

## Digital In (Control 2)

Digital In (Control 2)

These inputs can be used to control the PhoenixXL with a programmable logic control (PLC).

The contacts are numbered from bottom to top.

Pin	Assignment
1	PLC in free selectable
2	PLC in free selectable
3	PLC in free selectable
4	PLC GND

These inputs Fig.9/6 are working only, if the correct location of control is chosen. See chapter 3.3.

To avoid a mistake between the connection Control 2 and Record, pin 1 and 4 are blocked. When using the connectors the guiding nose for pin 1 and 4 must be removed.

## Recorder

Recorder

The recorder output Fig.9/7 may be used to chart the leak rate, the inlet pressure and the forevacuum pressure. Both recorder activities can be adjusted individually for showing leak rates and pressures.

The measured values are provided by way of an analogue signal in the range of 0 V ... 10 V. The resolution is limited to 10 mV. The instrument which is connected to the recorder output (e. g. X(t) chart recorder) should have an input resistance of no less than 2.5 kW. The measured values are available through pins 1 and 4. The reference potential (GND) is available at pins 2 and 3.

The contacts are numbered from bottom to top.

The chart recorder outputs are electrically isolated from other plugs. If, in spite of this, hum interference is apparent it is recommended to operate the PhoenixXL and the chart recorder from the same mains phase. If this is not possible, you must make sure that the frame ground of both instruments is kept at the same potential.

Pin	Assignment
1	Analog 1, leak rate, inlet pressure P1 or forevacuum pressure P2
2	GND
3	GND
4	Analog 2, leak rate, inlet pressure P1 or forevacuum pressure P2

For further information see chapter 3.3.

## RS232

This RS232 interface Fig.9/5 is wired as data communication equipment (DCE) and permits the connection of a personal computer (PC) for monitoring and data logging. The connection is made through a 9 pin sub-D socket. For more information refer to chapter 3.3 and the Interface Description.

Pin	Assignment
-----	------------

1	24 V switchable, default setting 0
---	------------------------------------

2	TXD
---	-----

3	RXD
---	-----

4	GND 24V
---	---------

5	GND
---	-----

6	DSR
---	-----

7	CTS
---	-----

8	RTS
---	-----

9	free
---	------

## RS 232

## Remote Control

The remote control interface Fig.9/10 is a serial interface to control the PhoenixXL by the remote control. The remote control can be connected via an extension cable with a RJ45 plug. Refer to the Interface Description for more information. The remote control does not belong to the standard equipment.

## Remote control

Pin	Assignment
-----	------------

2	+24V (fuse 0.8 A time lag)
---	----------------------------

3	0 V
---	-----

4	RXD (intern. RS232)
---	---------------------

5	TXD (intern. RS232)
---	---------------------

### 2.4.3 Vacuum connections

#### Inlet Port

The inlet port is located on the top of the PhoenixXL Fig.1/1. The size of the flange is DN 25 KF.

A test object or a test chamber has to be connected to the inlet port if the vacuum mode is chosen (See Chapter 3.5).

The inlet port is also used for the connection of the sniffer line.

## Inlet port

# Installation

## Exhaust

Exhaust

The exhaust Fig.9/2 flange is located on the side of the PhoenixXL.

There is a filter mounted in the exhaust that absorbs the oil steams occuring during the use of the rotary vane pump. The exhaust filter has to be cleaned when doing the maintenance (see Chapter.5.4.6).

When the Phoenix is running in closed rooms the exhaust has to be put out-of-doors using the provided adapter. So the oil steams that are harmful to health are lead off.

With the provided connection a hose line can be connected to the exhaust of the PhoenixXL and lead off.



## Vent

Vent

Usually the parts under test are vented with ambient air when the test is finished. If it is required the parts can be vented with a different gas (i. e. fresh air, dry air, nitrogen, ...) at atmospheric pressure. In this case a vent hose has to be connected to the hose coupling Fig.9/1. The pressure in the venting line must not exceed 1050 mbar.

## Gas ballast connection

Gas ballast connection

For the mode gas ballast it is recommended to use helium-free gases at atmospheric pressure. Ambient air can be contaminated with helium due to spraying or charging. In this case a gas supply line (i. e. nitrogen, fresh air, ...) should be connected to the hose coupling Fig.9/3. The pressure of these gas line must not exceed 1050 mbar.

The connectors 1,2 and 3 in Fig9 are quick connectors for hose diameters of 8/6 mm.

## Connection of external pumps

Connection of an external pump (only PhoenixXL<sup>300 Modul</sup>)

The PhoenixXL<sup>300 Modul</sup> offers two possibilities to connect the external forevacuum pump to the DN 25 KF flange. One on the side of the PhoenixXL or one in the bottom (measurements see Fig.5-7). As default setting the flange on the side is chosen. To change the connection proceed as follows:

1. Take of the mechanical hood, see chapter 5.4.1
2. Loose the flange with the connection piece on the side of the PhoenixXL
3. Disconnect the blind flange on the bottom, therefore lay the PhoenixXL carefully on the electronic hood.
4. Screw in the connection piece into the flange in the bottom.
5. Connect the hose for the forevacuum pump.
6. Connect the blind flange to the sidewise flange.
7. Put on the mechanical hood.

## 3 Operation

### 3.1 Media compatibility/Purge gas

The PhoeniXL is a leak detector for helium and hydrogen. Only air and clean gases must be used with the PhoeniXL.

The leak detector is not suitable for

- pumping liquids or gases containing dust
- pumping reactive or corrosive gases

As purge gas all gases can be used that

- does not contain helium
- are dry, clean and dust free
- generate no corrosion.

### Purge gas/Gas ballast

For venting or gasballast a helium free gas at atmospheric pressure should be used. Ambient air can be contaminated with helium due to spraying or charging, so it is recommended to connect a hose to the vent- and gasballast port. The pressure in this hose must not exceed 1050 mbar.

### 3.2 Start-up

The PhoeniXL is switched on by pushing the mains switch (Please refer to Chapter 2.4.1). After about 2 minutes the run-up procedure is finished; the unit is in Stand-by-mode and ready to measure.

When using the PhoeniXL<sup>300 Modul</sup> an additional forevacuum pump (dry or wet version) has to be connected to the forevacuum connection (DN25 KF) on the side or the bottom.

Please connect the part to be tested to the inlet port and press START. The PhoeniXL starts to evacuate the part. The evacuation time depends on the volume of the test part. During evacuation the screen shows the inlet pressure online.

Once the pressure of 15 mbar (11 Torr or 1500 Pa) is reached the unit switches to measurement mode. The corresponding leak rate is displayed. For further explanations of the screen please refer to Ch.3.2.5.

The displayed leak rate corresponds to the helium background concentration in the part under test. Since the PhoeniXL continues to pump down the part this background leak rate will further reduce. As soon as the leak rate is low enough in respect to your requirements you may start spraying Helium or Hydrogen to search for possible leaks.

When the measurement is finished please press STOP and hold the button a few seconds to vent the part under test.

#### 3.2.1 Display

The display is used to either show leak rates or program specific set-ups and get information by means of the software menu (Please refer to Chapter 3.4.1). In addition messages and maintenance instructions are displayed on the screen (Please refer to Chapter 5).

## 3.2.2 The Display in Run-Up Mode

In run-up mode the display shows:

Speed of the turbomolecular pump

Forevacuum pressure

State of emission

Active filament

A bar graph which shows the run-up progress

If the display is too bright or too dark you can change the contrast. Please see Chapter 3.4.6. During run-up phase the menu button can be pushed to get to the selection menu.

## 3.2.3 The Display in stand-by mode

In stand-by mode the conditions are shown in the upper edge of the display (Fig.12 ). Furthermore calibration (Please refer to Chapter 3.11) can also be started in stand by mode and purging, too (Fig.1/1 )

## 3.2.4 Gas Ballast/Purge

In stand-by mode the gas ballast of the fore pump can be switched on/off manually or via softkey 7. The gas ballast is for abolishing a too huge helium background. Additionally a condensation of water vapour in the pump will be avoided. After 20 minutes the machine closes the gas ballast valve automatically to limit the loss of oil.

This function can be chosen automatically for the Phoenix<sup>300</sup> Modul. Every time the unit changes into stand-by mode the purge starts automatically for 20 seconds. During this time the scroll pump will be purged by the valve V6.

In case there was a large quantum of water vapor pumped with the machine please activate the gas ballast for about 20 minutes before running the machine down.

## 3.2.5 The Display in Measurement Mode

In measurement mode the leak rates can be displayed in two different modes:

- Numerically, combined with a bargraph Fig.10.

- As trend: numerically, combined with a diagram (leak rate versus time) Fig.11.

In the lower right corner of the display (next to the Soft Key no. 8, Fig.10 and Fig.11) you will find a symbol that allows to switch between the display modes by pressing Soft Key no. 8. See chapter 3.2.9 and 3.2.10 for explanations of the different display modes.

Access to calibration (Soft Key no. 5, Fig.10 and Fig.11) and access to the speaker volume (Soft Keys no. 2 and no. 3, Fig.10 and Fig.11) is the same in all modes. Also the status icons in the upper line are in common in both display modes.



Fig. 11 Display: Measurement mode with bargraph

### 3.2.6 Call for calibration

In all modes the soft key no.5 is used to get to the calibration routine. Refer to Ch. 3.11 for further information regarding calibration.


### 3.2.7 Speaker Volume

On the left hand side two loud speaker symbols are shown, combined with the signs + and - (Fig.10 & Fig.11). By pressing the corresponding softkeys (Soft Keys no. 2 and no. 3) the volume can be adjusted for convenient loudness. In the bottom line of the display another loud speaker symbol is shown, combined with a number. This number indicates the level of the current loudness (ranges from 0 to 15).

Refer to Chapter 3.6 Volume for information on loudness, alarms, and sound tracks.

### 3.2.8 Status Line in the Display

The status line at the top of the display (Fig.10 and Fig.11) informs about (reading from left to right):

Symbol of display	Meaning	Explanation
	Volume level	Please refer to Chapter 3.6 Speaker volume.
S1	Trigger 1	If the trigger values are exceeded these signs are inverted. (White on black background.)
S2	Trigger 2	see: Trigger 1
S3	Trigger 3	see: Trigger 1
!	Warning triangle	Please refer to Chapter 5
VAC	Working mode	VAC or SNIFF indicate which working mode was selected

# Operation

Symbol of display	Meaning	Explanation
FINE	Vacuum area	Depending on the inlet pressure the PhoenixXL may be in GROSS, PRECISION (PhoenixXL <sup>300</sup> dry only) or FINE mode, which is indicated here (Chapter 3.8.1)
ZERO	ZERO	Indicates if ZERO-function is active.

### 3.2.9 Measurement Mode with bargraph

The display shows the leak rate in big digital figures, see Fig.10. The unit of the leak rate is shown, too. Underneath the leak rate the inlet pressure is displayed in smaller digits. The units of leak rate and pressure can be defined in the menu (See Chapter 3.6.4).

Below this the same leak rate is shown graphically as a bar. The scale of this bar, i.e. the number of decades included in this bar can be defined in the menu (Please refer to Chapter 3.4.4). The programmed trigger levels (Please refer to Chapters 3.6.1 and 3.6.2) are indicated at the bar by short vertical lines: a straight line for trigger 1 and a dotted line for trigger 2.

### 3.2.10 Measurement Mode with trend information

In trend mode the leak rates are displayed over time Fig.11. In addition the actual leak rate and inlet pressure also are displayed digitally. The time axis can be defined in the menu (Please refer to Chapter 3.4.5). The intensity axis (y-axis) is defined the same way as the bargraph (Please refer to Chapter 3.4.4).

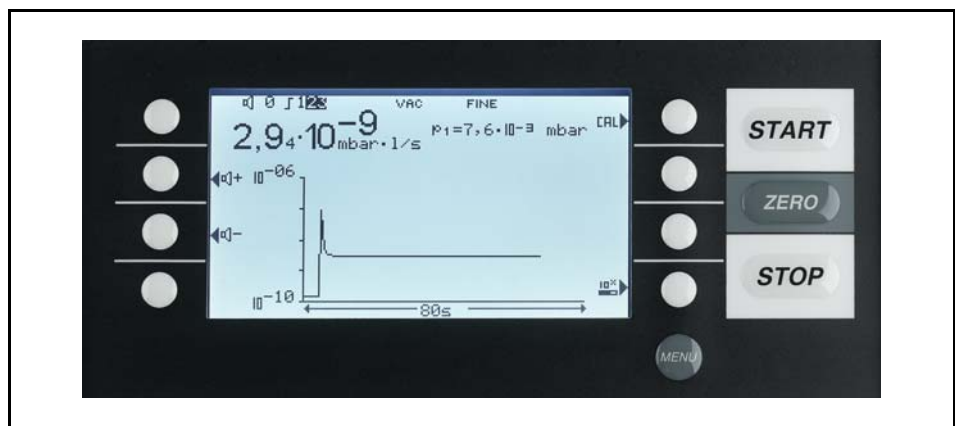


Fig. 12 Display: Measurement mode with trend information

#### First operation check

First Operation Check

The steps for an initial operation are described here. It is explained how to switch on the PhoenixXL, how to measure and how to carry out an internal calibration.

If anything unexpected happens during the initial operation or the leak detector acts in a strange way the PhoenixXL can be switched off by the mains switch at any time.



## Needed Equipment

The following parts will be needed:

- A blind flange 25 KF (if not preassembled at the inlet port).
- A helium test leak with a DN 25 KF connection (optional).
- A forevacuum pump connected to the DN25 KF flange on the side or under the bottom (dry or wet version) for use with the PhoeniXL<sup>300 Modul</sup>

## Startup and Measure

1. Unpack the PhoeniXL and inspect it for any external damage (refer to Chapter 2.1).
2. Connect the instrument to the mains power (refer to Chapter 2.4). For the PhoeniXL<sup>300 Modul</sup> connect the forevacuum pump and switch it on.
3. Switch on the PhoeniXL by using the mains switch.

Don't switch the PhoeniXL on when ambient temperature is below 10°C or above 40°C

After power on a welcoming picture appears on the screen of the control panel Fig.12, the status information on the speed of the turbo pump, the foreline pressure, the emission and the active filament are given.

The start up procedure takes less than 2 minutes and the end is indicated by a signal. The PhoeniXL is in Stand-by mode now.(Fig.12)

4. Check if the inlet port (Fig.1.1) is blanked off. If not, please mount a blind flange with o-ring on the inlet port.
5. Press the START button. The inlet will be evacuated and if the inlet pressure drops below 15 mbar a measured leak rate will be displayed.
6. Press the STOP button, the PhoeniXL will go to Stand-by. If you press STOP a few seconds the inlet of the PhoeniXL will be vented.
7. To finish the startup procedure please proceed with step 21. For calibration proceed with step 8.

## Internal Calibration

8. Proceed the internal calibration (Please refer to Chapter ). For better quantitative measurements please let the unit warm up (15 ... 20 minutes).

Press Calibration (Soft Key no. 5 Fig.13/5) to get into the calibration menu.

Select internal (Soft Key no. 4, Fig.13/4) to choose the internal calibration.

The internal calibration starts automatically and takes about 30 seconds. After a successful calibration a visual and audible signal comes up.

9. Press the STOP button Fig13./12 until the message STAND-BY / VENTED appears on the display. The inlet is vented now.

## Verification with an external test leak

To verify the accuracy please proceed through the following steps. A test leak is required. If a test leak is not available please continue with step 21.

10. Remove the blind flange from the inlet port and connect the open helium test leak to the inlet port.

## Needed equipment

## Startup and measure

---

## Caution

## Internal calibration

## Verification with external test leak

# Operation

11. Press the START button FIG:13/10. The inlet will be evacuated and the leak rate of the test leak will be measured and displayed.
12. Press the STOP button FIG:13/12 to stop the measurement. The PhoenixXL goes into Stand-by mode.
13. Press the STOP button FIG.13/12 again until the message STAND-BY / VENTED appears on the display. The inlet is vented now.
14. Remove the helium test leak from the inlet port and put a blind flange onto the inlet port again.

## Measure with a test object

Measure with a test object

15. Remove the blind flange from the inlet port and connect the test object to the inlet port
16. Press the START button Fig.13/10. The test object will be evacuated.
17. Start spraying Helium onto the outside of the test object. The leak rate of the test object will be shown in the display.
18. Press the STOP button Fig.13/12 to stop the measurement. The PhoenixXL goes into Stand-by mode.
19. Press the STOP button Fig.13/12 again until the message STAND-BY / Vented appears on the display. The inlet is vented now.
20. Remove the test object and put on a blinf flange on the inlet port.

## Switch off

Switch off

21. Switch off the PhoenixXL if the unit is in STAND-BY or VENTED mode by using the mains switch Fig./4.

## Control panel

Control panel

The Control panel Fig.13 contains a liquid crystal display (LC Display), the START, STOP, ZERO and MENU buttons and eight soft Keys for the different menus and inputs selections.

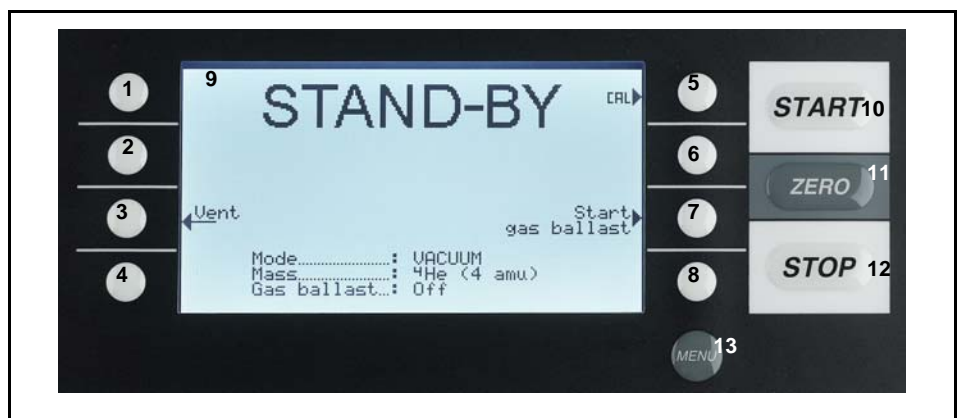


Fig. 13 Control panel

Pos.	Description	Pos.	Description
1	Soft Key no. 1	8	Soft Key no. 8
2	Soft Key no. 2	9	LC Display
3	Soft Key no. 3	10	START
4	Soft Key no. 4	11	ZERO
5	Soft Key no. 5	12	STOP
6	Soft Key no. 6	13	MENU
7	Soft Key no. 7		

## LC Display

The LC Display Fig.13 /1 is the communication interface to the operator. It displays the leak rates, the status report of the PhoenixL, messages, warnings and errors. With the soft keys no.1 to no. 8 various functions which are shown in the display can be selected

## LC-display

## START Button

Pushing the START Button Fig.13 /10 enables the PhoenixL to start the measure procedure. The measured leak rate is shown in the display. If the START button is pushed again in measurement mode, the maximum leak rate indicator („hold“ function) is activated. This indicator shows the maximum leak rate since „START“. By pressing the START-button again the „hold“ function will be started again.

## Start button

## STOP Button

Pushing the STOP Button Fig.13 /12 interrupts the measure procedure. If the button is pressed longer the inlet is vented according to the conditions defined in the menu Vent delay. See Chapter XX to select the time parameters of the venting.

## Stop button

## ZERO Button

Pushing the ZERO button Fig.13 /11 enables the zero mode. (see also Chapter XX)

When pressing ZERO the currently measured leak rate is taken as a background signal and is subtracted from all further measurements. As a result the displayed leak rate then is

## Zero button

$1 \cdot 10^{-8}$  mbarl/s    in GROSS  
 $1 \cdot 10^{-12}$  mbarl/s    in FINE

After pressing ZERO (Fig.14, t=1) the decreasing background is fitted to the course (Fig.14, t=2) automatically. When the measurement signal declines below the saved background the underground value will automatically be equated with the measurement signal. As soon as the measurement signal is increasing again the saved decreasing value remains constant. Increases of the signal are displayed clearly as a leak. So it is possible to recognize leaks even when the signal is decreasing rapidly.

# Operation

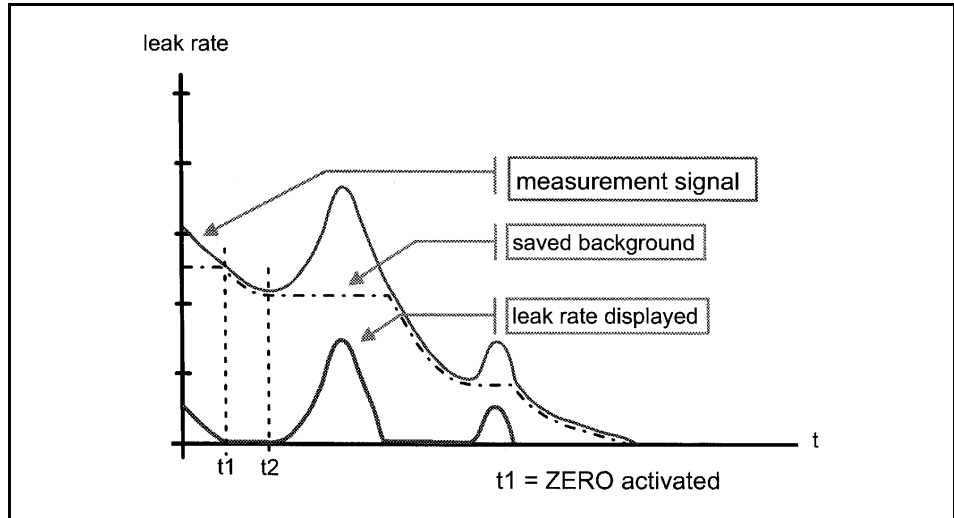


Fig. 14 Zero activation

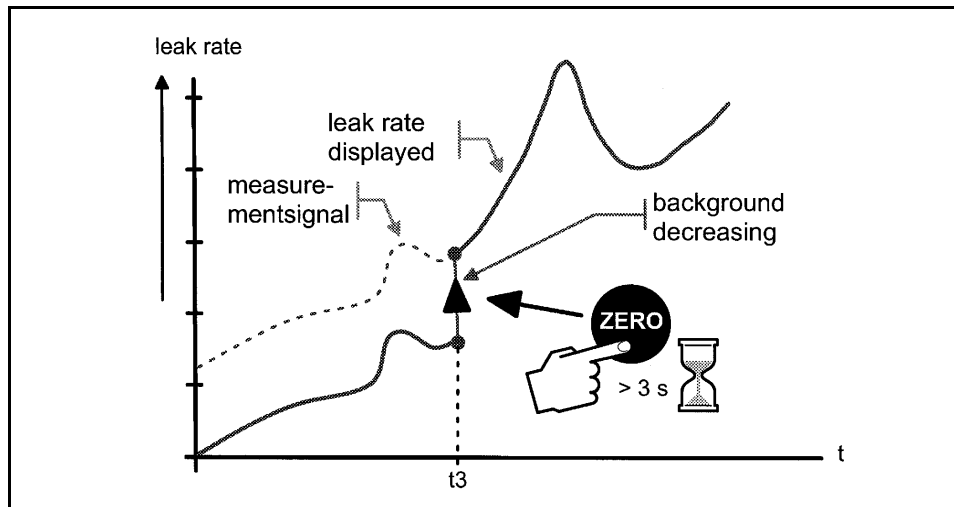


Fig. 15 Undo zero

When you want to see the measurement signal (including underground) please press the ZERO button again. The saved value will be reset to zero. The underground signal will not be suppressed anymore (Fig.15).

## Menu button MENU Button

When pressing the MENU button (Fig.12/13) the selecting menu is shown at the display. This function is not depending on the operating mode when calibrating.

If the menu is opened during the current session the operator will lead to the last screen before the menu was left.

Pushing the MENU button again leads back to the screen of the previous working mode. The software shows the last screen that was used before.

# Operation

## Soft Keys

The function of the eight Soft Keys Fig.12/1...8 depends on the current menu.

## Special Functions

When inputs are allowed or when settings can be selected in a submenu two of the Soft Keys always have the same function:

Soft Key no. 1 Fig.12/1 is Cancel.

It allows to escape from the submenu without any changes of the present settings and return to the previous menu page.

Soft Key no. 8 Fig.12/8 is OK.

The selected settings or edited values will be stored and the previous menu page will be displayed again.

## Numerical Entries

If you have opened a menu page where a digit can be changed please proceed in the following way:

If you don't want to change anything, press Soft Key no. 1 Cancel.

If you want to change the digit please proceed as follows:

1. The digit that can be changed is displayed inverted. With the arrows  $\leftarrow$  (Soft Key no. 8) and  $\rightarrow$  (Soft Key no. 4) you can choose which digit you want to change.
2. To change a digit to a specific number press the corresponding pair of numbers. A submenu opens and the desired number can be selected. The submenu closes automatically and the next digit of the total number now is inverted.
3. Having reached the last digit all changes have to be confirmed by OK (Soft Key no. 8). To correct a wrong entry press Cancel (Softkey 1) or Softkey 4  $\rightarrow$  and enter the desired value again.

## Example

To change the trigger level  $1.0 \cdot 10^{-7}$  mbar l/s to  $3 \cdot 10^{-7}$  mbar l/s please press 2/3 (Soft Key no. 3, Fig.16) . Please consider that the first digit is displayed inverted. If not please change the digit with  $\leftarrow$  (Soft Key no. 8) or  $\rightarrow$  (Soft Key no. 4). With the soft key no. 4 (Fig.17) the chosen value can be selected.

## Soft keys

## Special functions

## Numerical entries

## Example change trigger

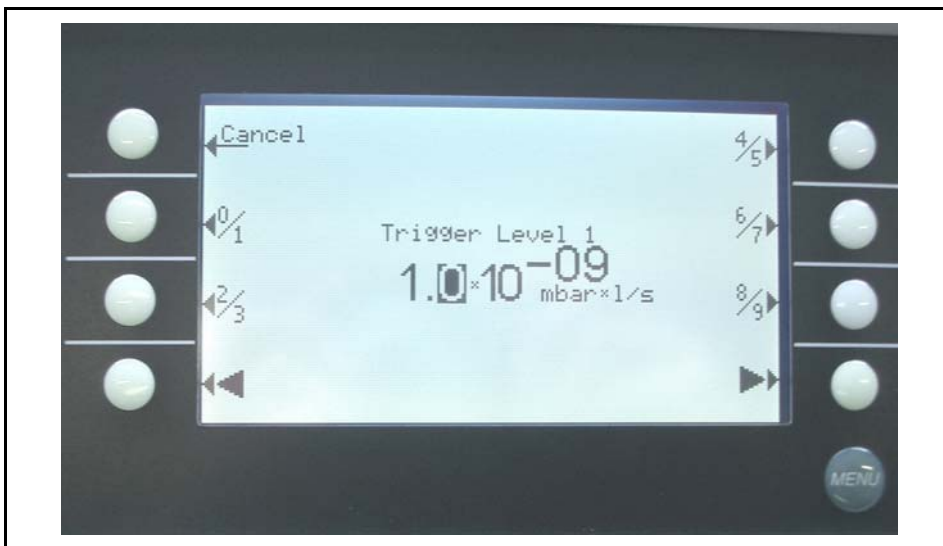


Fig. 16 Numerical entry of the trigger level, sample of the digit

# Operation

In the submenu press 3 (soft key no.4) Fig.17

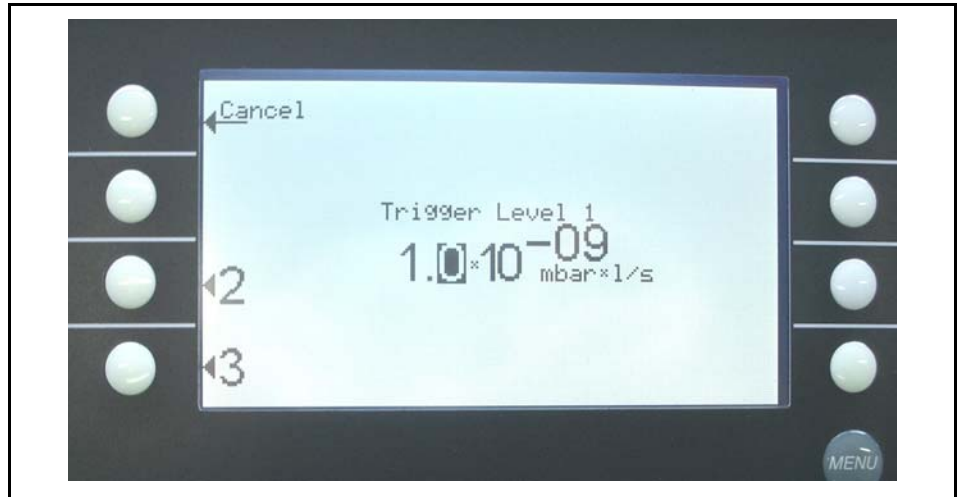


Fig. 17 Trigger level, change of the first digit

### 3.3 Interfaces

Under Main menu > Settings > Interfaces the parameters for the interface can be set.

Softkey 2: Location of control

The location of control for the leak detector can be defined

Softkey 3: Define recorder output

Customer defined selection for the recorder output

Softkey 4: RS232

Selection for the RS232

Softkey 5: Define PLC outputs (Control, digital out)

Customer defined selection for PLC outputs

Softkey 6: Define PLC inputs (Control 2, Digital in)

Customer defined selection for PLC inputs

Softkey 7: Scaling recorder outputs

Selection for the scaling of the recorder output

Softkey 8: PLC sample rate

Selection of the PLC sample rate

## Location of Control

Main menu > Settings > Interfaces > Location of control

Softkey 2: PLC

The PhoeniXL is controlled via the Digital In connector. The START, STOP and ZERO buttons at the control panel and remote control are locked.

Softkey 3: RS232

The PhoeniXL is controlled via RS232 interface by an external computer. In this mode the PhoeniXL can not be controlled via keyboard. The START, STOP and ZERO button at the machine are deactivated.

Softkey 4: All

The PhoeniXL is controlled via all possible controls, e.g. PLC, RS232, Local.

Softkey 5: Local & PLC

The PhoeniXL is controlled via the Digital In connector or/and the START, STOP and ZERO buttons at the control panel and remote control.

Softkey 6: Local & RS232

The PhoeniXL is controlled via the Digital In connector or/and the START, STOP and ZERO buttons at the control panel and remote control.

Softkey 7: Local

The PhoeniXL is controlled via the START, STOP and ZERO buttons at the control panel or remote control. This is the default setting.

## Define recorder output

Main menu > Settings > Interfaces > Define recorder output

The signals to be recorded can be selected in this submenu. With the left keys the pin can be selected, with the right keys a function is assigned to the selected pin. The recorder output has 2 channels (Fig.18)

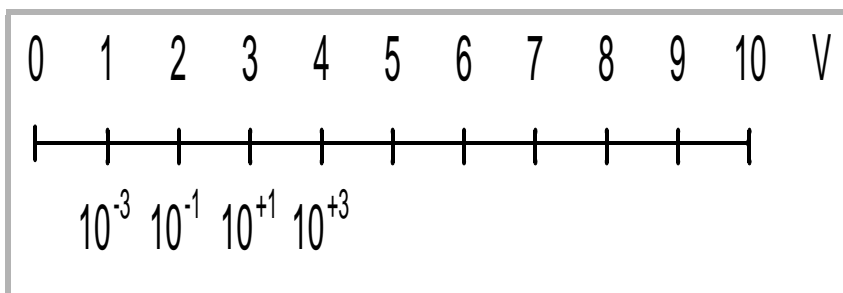


Fig. 18 Recorder output: Pirani PhoeniXL, P1 and P2. The complete characteristic Pirani line is shown in the appendix.

## Location of control

## Define recorder output

## Recorder output pirani P1/ P2

# Operation

The following functions can be selected:

## Selection recorder outputs

Off

The recorder output is switched off

P1 Pirani PhoeniXL

The inlet pressure P1 of the PhoeniXL will be shown logarithmic. Fig.18

P2 Pirani PhoeniXL

The forevacuum pressure P2 of the PhoeniXL will be shown logarithmic. Fig.18

P1 (L200)

The setting for the inlet pressure P1 is identical with those of the L200, i.e. 1000 mbar comply 4V with 0.5V/decade logarithmic scale. Users can exchange their L200 for a PhoeniXL without changing pin assignment. Fig.19

P2 (L200)

The setting for the forevacuum pressure P2 is identical with those of the L200, i.e. 1000 mbar comply 4V with 0.5V/decade logarithmic scale. Users can exchange their L200 for a PhoeniXL without changing pin assignment. Fig.19

LR mantisse

The leak rate mantissa is recorded linearly from 1 ... 10V. Fig.21

LR exponent

The exponent is recorded as step function:  $U = 1 \dots 10V$  with steps of 0,5V per decade, starting with  $1V = 1 \cdot 10^{-12}$  mbar/s. Fig.20

LR linear


The fundamental output voltage is scaled linear. The fundamental voltage is 0 ... 10V in scalable steps from 0,5, 1, 2, 2,5, 5 to 10 volts per decade.

LR log

The fundamental output voltage is scaled logarithmic and can be freely chosen. The voltage output ranges from 1 to 10 V with adjustable steps of 0,5, 1, 2, 2,5, 5 to 10 V per decade (Fig.22 shows the default setting)




# Operation

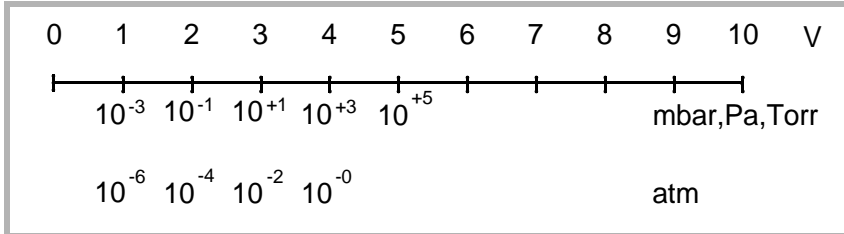


**Recorder output P1/P2 L200**

Fig. 19 Recorder output: P1 and P2 L200

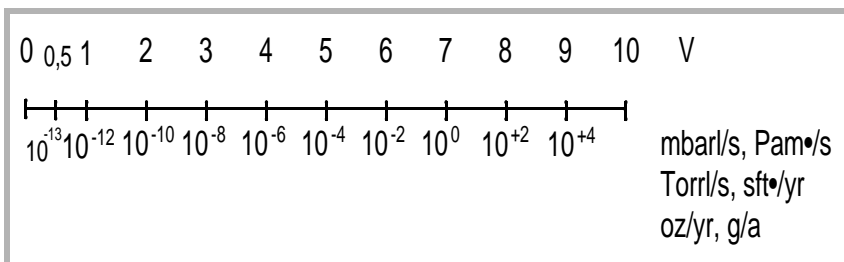


**Recorder output leak rate exponent**

Fig. 20 Recorder output: Leak rate exponent

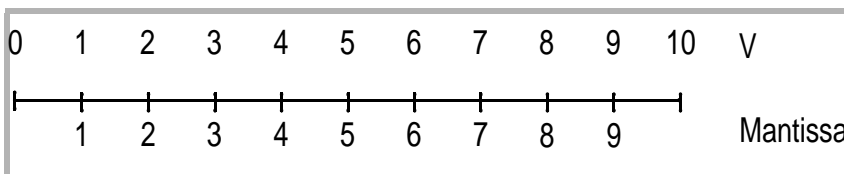

**Recorder output leak rate mantissa**

Fig. 21 Recorder output: Leak rate mantissa

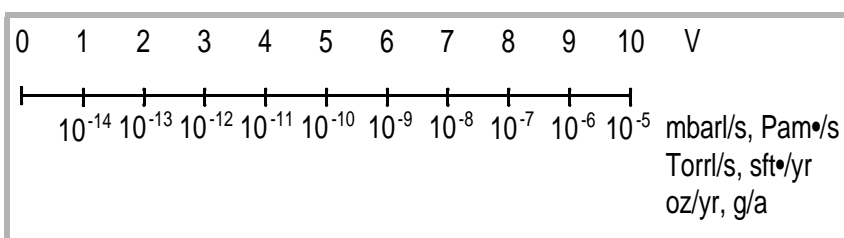

**Recorder output leak rate logarithmic**

Fig. 22 Recorder output: Leak rate logarithmic, default setting

# Operation

## RS232

RS232

Main Menu > Settings > Interfaces > RS232

Softkey 2: Baudrate and end sign

Settings for the baudrate selectable between 1200 and 19200, as well as endsign between CR+LF, CR or LF.

Softkey 3: Data, Parity, Stop bits

The settings for Data ( 7 or 8 ), Parity ( Even, Odd, None ) and Stop bits ( 1 or 2 ) can be selected

Softkey 7: RS 232 Protocol

The protocol from the RS 232 can be chosen between: L200 size, Diagnostic, L200 Leakware and ASCII code.

The calibration function of Leak Ware is not suitable with the use of a Phoenix.

## Define PLC outputs

Define PLC outputs

Main Menu > Settings > Interfaces > Define PLC outputs

The following relay outputs are available for further signal processing. The maximum rating for the relay contacts is 60V AC/1A.

The contacts are numbered from bottom to top.

Pin	Assignment
1	PLC in free selectable
2	PLC in free selectable
3	PLC in free selectable
4	GND
5 to 7	Digital out free selectable, 5 center contact, 6 normally open contact, 7 normally closed contact
8 to 10	Digital out free selectable
11 to 13	Digital out free selectable
14 to 16	Digital out free selectable

Description of the operation mode of the Digital Out. The pin assignment for contacts 8 to 16 follows the same order as for pins 5 to 7.

The actual pin setting can be seen under Info / View internal data / page 7.

The following digital out signals are selectable.

Trigger 1; Trigger 2 and 3 analog Trigger 1

Is open in case Trigger Level 1 is exceeded or the machine is not in condition of measuring.

Zero active:

Is closed in case Zero function is running.

## Ready:

Is closed in case machine is in measurement mode (Emission on, no error).

## CAL active

Closed when machine is in calibrating routine.

## CAL Request

Is open in case of calibration request. During external calibration a open output indicates that the external calibrated leak has to be closed.

## Fail

Open when a error is shown.

## Warning

Open when a warning is shown.

## Gas ballast

Closed when gas ballast is active.

## Open

Open all time.

## Close

Closed all time.

## Recorder Strobe

Closed in case recorder output is invalid. Only used when record output is set on „leak rate“.

## Pump down

Open when machine is evacuating the test object.

## Standby

Open when machine is in Standby or Vent mode.

## Vented

Open when machine is in Vent mode.

## Emission on

Open when emission is on.

## Define PLC inputs

Main menu > Settings > Interfaces > Define PLC inputs

These inputs can be used to control the PhoeniXL with a programmable logic control (PLC).

## Define PLC inputs

Pin	Assignment
1	PLC in free selectable
2	PLC in free selectable
3	PLC in free selectable
4	PLC GND

Description of operation mode of the Digital In.

The contacts are numbered from bottom to top.

# Operation

The PLC inputs are working only if the correct location of control has been set.

The actual pin setting can be seen under Info / View internal data / page8.

Zero:

Change from low to high: activate zero

Change from high to low: deactivate zero

Start:

Change from low to high: activate START

Stop:

Change from low to high: activate STOP

When this inlet is longer high than chosen then ventilate it additionally.

Purge/gas ballast:

Change from low to high: activate purge/gas ballast

Change from high to low: deactivate purge/gas ballast

Clear:

Change from low to high: confirm error message

CAL:

Change from low to high:

When machine is in stand-by mode: start internal calibration. In case machine is measurement mode: start external calibration. (Premise: external calibration test leak has to be open and leak rate signal is stable)

Change from high to low:

External calibration: approve that external test leak is closed and leak rate signal is stable.

High means:  $U > 13V$ (approximately 7mA)

Low means:  $U < 7V$

The level of the logic signals must not exceed 35V.

CAL intern:

Change from low to high: The Machine starts an internal calibration independent from the mode the machine is running in.

CAL extern:

Change from low to high: The Machine starts an external calibration independent from the mode the machine is running in.

Change from high to low: approve that external test leak is closed and leak rate signal is stable.

Signals at these inputs are only accepted if the location of control is set to „PLC“, „All“ or „Local and PLC“.

## Scaling recorder output

Scaling Recorder Output

Main menu > Settings > Interfaces > Scaling recorder output

Here the scaling of the recorder output can be adjusted. This adjustment is possible only when the signal LR lin or LR log is chosen.

Softkey 2: ↓

The decade of the upper leakrate can be decreased

Softkey 3: ↓

Decrease scaling of the previously adjusted value in steps of 0.5, 1, 2, 2.5, 5, 10 Volt/decade. The complete array covers 10 V.

Softkey 5: ?

Help text.

DSoftkey 6: ↑

The decade of the upper leakrate can be increased

Softkey 7: ↑

Increase scaling of the previously adjusted value in steps of 0.5, 1, 2, 2.5, 5, 10 Volt/decade. The complete array covers 10 V.

Example:

Upper limit value is adjusted to  $10^{-5}$  (= 10V)

Scaled to 5 V/decade

Lower limit value consequently is  $10^{-7}$  (= 0 V)

PLC Sample Rate

Main menu > Settings > Interfaces > PLC Sample rate

Softkey 2: ↓

Decreasing the PLC sample rate down to the minimum of 10 ms. This might be necessary if exchanging an L200 to the PhoeniXL to stay compatible.

Softkey 3: ↑

Increasing the PLC sample rate to the maximum of 100 ms.

## 3.4 Operation

By pressing the MENU push button Fig.12/13 the main menu will be displayed regardless of the current working mode or status of the PhoeniXL

The main menu Fig.23 leads the operator to several submenus described in the following chapters. The main menu is identically for all PhoeniXL models.

The next page gives an overview of the entire menu architecture Fig.24.

The overview of the menu architecture corresponds to the PhoeniXL<sup>300</sup>, differing menu points or setting possibilities for the PhoeniXL<sup>300 dry</sup> and PhoeniXL<sup>300 Modul</sup> are described in the respective menu point.

### 3.4.1 Main Menu

The main menu Fig.23 shows 7 sub-menus. In these sub-menus groups of technical features are put together logically. From here the next levels of the menu tree can be reached .

# Operation

All following chapters show the path to get to the described menu line right underneath the headline.



Fig. 23 Display:Main menu

Explanation to Fig.22:

Key No.	Name	Description
1	Back	Return to the previous screen.
2	View	Display settings like scaling, contrast, system background. Please refer to Chapter 3.4.2.
3	Mode	Selection of the working modes Vacuum or Sniff Please refer to Chapter 3.5.
4	Trigger & Alarms	Settings of units, trigger levels and alarms. Please refer to Chapter 3.6.
5	Calibration	Calibration of the PhoeniXL. Please refer to Chapter 3.11.
6	Settings	Settings of internal machine parameters. Please refer to Chapter 3.8.
7	Information	Information on the PhoeniXL (electrical and vacuum data) and service menu. Please refer to Chapter 3.9.
8	Access Control	Access restrictions. Please refer to Chapter 3.10.

	1. Level	2. Level	3. Level	
Main Menu	View	Scale linear / logarithmic		
		Display range		
		Time axis		
		Contrast		
		Background in Stand-by		
		Lower display limit		
	Mode	Sniff/Vacuum		
	Trigger & Alarms	Trigger Level 1		
		Trigger Level 2		
		Trigger Level 3		
		Units		
		Volume		
		Alarm delay		
		Audio alarm type		
	Calibration	internal		
		external		
	Settings	Vacuum settings	Vent delay	
			Vacuum ranges	
			Partial flow setup/Pump setup	
			Sniffer factor	
			Machine factor	
			Leak rate internal test leak	
			Purge in measurement	
		Filter & Background	Background suppression	
			Calculate inlet area background	
			Leak rate filter	
		Mass		
		Interfaces	Location of control	
			Define recorder output	
			RS232	
			Define PLC outputs	
			Define PLC inputs	
			Scaling recorder output	
			PLC sample rate	
		Miscellaneous	Time&Date	
			Language	
			Calibration request	
Service internal fore pump				
Service internal exhaust oil filter				
Service message exhaust oil filter				
Parameter save / load	Load parameter set			
Monitoring functions	Pressure limits for sniff mode			
	Maximum evacuation time			
	Pressure limits for vacuum mode			
Information	View settings			
	View internal data			
	Vacuum diagram			
	View error list			
	Calibration history			
	Calibration factors			
	Service			
Access Control	Access to CAL function			
	Change Device-PIN			
	Change Menu-Pin			
	Zero			

Fig. 24 Overview menu structure

# Operation

## 3.4.2 View

Main menu > View

In this menu Fig.24 all features that influence the data display are put together.



Fig. 25 Display:View Menu

Explanation to Fig.24:

Key No.	Name	Description
1	Back	Return to the main menu.
2	Scale linear/logarithmic	Settings for bargraph and trend mode. Please refer to Chapter 3.4.3.
3	Display range auto/manual	Manual or automatic scaling. Please refer to Chapter 3.4.4
4	Time axis	Time axis in trend. Please refer to Chapter 3.4.5
5	Contrast	Display contrast. Please refer to Chapter 3.4.6
6	Background in stand-by	Background displayed or not. Please refer to Chapter 3.4.7
8	Lower display limit	Setting of the display limit. Please refer to Chapter 3.4.8

## 3.4.3 Scale linear/logarithmic

Main menu > View > Scale linear/logarithmic

These settings apply to the bargraph (= bar underneath the digital figures in the measurement mode) and Y-axis in the trend diagram.

The scale of the bargraph can either be linear or logarithmic. With the arrows

(↓ and ↑) it can be determined how many decades the bargraph and Y-axis are covered. Usually a logarithmic scale is recommended because leak rates may change easily over several decades. Default setting is logarithmic with 4 decades.



Softkey 2: Linear

Pressing this key switches the display to a linear scale, starting at zero.

Softkey 3: ↓ (Number of decades)

Pressing this key reduces the number of displayed decades. The minimum value is 2 decades. Only available if log (softkey 6) was chosen.

Softkey 6: Logarithmic

The scaling will be displayed logarithmically.

Softkey 7: ↑ (Number of decades)

Increase the number of displayed decades. Maximum value is 9 decades. Only available if log (softkey 6) was chosen.

### 3.4.4 Display-range auto/manual

Main menu > View > Display range auto/manual

The upper limit of the displayed leak rate range can be set manually or automatically. These settings apply to the bargraph (= bar underneath the digital figures in the measurement mode and y-axis in the trend mode).

With the upper limit defined here the lower limit is set to a value based on the number of decades.

Softkey 2: Manual

The upper limit of the displayed range can be set manually.

Softkey 3: ↓

Decrease the upper limit if manual is chosen. The minimum value is  $10^{-11}$  mbar l/s

Softkey 5: ?

Help text

Softkey 6: Automatic

The limit of the displayed range will be chosen automatically.

Softkey 7: ↑

Increase the upper limit if manual is chosen. The maximum value is  $10^{+3}$  mbar l/s

Softkey 8:

Save the settings and return to the previous menu.

If linear scale is selected, the lower limit is always zero. The upper limit is only a default value. You can change this on the measurement screen with the Soft Key 6 and 7 if you have chosen manual display ranging.

## 3.4.5 Time axis

Main menu > View > Time axis

The length of the time axis in trend mode can be changed in given steps between 16 ... 960 seconds.

Softkey 3: ↓

Decrease the length of the time axis. The minimum value is 16 seconds.

Softkey 5: ?

Help text

Softkey 7: ↑

Increase the length of the time axis. The maximum adjustable value is 960 seconds.

## 3.4.6 Contrast

Main menu > View > Contrast

The contrast of the display can be changed. The recommended value under regular conditions is about 50 (Default setting).

Softkey 3: ↓

Fade the contrast to dark. The minimum values is 0.

Softkey 4: Invert display

Invert the contrast of the screen, that means background dark and font bright.

Softkey 5: ?

Help text

Softkey 7: ↑

Fade the contrast to light. The maximum value is 99.

If by accident the display has been set too bright or too dark so that it can not be read off, this may be changed as follows:

Switch off the PhoenixXL and turn it on again. During the run-up phase press the key no. 3 or 7 so long until the display can be read properly again. This setting is saved to the EPROM only after confirming this through the contrast menu. If this setting is not confirmed, the former setting will be applied after switching on the instrument on again.

## 3.4.7 Background in Stand-by

Main menu > View > Background in Stand-by

The internal background leak rate can be displayed in Stand-by mode or not. The default setting is OFF.

Softkey 3: Off

The background leak rate will not be shown.

Softkey 5: ?

Help text.

Softkey 7: ON

The background leak rate will be shown.

The internal background is generated by residual gas (e. g. helium) that has not been pumped away yet. Sources for residual gas are air or absorbed gases from the inner surfaces of the PhoeniXL. This internal background will never disappear totally. Very clean systems which have been pumped for a long time will show a background in the  $10^{-11}$  mbar l/s range. Under normal conditions the background level is in the  $10^{-10}$  mbar l/s or low  $10^{-9}$  mbar l/s range.

When pressing START the current internal background is subtracted from all further measured signals automatically. Thus it is made sure that only the net leak rate from the part under test is measured.

When switched to Stand-by / Vent again a new internal background is calculated after 25 s. The updated value is underlined. This means that if you press START when the value is underlined, the actual background signal will be subtracted. If you press START when the value is not underlined, the old background signal from the last Stand-by will be subtracted.

## 3.4.8 Lower display limit

Main menu > View > Lower display limit

This mode limits the lower detection limit of the measured leak rate. This is valid for vacuum mode only.

Softkey 3, 7: ↑ ↓

Changing of the lower detection limit between  $1 \cdot 10^{-9}$  and  $1 \cdot 10^{-12}$  mbar/l/s.

The lower limit for the PhoeniXL<sup>300 dry</sup> ranges between  $1 \cdot 10^{-9}$  and  $1 \cdot 10^{-11}$  mbar/l/s.

Softkey 5: ?

Help text

# Operation

## 3.5 Mode

Main menu > Mode

The mode menu Fig.25 enables the submenu to select the different working modes.

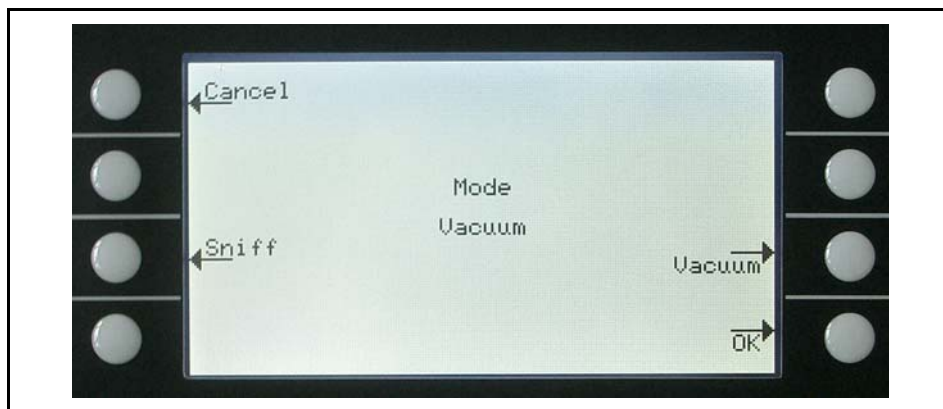


Fig. 26 Display:Mode menu

Explanation to Fig.25:

Key No.	Name	Description
1	Cancel	Return to the main menu without any changes of the present settings.
3	Sniff	The sniffer mode will be used.
7	Vacuum	The vacuum mode will be used.
8	OK	Save the settings and return to the previous menu.

## 3.6 Trigger & Alarms

Main menu > Trigger & Alarms

The trigger levels, the volume of the loudspeaker and the units of leak rates and pressures can be set in this menu Fig.26.

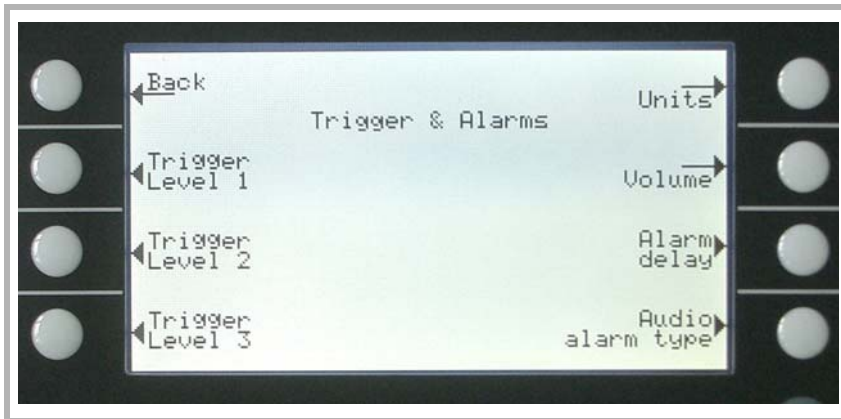


Fig. 27 Display: Trigger & Alarms Menu

Explanation for Fig.26:

Key No.	Name	Description
1	Back	Return to the main menu.
2	Trigger level 1	Definition of Trigger level 1. Chapter 3.6.1
3	Trigger level 2	Definition of Trigger level 2. Chapter 3.6.2
4	Trigger level 3	Definition of Trigger level 2. Chapter 3.6.3
5	Units	Selection of leak rate and pressure units. Refer to Chapter 3.6.4
6	Volume	Refer to Chapter 3.6.5
7	Alarm delay	Refer to Chapter 3.6.6
8	Audio alarm type	Choice of different alarm types. Refer to Chapter 3.6.7

### 3.6.1 Trigger Level 1

Main menu > Trigger & Alarms > Trigger level 1

The value of the first trigger level can be set. See Numerical entries for the description of the entry.

Trigger 1, 2 and Trigger 3 are programmable switching thresholds. When these thresholds will be exceeded the PhoenixXL reacts as follows:

Display

In the status line of the display the signs for Trigger 1, 2 and Trigger 3 are displayed inverted if the leak rate exceeds (becomes higher than) the programmed value. (see Fig.10)

# Operation

## Relay Output

The trigger-relais of the digital out switches. Please refer to Chapter 3.3 Digital out, for further details.

## Alarm/Loudspeaker

Additionally Trigger level 1 defines at which level the various alarm types react (See Chapter 3.6.7)

### 3.6.2 Trigger Level 2

Main menu > Trigger & Alarms > Trigger level 2

The value of the second trigger level can be set. Please refer to Numerical entries for the description of the entry.

If Trigger 2 is exceeded the corresponding relay will switch. This is also indicated at the display (see Ch. 3.6.1).

### 3.6.3 Trigger Level 3

Main menu > Trigger & Alarms > Trigger level 3

The value of the third trigger level can be set. Please refer to Numerical entries for the description of the entry.

If Trigger 3 is exceeded the corresponding relay will switch. This is also indicated at the display (see Ch.3.6.1).

### 3.6.4 Units

Main menu > Trigger & Alarms > Units

The preferred leak rate unit can be selected. There is the choice of 4 (mbar, Pa, Torr, atm) pressure units and 5 leak rate units (mbar l/s, Pa m<sup>3</sup>/s, Torr l/s, atm cc/s, s ft<sup>3</sup>/yr).

In Sniff mode the following measuring units are selectable: ppm, g/a eq (helium leak rate is equivalent with leak rate R134a), oz/yr eq (helium leak rate is equivalent with leak rate R134a).

Softkey 2: ↑

Scroll up to select a pressure unit.

Softkey 3: ↓

Scroll down to select a pressure unit.

Softkey 6: ↑

Scroll up to select a leak rate unit.

Softkey 7: ↓

Scroll down to select a leak rate unit.

## 3.6.5 Volume

Main menu > Trigger & Alarms > Volume

The minimum loudness and the actual volume of the loudspeaker can be adjusted.

The minimum loudness is the minimum speaker volume that cannot be exceeded to even lower values. Thus it is avoided that the actual volume is accidentally adjusted to a value that is below the noise level of the environment.

The actual volume can be adjusted between 15 (maximum) and the value defined as minimum loudness.

Softkey 2: ↓

Decrease the minimum loudness. The minimum value is 0.

Softkey 3: ↓

Decrease the actual volume. The minimum value is limited by the minimum volume.

Softkey 4: Beep off / Beep on

Softkey 5: ?

Help text.

Softkey 6: ↑

Increase the minimum volume. The maximum value is 15.

Softkey 7: ↑

Increase the regular volume. The maximum value is 15.

## 3.6.6 Alarm delay

Main menu > Trigger & Alarms > Alarm delay

In some applications (for instance during pump down in a „chamber test system“) it might be necessary to block an alarm for some time after pressing START.

This delay time of the alarm can be changed.

Softkey 3: ↓

Decrease the delay time. The minimum value is 0 seconds.

Softkey 5: ?

Help text.

Softkey 7: ↑

Increase the delay time. The maximum value is 10 minutes up to infinity.

After pressing START the loudspeaker is activated as soon as the leak rate drops below trigger level 1 or after the entered alarm delay time has elapsed. This setting is only active for the audio alarm types SETPOINT and TRIGGER ALARM (See chapter 3.6.7).

# Operation

## 3.6.7 Audio alarm type

Main menu > Trigger & Alarms > Audio alarm type

The audio alarm type can be chosen.

Softkey 2: Pinpoint

This function is for localization of a known leak rate value.

Softkey 3: Leak rate prop.

The sound will be proportional to the leak rate signal.

Softkey 5: ?

Help text

Softkey 6: Setpoint

The sound will be proportional to the leak rate signal only if trigger 1 is exceeded.

Softkey 7: Trigger alarm

An alarm sounds when the trigger 1 is exceeded.

### Pinpoint

Pinpoint

The tone of the acoustical signal changes its frequency only in a Leakrate-window Fig.28 which ranges from one decade below the Trigger level 1 up to one decade above the Trigger level 1. Below the window the tone is constantly low, above the window it is constantly high.

Example: The Trigger level 1 is  $4 \cdot 10^{-7}$  mbar l/s. So the window where the tone changes reaches from  $4 \cdot 10^{-8}$  mbar l/s up to  $4 \cdot 10^{-6}$  mbar l/s.

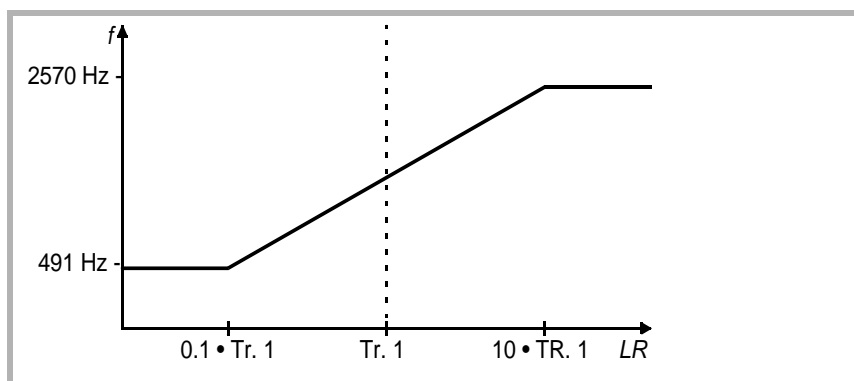


Fig. 28 Pinpoint: Change of the frequency in the leak rate window (TR1=Triggerlevel 1)

### Leak rate prop.

Leak rate prop.

The frequency of the acoustic output is proportional to the reading on the bar-graph display. The frequency ranges from 300 Hz to 3300 Hz. Please refer to Chapter 3.4.3 for the definition of the number of decades.



## Setpoint

The tone is off as long as the leak rate is below the Trigger level 1. Above Trigger 1 the tone varies proportional to the leak rate Fig.29.

## Setpoint

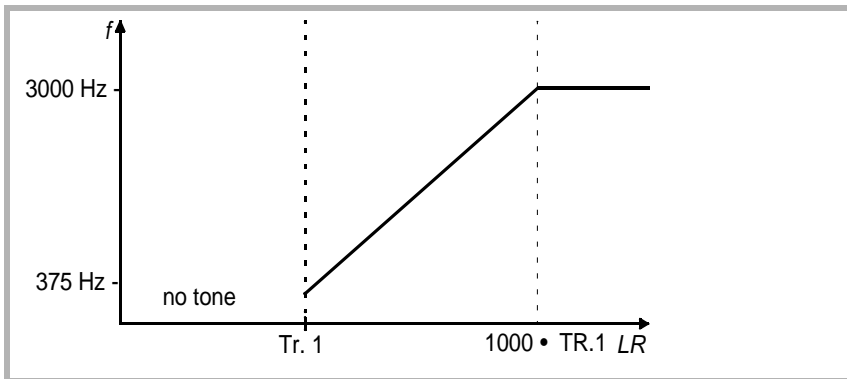


Fig. 29 Setpoint: Change of the frequency above the triggerlevel 1 (TR1= Triggerlevel 1)

## Trigger alarm

As soon as the leak rate increases above trigger level 1, a multi-tone signal is generated. The tone does not vary with the leak rate.

## Trigger Alarm

## 3.7 Calibration

Main menu > Calibration

In the menu Calibration Fig.29 the selection between internal and external calibration can be chosen.

Please refer to Chapter 3.11 Calibration for a detailed description of the calibration.

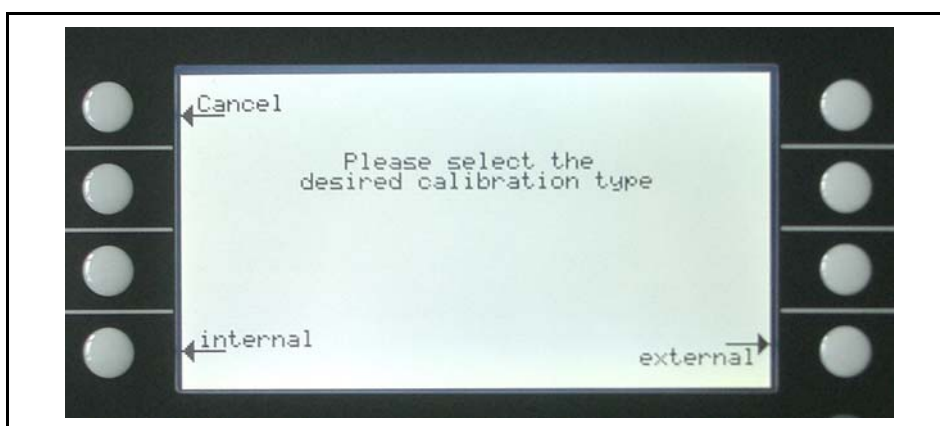


Fig. 30 Display:Calibration menu

## 3.8 Settings

Main menu > Settings

This menu Fig.30 allows to observe and to change the adjustment of the internal machine settings.

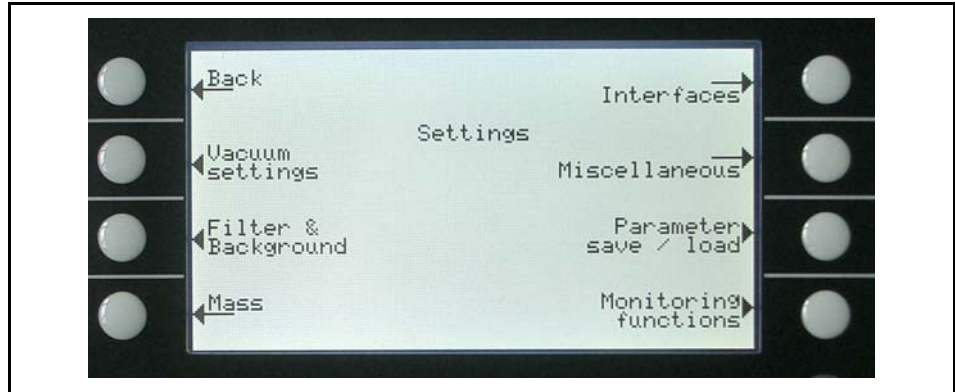


Fig. 31 Display:Settings menu

Explanation for Fig.30:

Key No.	Name	Description
1	Back	Return to the main menu.
2	Vacuum settings	Settings of vacuum system related functions. See chapter 3.8.1
3	Filter & Background	See Chapter 3.8.2
4	Mass	Switching between Helium and Hydrogen. See Chapter 3.8.3
5	Interfaces	Settings for electrical communication and selection for control location See Chapter 3.3 for detailed information.
6	Miscellaneous	Settings like date or time. See Chapter 3.8.5
7	Parameter save / load	Store and load sets of parameters. See Chapter 3.8.6
8	Monitoring functions	Choose functions of protection of the PhoenixXL in this mode. See Chapter 3.8.7

## 3.8.1 Vacuum settings

Main menu > Settings > Vacuum settings

This menu allows to observe and to change the settings belonging to the vacuum system.

Softkey 3: Vent delay

Definition of delay time until the PhoenixXL is vented

Softkey 4: Vacuum ranges

Selection of the vacuum working modes

Softkey 5: Partial flow setup/Forepump setup

Selection of partial flow mode and forepump type

Softkey 6: Sniffer factor

Setting for the sniffer factor

Softkey 7: Machine factor

Setting for the machine factor

Softkey 8: Leak rate internal test leak

Setting for the internal test leak

The menu for the PhoenixXL<sup>300 dry</sup> version allows the following vacuum settings which varies to the PhoenixXL<sup>300</sup>:

Softkey 2: Automatic purge

Definition of automatic purge function in stand-by

Softkey 3: Vent delay

Definition of delay time until the PhoenixXL is vented

Softkey 4: Vacuum ranges

Selection of the vacuum working modes

Softkey 6: Sniffer factor

Setting for the sniffer factor

Softkey 7: Machine factor

Setting for the machine factor

Softkey 8: Leak rate internal test leak

Setting for the internal test leak

## Vacuum settings PhoenixXL<sup>300</sup>

## Vacuum settings PhoenixXL<sup>300 dry</sup>

# Operation

## **Vacuum settings PhoeniXL<sup>300</sup> Modul**

The menu for the PhoeniXL<sup>300</sup> Modul version allows the following vacuum settings which varies to the PhoeniXL<sup>300</sup>:

Softkey 2: Automatic purge

Definition of automatic purge function in stand-by

Softkey 3: Vent delay

Definition of delay time until the PhoeniXL is vented

Softkey 4: Vacuum ranges

Selection of the vacuum working modes

Softkey 5: Partial flow setup/Forepump setup

Selection of partial flow mode and forepump type

Softkey 6: Sniffer factor

Setting for the sniffer factor

Softkey 7: Machine factor

Setting for the machine factor

Softkey 8: Leak rate internal test leak

Setting for the internal test leak

## **Automatic purge**

Automatic purge

Main menu > Settings > Vacuum settings > Automatic purge

Through this menu is it possible to start automatic purge for 20 seconds automatically.

This setting is only possible for the PhoeniXL<sup>300</sup> Modul (refer to vacuum settings PhoeniXL<sup>300</sup> Modul)

Softkey 3: Off

The function automatic purge is off.

Softkey 6: ON

The function automatic purge is on. When changing from measure to stand-by the forevacuum pump will be purged automatically for 20 seconds.

## **Vent delay**

Vent delay

Main menu > Settings > Vacuum settings > Vent delay

Through this menu item it is possible to define the delay time until the inlet port is vented when operating the STOP button. When the STOP button is pressed for a period of time which is shorter than the delay time specified here, the PhoeniXL will just change to Stand-by mode.

When the STOP button is pressed for a period of time which is longer than the

delay time specified here, the PhoenixXL will vent the inlet port.

Softkey 2: Immediately

The inlet port will be vented immediately after pressing the STOP button.

Softkey 3: After 1 second

The inlet port will be vented with a time delay of 1 second.

Softkey 4: After 1.5 seconds

The inlet port will be vented with a time delay of 1.5 second.

Softkey 5: ?

Help

Softkey 6: after 2 seconds

The inlet port will be vented with a time delay of 2 second.

Softkey 7: No venting

The inlet port cannot be vented with the STOP button.

Vacuum ranges

Main menu > Settings > Vacuum settings > Vacuum ranges

With this menu you can adjust different modes concerning the activity of leak detection. This setting is only active in vacuum mode (see Chapter 3.5).

Softkey No. 2: GROSS only

In this mode the PhoenixXL remains at the inlet flange after falling below 15 mbar. When the pressure is increasing over 15 mbar the PhoenixXL switches automatically into evacuation mode. The smallest detectable leak rate is  $1 \cdot 10^{-8}$  mbar/s.

Softkey No. 3: FINE only

In this mode the PhoenixXL remains after falling below 0,2 mbar at the inlet flange. Valve V1 will be closed. When the pressure at the inlet flange is increasing > 0.2 mbar the PhoenixXL switches immediately into evacuation mode. The advantage of FINE only is that while this mode is running no valve will switch and the PhoenixXL has a high pumping speed.

Softkey No. 4: GROSS only 920 Hz

In this mode the turbo pump of the PhoenixXL works at reduced speed. Therefore the smallest detectable leak rate is  $3 \cdot 10^{-9}$  mbar/s. This function can be used to replace the L200 in Gross only mode equivalent

Taste No. 5: ?

Help text

Softkey No.6 Partial flow enable

**Vacuum ranges**

**PhoenixXL<sup>300</sup>/PhoenixXL<sup>300</sup>**

**Modul**

# Operation

If the PhoeniXL<sup>300</sup> or the PhoeniXL<sup>300</sup> Modul is used with a partial flow system this vacuum mode must be enabled before. The setup for the partial flow mode is described in partial flow setup

Softkey No. 7: Normal (default settings)

This is the default setting. The activity runs as explained in Chapter 1.1.1.

## **Vacuum ranges PhoeniXL<sup>300</sup> dry**

The PhoeniXL<sup>300</sup> dry allows the vacuum ranges as follows:

Softkey No. 2: GROSS only

In this mode the PhoeniXL<sup>300</sup> dry remains at the inlet flange after falling below 15 mbar. When the pressure is increasing over 15 mbar the PhoeniXL<sup>300</sup> dry switches automatically into evacuation mode. The smallest detectable leak rate is  $1 \cdot 10^{-8}$  mbarl/s.

Softkey No. 3: FINE only

In this mode the PhoeniXL<sup>300</sup> dry remains after falling below 0,1 mbar at the inlet flange . Valve V1 will be closed. When the pressure at the inlet flange is increasing  $> 0.1$  mbar the PhoeniXL<sup>300</sup> dry switches immediately into evacuation mode. The advantage of FINE only is that while this mode is running no valve will switch and the leak detector has a high pumping speed.

Softkey No. 4: GROSS only 920 Hz

In this mode the turbo pump of the PhoeniXL works at reduced speed. Therefore the smallest detectable leak rate is  $3 \cdot 10^{-9}$  mbarl/s. This function can be used to replace the L200 in Gross only mode equivalent

Taste No. 5: ?

Help text

Softkey No. 6: Precision

In this mode the PhoeniXL<sup>300</sup> dry achieves the maximum sensitivity.

Softkey No. 7: Normal (default settings)

This is the default setting. The activity runs through the vacuum ranges from GROSS to FINE.

## **Partial flow setup/Pump setup**

Partial flow setup/Pump setup

Main menu > Seetings > Vacuum settings > Partial flow setup/Pump setup

Through this menu item the settings for a use of a partial flow system can be set. In the partial flow mode the test sample is additionally evacuated by an auxiliary pump, which offers the advantage of measuring from 1000 mbar on.

## **Enable partial flow mode**

Before setting up the parameters the partial flow mode has to be enabled in the main menu under Settings > Vacuum settings > Vacuum ranges with softkey no. 6 partial flow enable and confirm with the soft key OK.

This setting is not possible for the PhoeniXL<sup>300</sup> dry version.

The PhoeniXL<sup>300</sup> Modul allows additionally the settings for the forepump (oil sealed or dry) and selectable pumping speed for the forepump.

Partial flow setup for the PhoeniXL<sup>300</sup>.

## **Partial flow setup PhoeniXL<sup>300</sup>**

Softkey 2: ↓

The entry of the nominal pumping speed of the partial flow pump can be decreased. The minimum pumping speed is 4m<sup>3</sup>/h.

Softkey 3: ↓

Decrease Quick-pump time. The quick-pump time defines whether and how long valve V10 of the partial flow block is opened. (For detailed descriptions please refer to the operating instructions "GA 10.277" of the partial flow system.)

At  $T_Q = 0$  seconds valve V10 will not be open for the time being. This selection is recommended for large volumes and dirty objects.

At  $T_Q = \text{endless}$  valve V10 will open when pressing start. At an inlet pressure  $p_1 < 15$  mbar the PhoeniXL switches to measurement mode and display leak rates. This is recommended if it is acceptable to wait for a while until measurement mode is reached and leak rate reading at high inlet pressures are not needed.

With times between 0 and endless V10 is opened and the leak detector tries to reach a inlet pressure of less than 15 mbar within this time  $T_Q$ . When  $T_Q$  has gone by V10 is closed and the PhoeniXL switches to measurement mode (Helium/Hydrogen comes through the orifice of the partial flow valve block).

Softkey 4: Changing behavior of the valve V8 of the partial flow system

Closed: In partial flow mode valve V8 (see GA.10.277 partial flow system) switches dependent on the inlet pressure

Open: Valve V8 stays open, even when the inlet pressure is low enough

Softkey 5: ?

Help text.

Softkey 6: ↑

Increase the pumping speed of the partial flow pump. The entry of the nominal pumping speed of the partial flow pump can be increased. The maximum pumping speed is 80 m<sup>3</sup>/h. Default setting is 25 m<sup>3</sup>/h.

Softkey 7: ↑

Increase of the quick-pump time up to the maximum.

# Operation

## **Partial flow setup PhoeniXL<sup>300</sup> Modul**

Partial flow setup / Pump configuration for the PhoeniXL<sup>300</sup> Modul.

Before setting up the parameters the partial flow mode has to be enabled in the main menu under Settings > Vacuum settings > Vacuum ranges with softkey no. 6 partial flow enable and confirm with the soft key OK.

Softkey 2: Pump setup

Setting for the forepump if the PhoeniXL<sup>300</sup> Modul is operated with a partial flow system.

Softkey 7: Partial flow setup

Options for setting up the partial flow system.

## **Forepump setup PhoeniXL<sup>300</sup> Modul**

Forepump setup for PhoeniXL<sup>300</sup> Modul

Softkey 2: ↓

The entry of the nominal pumping speed of the partial flow pump can be decreased. The minimum pumping speed is 4 m<sup>3</sup>/h.

Softkey 3: Fore pump type

The PhoeniXL<sup>300</sup> Modul with partial flow system can be operated with a dry fore pump (for ex. Scroll pump) or a wet fore pump (oil sealed) .

This key is for choosing a dry (Scroll, piston) fore vacuum pump.

Softkey 5: ?

Help text

Softkey 6: ↑

The entry of the nominal pumping speed of the partial flow pump can be increased. The maximum pumping speed is 80m<sup>3</sup>/h.

Softkey 7: Fore pump type

The PhoeniXL<sup>300</sup> Modul with partial flow system can be operated with a dry (for ex. Scroll pump) fore pump or a wet pump (oil sealed).

This key is for choosing a wet (oil sealed) fore vacuum pump.



Partial flow setup for the PhoeniXL<sup>300 Modul</sup>

Softkey 2: ↓

The entry of the nominal pumping speed of the partial flow pump can be decreased. The minimum pumping speed is 4m<sup>3</sup>/h.

Softkey 3: ↓

Decrease Quick-pump time. The quick-pump time defines whether and how long valve V10 of the partial flow block is opened. (For detailed descriptions please refer to the operating instructions "GA 10.277" of the partial flow system.)

At  $T_Q = 0$  seconds valve V10 will not be open for the time being. This selection is recommended for large volumes and dirty objects.

At  $T_Q = \text{endless}$  valve V10 will open when pressing start. At an inlet pressure  $p_1 < 15$  mbar the PhoeniXL switches to measurement mode and display leak rates. This is recommended if it is acceptable to wait for a while until measurement mode is reached and leak rate reading at high inlet pressures are not needed.

With times between 0 and endless V10 is opened and the leak detector tries to reach a inlet pressure of less than 15 mbar within this time  $T_Q$ . When  $T_Q$  has gone by V10 is closed and the PhoeniXL switches to measurement mode (Helium/Hydrogen comes through the orifice of the partial flow valve block).

Softkey 4: Changing behavior of the valve V8 of the partial flow system

Closed: In partial flow mode valve V8 (see GA.10.277 partial flow system) switches dependent on the inlet pressure

Open: Valve V8 stays open, even when the inlet pressure is low enough

Softkey 5: ?

Help text.

Softkey 6: ↑

Increase the pumping speed of the partial flow pump. The entry of the nominal pumping speed of the partial flow pump can be increased. The maximum pumping speed is 80 m<sup>3</sup>/h. Default setting is 25 m<sup>3</sup>/h.

Softkey 7: ↑

Increase of the quick-pump time up to the maximum.

Sniffer factor

Main menu > Settings > Vacuum settings > Sniffer factor

The sniffer factor takes into account, after an internal calibration, an external partial flow ratio, for example the Quicktest or a auxiliary pump with sniffer line connected via teepeace to the leak detector.

During an internal calibration the internal sensitivity of the PhoeniXL is calibrated. The calculated number is multiplied with the sniffer factor and the result is the sniffer factor for this application.

## Partial flow setup PhoeniXL<sup>300 Modul</sup>

## Sniffer factor

# Operation

Softkey 4: Set default value

Setting between the default value 1 for the sniffer line SL300 or the correction factor (1000) for the use of the Quicktest.

## Quicktest setting

For the use of a PhoeniXL with a Quicktest the setting for the Quicktest under Main menu > Settings > Monitoring functions > Pressure limits for sniff mode has to be chosen.

## Machine factor

Machine factor

Main menu > Settings > Vacuum settings > Machine factor

The machine factor takes into account, after an internal calibration, the ratio between the effective helium pumping rate of the PhoeniXL and the pumps in the pump system in measurement mode as well as the measurement mode used (GROSS/FINE). Based on an internal calibration only, all measured leak rate would be measured too small. The measured leak rate is multiplied with the machine factor and the result is displayed. This factor is only used for vacuum measurement modes (not for sniff mode). See Numerical entries for the description of the entry.

Since the effective pumping rates are usually not known due to the conductances of the vacuum connections, we recommend the following indirect measurement:

1. Set up the PhoeniXL for operation
2. First an internal calibration must be performed with machine factor = 1 (Refer to Chapter 7)
3. Connect an external calibrated leak (for example  $2.0 \cdot 10^{-6}$  mbar l/s) to the test chamber
4. Measure leak rate of the external test leak, for example  $5.0 \cdot 10^{-8}$  mbar l/s
5. The machine factor is the quotient of the desired value and the actual value.  
Desired value:  $2.0 \cdot 10^{-6}$  mbar l/s /  $5.0 \cdot 10^{-8}$  mbar l/s = machine factor 40
6. Set the acquired value in the menu point
7. Calibrate again internally so that the machine factor is taken over
8. All signals that are measured in further measurements are multiplied by factor 40 and then shown in the display

## Leak rate internal test leak

Leak rate internal test leak

Main menu > Settings > Vacuum settings > Leak rate internal test leak

The value of the internal test leak can be set. See Numerical entries for the description of the entry.

Normally there is no reason to edit the leak rate of the internal test leak besides after a change or a recertification of the internal test leak. A wrong leak rate of the internal test leak will lead to wrong leak rate readings!

## Purge in measurement

Purge in measurement

Main menu > Settings > Vacuum settings > Purge in measurement

This function is only possible for the PhoeniXL<sup>300</sup> dry. In vacuum mode the fore

vacuum pump is purged constantly to avoid helium accumulation. If the use of the PhoenixL<sup>300 dry</sup> needs the possibility to shut off this function, for ex. because of a high helium background in the ambient and no option to connect a hose line with fresh air to the gas ballast port, this function can be shut off here.

If you disable the purge mode in measurement some specifications as minimum detectable leak rate, internal background or time constant may degrade.

Softkey 3: Disable

The fore vacuum pump is purged constantly during the measurement mode to avoid helium accumulation. This setting is the preferred setting and should be used.

Softkey 7: Enable

This setting enables the purging during measuring mode, all disadvantages listed above may occur. It is recommended to use this setting only in special applications.

## 3.8.2 Filter & Background

Main menu > Settings > Filter & Background

The type of leak rate filters and background condition can be chosen. The default setting for the leak rate filter is auto.

Softkey 2: Calculate inlet area background

This function is for assignment of the background in the inlet area.

Softkey 3: Background suppression

Setting of the internal condition for the background.

Softkey 7: Leak rate filter

The type of leak rate filter can be chosen.

The PhoenixL300 dry allows the following settings

Softkey 3: Background suppression

Setting of the internal condition for the background.

Softkey 7: Leak rate filter

The type of leak rate filter can be chosen.

Calculate inlet area background

Main menu > Settings > Filter & Background > Calculate inlet area background

This function calculates the background of the inlet area. The PhoenixL has to be in the following conditions:

1. Mode vacuum
2. Mode VENTED (min. 25 seconds)

### **Calculate inlet area background**

# Operation

3. Inlet port blanked off
4. Minimum 20 minutes since power on

After starting this function the leak detector starts with evacuating the inlet area. Earliest two minutes after start the measured value can be accepted as „Background inlet area“. This value will be saved.

## **Background suppression**

Background suppression

Main menu > Settings > Filter & Background > Background suppression

Softkey 3: Off

Deactivation of the offset function. Under certain circumstances a positive leak rate can be displayed. This setting should be used by experienced users only because of the high possibilities of measuring wrong leak rates.

Softkey 6: inlet area

Additionally to the internal offset (background) the offset of the inlet area will be subtracted. This function for the inlet area is only possible in stand-by mode, therefore this value has to be determined with the menu point „Calculate inlet area background“.

Softkey 7: internal only (default)

With start the PhoenixL defines the internal offset (background) and subtracts this value from the leak rate signal, so that just the leak rate is shown in the display. This setting should be used as standard setting for the PhoenixL.

## **Leak rate filter**

Leak rate filter

Main menu > > Filter & Background > Leak rate filter

Softkey 3: Fixed

A leak rate filter with a fixed time constant is used

Softkey 6: Auto

Auto makes sure, that the signals are averaged in optimized time intervals, based on the leak rate intensity. Auto also eliminates noise peaks that are not related to leak rate signals and provides extraordinary short response times for low leak rate signals. This setting should be used for the PhoenixL.

### 3.8.3 Mass

Main menu > Settings > Mass

The requested mass of the measured gas can be selected. The PhoeniXL must be in stand-by mode for changing to another mass.

Softkey 2: H<sub>2</sub> (2 amu)

Hydrogen with the mass of 2 amu will be measured.

Softkey 3: <sup>3</sup>He (3 amu)

Isotop of helium with the mass of 3 amu will be measured.

Softkey 7: <sup>4</sup>He (4 amu)

Helium with the mass of 4 amu will be measured. Default setting

After changing the mass a calibration for the selected mass should be done. See chapter 3.11.

### 3.8.4 Miscellaneous (Language, Calibration request, Service interval...)

Main menu > Settings > Miscellaneous

The actual date and time, the preferred language and the mains frequency can be set in this submenu.

Softkey 2: Time & Date

Setting of time and date

Softkey 3: Language

Selection of the language

Softkey 4: Calibration request

Setting if the PhoeniXL should remind for a calibration

Softkey 5: Service interval fore pump

Setting service time interval fore pump

Softkey 7: Service interval exhaust oil filter

Setting service time interval exhaust oil filter

Softkey 8: Service message exhaust oil filter

Setting service message exhaust oil filter

Time&Date

Main menu > Settings > Miscellaneous > Time &Date

Time and date can be changed on two subsequent pages. Please refer to Numerical entries for the description of the entry.

#### Time & Date

# Operation

## Language

Language

Main menu > Settings > Miscellaneous > Language

The preferred language can be selected. The default setting is English. The following languages can be chosen: English, German, French, Italian, Spanish, Chinese, Japanese, Polish, Russian

Softkey 3: ↓

Scrolling down to select the language. Press OK to confirm the selected language.

Softkey 7: ↑

Scrolling up to select the language. Press OK to confirm the selected language.

## Calibration request

Calibration request

Main menu > Settings > Miscellaneous > Calibration request

It can be selected whether the operator is reminded of the fact that a calibration may have become necessary or not. The default value is off.

Softkey 3: Off

The calibration request will be switched off.

Softkey 5: ?

Help text

Softkey 7: ON

The calibration request will be switched on.

If the calibration request is switched on, a corresponding message will appear when 30 minutes have elapsed after power on or if the temperature of the PhoenixL has changed by more than 5 °C (9 °F) since the last calibration.

## Service interval fore pump

Service interval fore pump

Main menu > Settings > Miscellaneous > Service interval fore pump

Setting for the service interval of the fore pump. This setting depends on the use of the PhoenixL but latest after 4000 running hours or one year the oil in the pump should be controlled. See also manual for the Trivac D2,5E which is included in the document folder. See chapter 5.4.3 also.

This setting is possible for the PhoenixL<sup>300</sup> only.

Softkey 3: ∅

The time for the service interval can be decreased in steps of 500 hours.

Softkey 7: ;

The time for the service interval can be increased in steps of 500 hours to the upper limit of 4000 hours.

## Service interval exhaust oil filter

Main menu > Settings > Miscellaneous > Service interval exhaust oil filter

Here you can enter the service interval for the exhaust oil filter. This setting is only possible for the PhoeniXL<sup>300</sup>. This setting depends on the use and application of your PhoeniXL and therefore no recommendations can be given (see chap. maintenance).

Softkey 3: ↓

Decrease of the service interval steps of within 500 hours. The limit is 1000 hours

Softkey 5: ?

Help text

Softkey 7: ↑

Increase of the service interval within steps of 500 hours. The limit is 4000 hours.

## **Service interval exhaust oil filter**

## Service message exhaust oil filter

Main menu > Settings > Miscellaneous > Service message exhaust oil filter

The exhaust oil filter must be maintained at regular intervals to ensure the correct function of the PhoeniXL. If the service message is activated, the PhoeniXL reminds you of the required maintenance.

This setting is only possible for the PhoeniXL<sup>300</sup>.

If the service messages are ignored and the exhaust is not replaced a risk for overheating the pump motor exists.

Softkey 3: ↓

The service message for the oil filter can be reduced to the min. 1000 hours

Softkey 7: ↑

The service message for the oil filter can be increased up to the max. 4000 hours.

## **Service message exhaust oil filter**

# Operation

## 3.8.5 Parameter save / load

Main menu > Settings > Parameter save load

Enables to save and load individual settings or reload the default settings.

Softkey 2 to 4: The names of the current values can be saved under a free selectable name. The saving of 3 different sets is possible.

Softkey 5: load default values  
The factory settings will be loaded again.

Softkey 6 to 8: One of three saved parameter sets can be loaded.

### Load parameter set

Load parameter set

Main menu > Settings > Parameter save load > Load parameter set

Save the current parameter settings.

Softkey 4: Edit a file name  
Rename the parameter set.

Softkey 8: Save  
Save the edited parameter set.

### Save parameter set

Save parameter set

Main menu > Settings > Parameter save load > Save parameter set

The settings of the selected saved parameter set will be displayed and can be reloaded.

Softkey 6: ↑  
Upward to the previous screen.

Softkey 7: ↓  
Downward to the next screen.

## 3.8.6 Monitoring functions

Main menu > Settings > Monitoring functions

Softkey No. 6: Pressure limits for vacuum mode  
Setting for the pressure limits between evacuation, Gross and Fine mode.

Softkey No. 7: Pressure limits for sniff mode  
Definition of the upper and lower limit of the sniffer pressure

Softkey No. 8: Maximum evacuation time  
Settings for the gross leak measurement



Pressure limits for vacuum mode.

Main menu > Settings > Monitoring functions > Pressure limits for vacuum mode

With this function the default settings for the pressure limits EVAC - GROSS and FINE can be changed.

This might be necessary if other gases than air will be pumped by the PhoenixL. The pressure signal from the gas dependant inlet pressure (P1) will dump false signals. With changing the pressure limits this performance will be adjusted.

Softkey No. 2:     ↓

Decrease change over threshold EVAC-GROSS

Chosable between 15-3 mbar (Default value 15 mbar)

Softkey No. 3:     ↓

Decrease change over threshold GROSS-FINE

Chosable between 0,2-0,05 mbar (Default value 0,2 mbar). For the PhoenixL<sup>300 dry</sup> and the PhoenixL<sup>300 Modul</sup> the changeover is between 0,1-0,05 mbar (Default value 0,2 mbar).

Softkey No. 4     Adjustment for ARGON

Selection between air or Argon

Softkey No. 5:     ?

Help text

Softkey No. 6:     ↑

Increase change over threshold EVAC-GROSS

Chosable between 3 - 15 mbar

Softkey No. 7:     ↑

Increase change over threshold GROSS-FINE

Chosable between 0,05 - 0,2 mbar, respectively 0,05 - 0,1 mbar for PhoenixL<sup>300 dry</sup> and PhoenixL<sup>300 Modul</sup>

## Pressure limits for vacuum mode

Pressure limits for sniff mode

Main menu > Settings > Monitoring functions > Pressure limits for sniff mode

This function is automatically activated in sniff mode. The pressure limits define an upper and lower limit of the inlet pressure P1. If the pressure is not in this range error messages are generated:

P > upper limit: Capillary broken

P < lower limit: Flow through capillary too low (Capillary blocked)

Softkey No. 2:     ↓

Decreasing the maximum pressure, Upper limit is 0,15 mbar (default)

Softkey No. 3:     ↓

## Pressure limits for sniff mode

# Operation

Decreasing the minimum pressure

Softkey No. 4:     Setting for Quicktest

Setting for use with the Quicktest, upper limit is 0,05 mbar, lower limit 0 mbar.

Pushing the button again for default setting.

Softkey No. 6     ↑

Increasing the maximum pressure

Softkey No. 7:     ↑

Increase the minimum pressure, Lower limit is 0,05 mbar (default)

## Maximum evacuation time

Maximum evacuation time

Main menu > Settings > Monitoring functions > Maximum evacuation time

This menu item is used to define when the gross leak message is to occur. The gross leak detection process operates in two steps and the limits can be adapted as required.

This menu item is particularly useful in series testing under the same conditions at all times.

After pressing the start button the test sample is evacuated. If the pressure conditions ( $p_1 < 100$  mbar) are not attained, or if the pressure does not drop low enough within the periods of time specified here, the pumpdown process is terminated and the display will indicate a message (see Ch. Trouble shooting, W75 and W76).

The periods which are selected in each case depend firstly on the desired reaction time for the gross leak message, and secondly on the volume of the test sample and the effective pumping speed.

If the evacuation time was set to endless, the oil level of the mechanical pump should be checked more often.

Softkey No. 2:     ↓

Decreasing maximum evacuation time until  $p_1 < 100$  mbar. Within this period of time the inlet pressure at the test flange must have dropped below 100 mbar. The duration may be selected freely between 1 second and 9 minutes or can be set to endless. The default is 30 seconds.

Softkey No. 3:     ↓

Decreasing maximum time until measurement. Within the period of this time the status of measurement readiness must have been attained, i.e. the inlet pressure must have dropped below 15 mbar. The duration may be freely selected between 5 seconds and 30 minutes or can be set to endless.

Softkey No. 5:     ?

Help text

Softkey No. 6:     ↑

Increasing maximum evacuation time until  $p_1 < 100$  mbar

Softkey No. 7      ↑

Increasing maximum time until measurement.

## 3.9 Information

Main menu > Information

The Information Menu Fig.31 enables submenus to select different kinds of information belonging to the PhoeniXL.

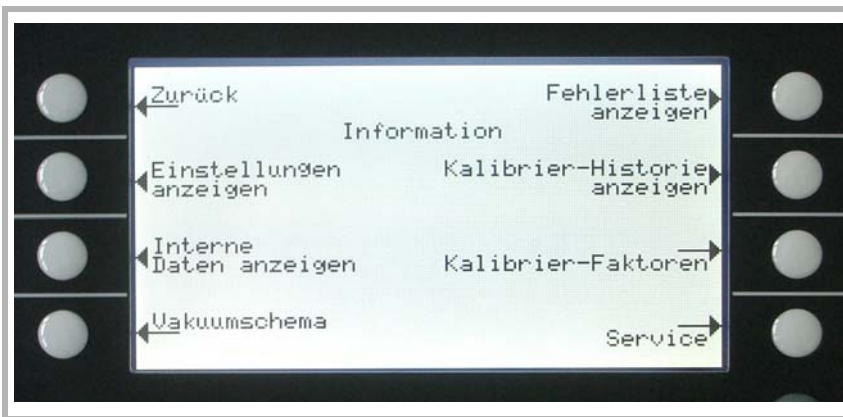


Fig. 32 Display: Information Menu

Softkey 2: View settings

The current settings will be displayed on 5 pages, e.g. trigger levels, test leak mass, date and time.

Softkey 3: View internal data

Information on measured internal data is provided on 10 screens.

Softkey 4: Vacuum diagram

The vacuum diagram of the PhoeniXL is shown. Here you can see which valves are open or closed momentarily. See chapter 4.1.1

Softkey 5: View error list

The list of occurred errors and warnings will be displayed. See chapter 8.2.

Softkey 6: Calibration history

The carried out calibrations will be listed.

Softkey 7: Calibration factors

The calibration factors for the different masses and the machine factor will be displayed.

Softkey 8: Service

# Operation

## 3.9.1 Service

Main menu > Information > Service

With the main menu special functions can be accomplished (e. g. manual switching of the valves). The access to the service menu is protected by a PIN. This PIN is not communicated with the delivery of the leak detector but after an adequate service training.

## 3.10 Access Control

Main menu > Access control

With this menu you can deny or allow access to specific functions of the PhoeniXL.



Fig. 33 Display: Access Control Menu

Softkey 3 Zero

Settings of the zero function

Softkey 4: Access to CAL function

Settings for restriction of the CAL function

Softkey 8: Change Menu-Pin

Access to menu pin can be restricted

### 3.10.1 Zero

Main menu > Access control > Zero

This setting enables (respectively disables) the ZERO button at the control panel. With „Zero at FINE“, the ZERO functions executes automatically as soon as the measuring range FINE is reached for the first time after START. In this mode the ZERO function also can be executed manually via the ZERO button.

Softkey 3: closed  
ZERO button disabled

Softkey 5: ?  
Help text

Softkey 6: Zero at FINE  
When reaching the FINE mode the ZERO function is started automatically.

Softkey 7: free  
Softkey ZERO is selectable. Default setting.

### **3.10.2 Access to CAL function**

Main menu > Access control > Access to CAL function

It can be selected whether the access to the calibration menu is restricted or not.

Softkey 3: Off

The calibration function is only available at the main menu. If the Menu-PIN (See Chapter 3.10.3) is activated you need this PIN to start a calibration. Default setting.

Softkey 5: ?  
Help text

Softkey 7: ON

The calibration function is available at the main menu and in Stand-by and the measure mode.

### **3.10.3 Change Menu-PIN**

Main menu > Access control > Change Menu-Pin

The access to the menu can be restricted by entering or changing the personal identification number (PIN). No PIN will be checked if 0000 is entered.

The default setting for the Pin is 0013.

Please refer to Numerical entries for the description of the entry.

## **3.11 Calibration**

### **3.11.1 Introduction**

The PhoenixXL can be calibrated in two different ways:

Internal calibration by means of a built-in test leak  
or

external calibration by means of an additional test leak which then is attached to the inlet port or the component under test.

During the calibration procedure the mass spectrometer is tuned to the maximum

# Operation

helium or hydrogen signal and this signal is referred to the known leak rate of the internal or external test leak. Although the PhoeniXL is a very stable instrument a calibration is recommended every day with heavy use, or before using the PhoeniXL from time to time, to make sure that ambient temperature changes or dirt or other impacts don't adulterate the measurements.

To get an optimized calibration the machine has to warm up at least 20 minutes before use, otherwise a warning will come up which might be ignored.

## **3.11.2 The calibration routines**

The calibration routines can be started by pressing button CAL (Softkey 5) via 3 different locations:

main menu (Fig.23)

Stand-by mode (Fig.12)

measurement mode (Fig.10)

The access via Stand-by mode or measurement mode can possibly be blocked (see Chapter 3.10.2). In this case the softkey is not labeled. Default: Access on.

Once the calibration mode is activated the user must choose between an internal and an external calibration. Please press the corresponding Soft Key (Fig.29).

A calibration may be terminated at any time by pressing the Stop button or using the Soft Key no. 1 (Cancel) Fig.34.

## **3.11.3 Internal Calibration**

Mass 4 must be selected (Default setting)

Press Softkey nr. 4 Fig.29 to start the calibration. Once this procedure is started the entire procedure is performed automatically. At the end (after about 25 s) a visual and audio signal is released. Thereafter the unit is ready for further use.

## 3.11.4 External Calibration

For an external calibration a test leak has to be attached to the part under test or the inlet port directly depending on the application.

After External calibration ( Fig.29, Soft Key no. 8) has been chosen the following messages are displayed and the described actions are required:

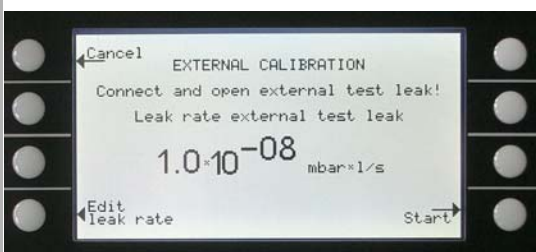
	<p>Make sure that the correct mass is selected. Make sure that the test leak is connected and opened.</p>
<p>Check the leak rate printed on the test leak and compare it with the leak rate at the display. If the leak rates are not identical press Edit leak rate (Soft Key no. 4) and correct the value. If the leak rates are okay press START (Soft Key no. 8).</p>	

Fig. 34 Display: External Calibration, Step 1


	<p>No action required.</p>
---	----------------------------

Fig. 35 Display: External Calibration, Step 2


	<p>The bargraph display shows a signal which must not vary much. If so please press OK (Soft Key no. 8).</p>
---	--

Fig. 36 Display: External Calibration, Step 3

# Operation

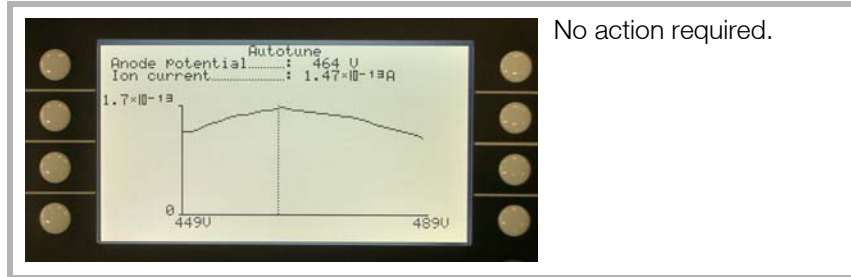


Fig. 37 Display: External Calibration, Step 4

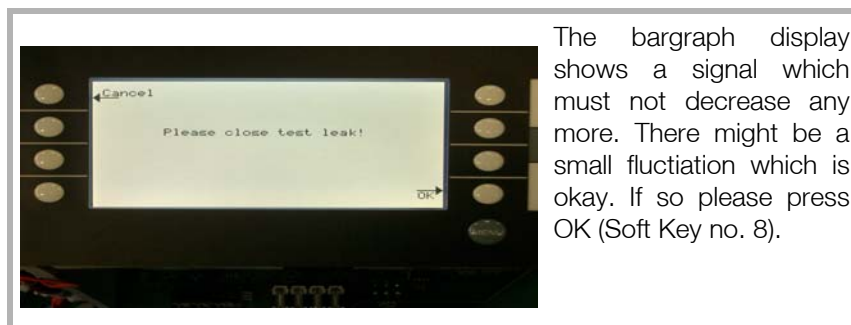


Fig. 38 Display: External Calibration, Step 5

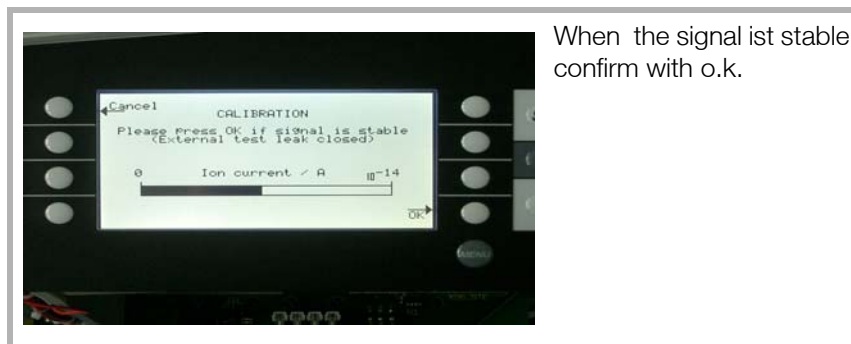


Fig. 39 Display: External Calibration, Step 6

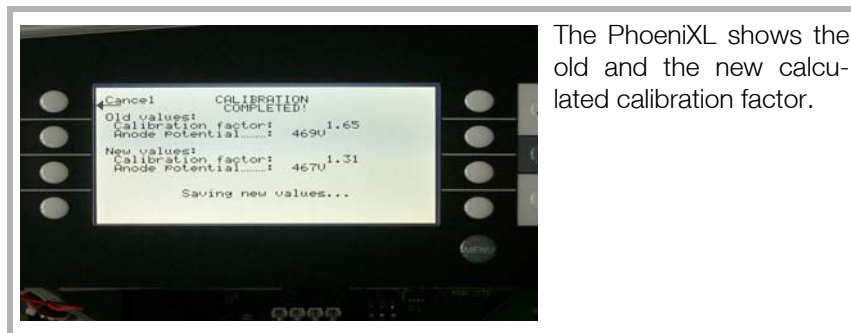


Fig. 40 Display: External Calibration, Step 7



Factor of calibration - Range of values

To avoid a faulty calibration the factor of calibration is tested for plausibility at the end of the calibration routine.

When the new factor of calibration is not considerable higher or lower (<factor 2) than the previous factor of calibration the new factor will be accepted automatically. When the new factor of calibration diverges stronger from the previous factor the user can decide if he wants to accept it anyway (e.g. after changing the system configuration) or not (e.g. because of maloperation).

When calibration is started via SPS or RS232 no testing for plausibility is occurring.

When calibrating internal it is also monitored if the newly calculated factor of calibration is higher than 10 or lower than 0.1. In this case a warning (see W81 resp. W82 in Ch. Trouble shooting) is displayed and the calibration will be interrupted.

**Factor of calibration/Range of values**

### **3.12 Switching off/Shutting down**

The PhoeniXL can be switched off any time by using the mains switch. The turbo pump will be decelerated automatically. It is recommended to put the leak detector into stand-by and vented mode. Approximately after 30 seconds the turbo pump is decelerated sufficient to move the PhoeniXL.

# Operation

## 4 Maintenance

### 4.1 Safety Information

Electrical hazards

During all maintenance and connection work, make sure that the mains cable have been reliable disconnected and do not carry a mains voltage. The leak detector must only be used in with the hoods closed. The electrical connections must only be provided by a trained electrician as specified, for example, by the regulations EN 50110-1.

### 4.2 Maintenance Intervals

Maintenance work should be done on the PhoeniXL as required. This work will normally be limited to exchanging the oil in the Trivac D2,5E rotary vane pump and the built in air and oil filters.

As a preventive measure it is recommended that you check the rotary vane pump once a month. Here note should be taken of the oil level and the colour of the oil.

Only Arctic oil (Cat. no. 20028181) must be used in the TRIVAC D2,5E in the PhoeniXL.

The monthly interval for the check is just a nominal period. If the PhoeniXL is used heavily, in particular in sniffer mode, then this check should be performed more frequently. The rotary vane pump is located on the side of the mechanical section at the bottom of the leak detector.

### 4.3 Oerlikon Leybold Vacuum Service

Whenever you send us in equipment, indicate whether the equipment is contaminated or is free of substances which could pose a health hazard. If it is contaminated, specify exactly which substances are involved. You must use the form we have prepared for this purpose.

A copy of this form has been reproduced at the end of these Operating Instructions: Declaration of contamination for Compressors, Vacuum pumps and Components. Another suitable form is available from [www.oerlikon.com](http://www.oerlikon.com) - Oerlikon Leybold Vacuum Systems - Documentation - Download Documents.

Attach the form to the equipment or enclose it with the equipment.

This statement detailing the type of contamination is required to satisfy legal requirements and for the protection of our employees.

We must return to the sender any equipment which is not accompanied by a contamination statement.

Before shipping fit the yellow screw-on seals on to the connections EXHAUST and GAS BALLAST.

---

#### Caution



#### Contamination

#### Form

# Maintenance

## 4.4 Maintenance Work

### 4.4.1 Opening of the PhoeniXL

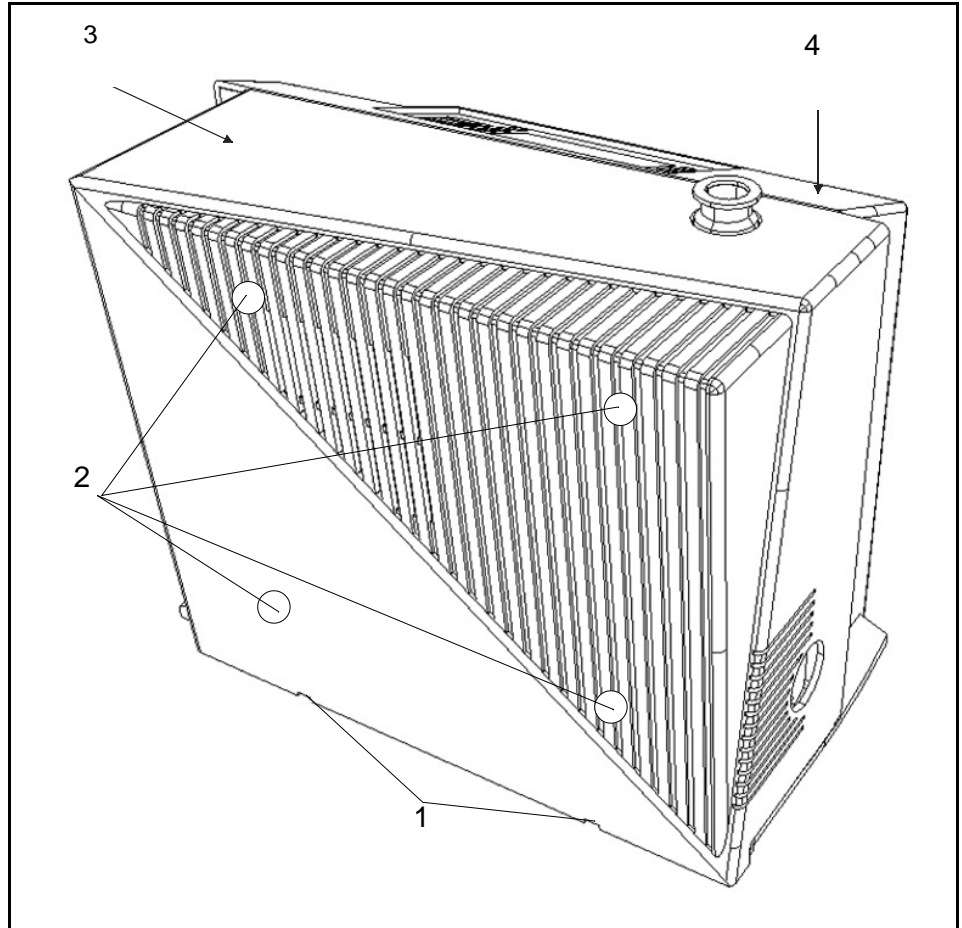


Fig. 41 Backview of the PhoeniXL

- 1: Openings for removal of the cover for the mechanical section
- 2: Four screws for loosening the cover for the electronics section.
- 3: Mechanical cover
- 4: Electronic cover

To open the PhoeniXL please follow the next steps:

1. Switch the PhoeniXL off.
2. Pull the mains cord on the PhoeniXL.
3. Separate the PhoeniXL from other vacuum components at the test port.

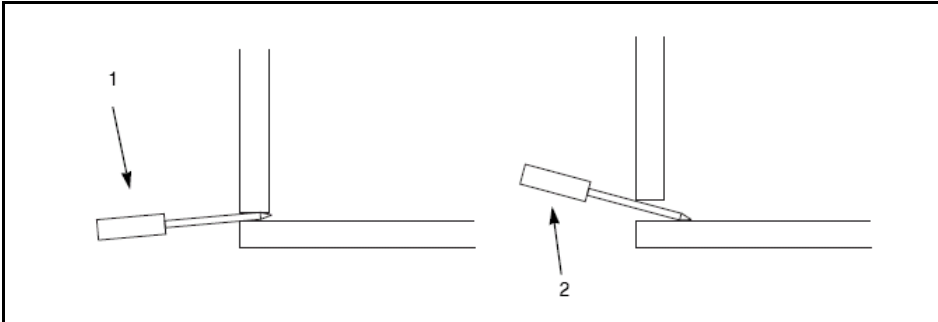


Fig. 42 Opening of the mechanical hood

4. Turn the PhoenixXL so that it is orientated in the same way as shown in Fig..
5. Use two flat blade screwdrivers and insert these into the openings (Fig.) and lever the cover for the mechanical section out at the bottom.
6. In doing so, the cover should be moved somewhat to the front by the downward motion of the screwdrivers. The cover may be lifted up by the upwards motion of the screwdrivers so that the cover is disengaged completely.
7. Then pull the cover off the mechanical section up to its stop and remove it to the front.
8. Removing the cover for the electronics section by removing the four Phillips screws ( Fig./2).
9. Pull the cover over the electronics section back to the rear and place it aside.
10. After completion of all maintenance work put the electronic cover back in place and screw it tighten. The cover of the mechanical section must engage properly in the openings at the bottom.

## 4.4.2 Exchanging the filter mats

The filter mats have been built in to filter the dust out the air which is taken in. In order to ensure that the filter mats will not throttle the air flow and so that sufficient cooling is possible at all times, the filter mats should be cleaned or exchanged as soon as these have attained a dark grey colour.

Filter mats are used at two places within the PhoenixXL:

- a) at the ventilation slit of the electronic cover (only partly visible from the outside)
- b) at the fan of the turbomolecular pump (only partly visible from the outside)

To exchange the filter mats remove the covers as described above.

Filter mat a.) these filter mats are screwed to the electronic cover. Unscrew the screws and exchange the filter mats. (Cat. no. 20099026)

Filter mat b) This filtermat is fixed before the fan with a plastic bracket. Take off the bracket and remove the filter, put on the bracket and fix it properly. (cat.- no. 200001366)

Under certain circumstances a dirty mat may be cleaned by shaking the dust out or

# Maintenance

by using a vacuum cleaner so that the filter mat can be used again.

In the ventilation line is a dust filter installed. This filter has to be cleaned or changed when using in dirty environment (cat.-no. 200000683).

## 4.4.3 Exchanging the oil

Remove the cover of the mechanical section as described in Chapter 5.4.1.

---

### Caution



Electrical hazards

During all maintenance and connection work, make sure that the mains cable have been reliable disconnected and do not carry a mains voltage. The leak detector must only be used in with the hoods closed. The electrical connections must only be provided by a trained electrician as specified, for example, by the regulations EN 50110-1.

When the pump has been pumping hazardous substances, determine the kind of hazard first and ensure that suitable safety precautions are taken. Observe all safety regulations



When disposing of waste oil you must observe the applicable regulations for the safety of the environment.

The oil change procedure are described in the corresponding Operating Instructions GA 01.601 and these must be followed closely.

As already stated before only Arctic oil must be used for the Trivac D 2,5E pump in the PhoeniXL.

After completion of all maintenance work the cover of the mechanical section must engage properly in the openings at the bottom.

## 4.4.4 Cleaning

The housing of the PhoeniXL is made of painted plastic parts. Thus for the purpose of cleaning, only such agents should be used which are generally also used for other painted or plastic surfaces (mild household cleaning agents, for example). Normally a moistened piece of cloth will do. Never use any solvents which are capable of dissolving paint (like acetone, toluol, etc.).

A soft brush or a vacuum cleaner is recommended for cleaning the ventilation slits.

## 4.4.5 Exchanging the fuses

Before exchanging the fuses you must disconnect the mains cord.

1. Switch the PhoeniXL off.
2. Pull the mains cord off the PhoeniXL.
3. Use a screwdriver to fold out the lid of the mains socket from the right (the mains switch is not affected by this).
4. The fuses can be removed by pulling the drawers out which are marked by the arrows. When reinserting these make sure that the arrows point downwards.
5. In any cases two fuses of the same rating must be inserted. The required mains fuses are: T 10A slow blow (20x5mm dia.) for 100V...230V.

---

### Caution



6. After having exchanged the fuse(s) press the lid of the mains socket firmly back on.
7. Insert the mains cord into the PhoenixXL and switch the instrument on.

Beside these mains fuses several internal circuits are fused separately. These fuses are listed in the following table. See also Fig.43.

In order to exchange these fuses you must proceed as follows:

1. Switch the PhoenixXL off
2. Pull the mains cord on the PhoenixXL
3. Remove the cover for the mechanical and electronics section according to Chapter .
4. Exchange fuses

As can be seen in Fig.43, fuses 1, 2, 3 and 4 are located on the MSV board, fuses 5 and 6 on the I/O board and the fuses 7, 8, 9 and 10 are located on the wiring backplane under the MSV board.

5. Finally re-install the covers for the electronics and mechanical section in the reverse order.

Nr. 1	F1 on MSV Fuse rating: T 2A	24 V system voltage of the mass spectrometer supply. Loosen control panel (two Phillips screws). Loosen the panel which holds the MSV board in place (two Phillips screws). Pull the MSV board (the board at the back) up to the top. For this insert a screwdriver into the two recesses at the sides (top) one after the other and lever the MSV board out by resting the screwdriver on the STE board.
Nr. 2	F2 on MSV	Not in use.
Nr. 3	F3 on MSV Fuse rating: T 1A	For generating 24 V for DCDC-converter (+/- 15V / 5 V)
Nr. 4	F4 on MSV Fuse rating: M 0,032A	Fuse for the anode voltage
Nr. 5	F1 on I/O board Fuse rating: T 0,8A	Protects the 24 V supply carried by the option socket
Nr. 6	F2 on I/O board Fuse rating: T 0,2A	Protects the selectable 24 V for RS 232 Interface.
Nr. 7	F 1 on MB Fuse rating: T 0,8A	Supply voltage for the remote control

# Maintenance

Nr. 8	F 2 on MB	Supply voltage 24 V for I/O board.
	Fuse rating: T 4A	
Nr. 9	F 3 on MB	Supply voltage 24 V for fans and motorrelay.
	Fuse rating: T 0,8A	
Nr. 10	F 4 on MD	Protection for the forevacuum pump.
	Fuse rating: T 8A	

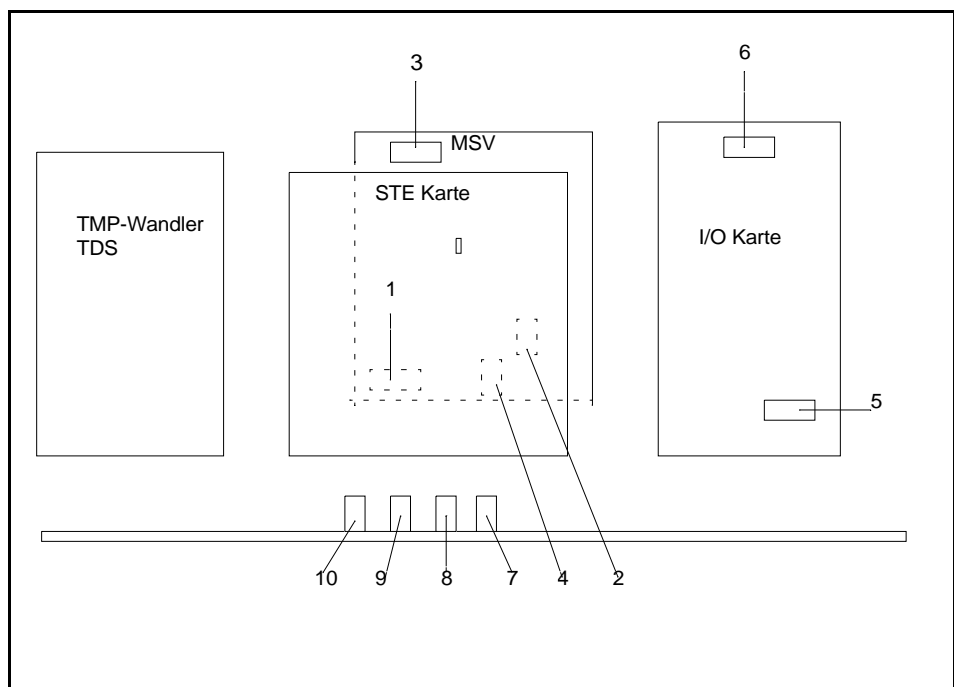


Fig. 43 Assembly fuses

## 4.4.6 Exhaust Oil filter

After using the PhoeniXL for a longer time there can be oil accumulated from the pump. In this case please do the following:

1. Switch off the PhoeniXL.
2. Remove the mechanical cover according to Chapter 5.4.1
3. The oil filter is located besides the rotary vane pump.
4. Unscrew the plexiglas cabinet (direction is shown by an arrow on the filter).
5. Clean or replace the filter (cat-no. 20028656)
6. Screw back the plexiglas cabinet hand tight.
7. Check the oil level of the rotary vane pump and fill it up when necessary (see instructions for rotary vane pump).
8. Finally re-install the cover for the mechanical section.



## 4.4.7 Turbo molecular pump

For the Leybold turbo molecular pump TW 70 LS it is recommended to change the bearings after 20.000 running hours. For details please refer to the corresponding manual of the turbo pump ( GA 05156.0101) or contact your local Leybold service.

## 4.5 Calibrated leak TL7

The Calibrated leak TL7 with the helium reservoir is used for alignment of the mass spectrometer in the PhoeniXL as well as for calibration the leak rate indication.

It is equipped with a solenoid valve which is actuated via the control electronics of the PhoeniXL.

### 4.5.1 Technical Data

Nominal calibration range	$10^{-7}$ mbarl / s
Tolerance of nominal calibration range	+/- 15 %
Temperature coefficient	< 0,5 % / °C
Leak type	Kapillare
Filling	Helium

### 4.5.2 Factory Inspection

Calibrated leaks are not subject to wear and the Helium loss of the calibrated leak TL7, being less than 2 % per year, is negligible. Nevertheless, the leak rate may change over years due to external influences. A factory inspection is, therefore, advisable once a year.

A test certificate, if required for the Helium calibrated leak, can be obtained from our Cologne Works. In that case, the calibrated leak should be forwarded to us and will be returned inspected and recertified with the test certificate against charge.

The helium flow stated on the main label is the actual leak rate of the calibrated leak.

# Maintenance

## 5 Troubleshooting

The PhoenixXL is equipped with comprehensive self-diagnostic facilities. If an error or warning condition is detected it is indicated via the LC display to the operator.

An audio signal is generated when an error or warning occurs. The frequency changes every 400 ms from 500 Hz to 1200 Hz and vice versa so that the signal stands out well from ambient noises normally encountered.

Error and warning messages are logged and can also be displayed at a later time through the menu information (Please refer to Chapter 3.9)

### 5.1 Hints for troubleshooting

Warnings will be indicated

- when the PhoenixXL detects an abnormal condition or
- when it wants to remind the operator of something (e.g. a request for calibration or a service timer has expired).

The PhoenixXL will indicate a message on the LC display and will remain in the Stand-by or the measurement mode.

Warning messages will remain on the LC display until the warning has been acknowledged by pressing „OK“ (Key no. 8). After that the PhoenixXL can be used again (possibly with some restrictions). As long as a warning status exists the status line shows a warning triangle (see Chapter ).

Errors are events which force the PhoenixXL to interrupt its measurement operations. In this case the PhoenixXL closes all valves except valve 2a (Stand-by mode).

Error messages remain on the LC display until the message has been acknowledged by pressing „Restart“ (key no. 8). After that, the PhoenixXL restarts with a new run-up procedure. In some cases it may be helpful to check some settings or measured values before the PhoenixXL restarts. Therefore it is also possible to press „Menu“ (key no. 4 or Menu key) to enter the PhoenixXL menu. After leaving the menu the same error message will be displayed again.

Under extrem conditions (unknown software errors, excessively high electromagnetic interference levels) the built-in „watchdog“ circuit will prevent uncontrolled operation of the PhoenixXL. This watchdog will cause the PhoenixXL to restart. After having done so, the instrument will be running in the Stand-by mode. No error message will be output.

### 5.2 List of Errors & Warnings

The following pages contain a list of all errors and warnings displayed at the control panel. Warning messages are indicated by numbers with a leading W. Error messages are indicated by numbers with a leading E.

# Troubleshooting

No.	Displayed Message	Description and possible solutions
W14	Exhaust oil filter service interval expired	The chosen service interval for the exhaust oil filter is expired. Control and/or replace the exhaust filter insert.
W17	Forepump service interval expired!	The service interval for the fore pump is expired. Service the fore pump
W21	EEPROM write time out	EEPROM defective MC 68 defective
W22	EEPROM parameter queue overflow	Software problem, please contact Leybold service.
E23	24V for external output 1 is too high.	The 24 V voltage for the external output 1 is too high Check if an external voltage has been applied to the 24V output..
E24	24V for external output 1 is too low.	The 24 V voltage for the external output 1 is too low. Fuse F2 on the wiring backplane has blown
E25	Lowered valve voltage too low (< 7V).	I/O board is faulty. MC 68 defective.
E26	24V for external output 2 is too low.	The 24 V voltage for the external output 2 (RS232) is too low. Fuse F2 on the I/O board has blown
E27	24V for external output 3 is too low.	The 24 V voltage for the external output 3 (optional) is too low. Fuse F1 on the I/O board has blown
W28	Real time clock reset! Please enter date and time!	Battery at MC68 is discharged or faulty. MC68 had been replaced.
E29	24V supply for fans is too low (< 20V).	Fuse F1 on wiring backplane has blown.
E30	24 V of the remote control is too low (< 20V).	Fuse F1 on the I/O-board has blown.
W31	The offset voltage of the preamplifier is too high (> 5mV).	The preamplifier is faulty.
W32	Preamplifier temperatur is too high (> 65°C).	Ambient temperature is too high. Air filter dirty.
W33	Preamplifier temperature is too low (< 2°C).	Ambient temperature is too low. Temperature sensor is faulty.

# Troubleshooting

No.	Displayed Message	Description and possible solutions
E34	24V voltage at MSV board is too low!	<p>Signal MVPZN on the MSV board is active. 24 V signal voltage is too low, <math>U &lt; 18.3 \text{ V}</math>.</p> <ul style="list-style-type: none"> <li>– Fuse F1 on the MSV board has blown.</li> <li>– Reference voltage UREF on the MSV board XT7/1 is too high, <math>U &gt; 5 \text{ V}</math>.</li> <li>– DC/DC converter on the MSV board is defective.</li> <li>– 24V power supply voltage of the main power supply is defective or stressed to much.</li> </ul>
E35	Anode-cathode voltage is too high!	<p>Anode-cathode voltage is <math>&gt; 130 \text{ V}</math></p> <p>MSV board is faulty.</p>
E36	Anode-cathode voltage is too low.	<p>Anode-cathode voltage is <math>&lt; 30 \text{ V}</math>.</p> <p>MSV board is faulty.</p> <p>Fuse F4 on MSV board has blown.</p>
E37	Suppressor voltage reference value too high!	<p>Signal MFSZH on MSV board is active. Suppressor signal command variable is too high.</p> <ul style="list-style-type: none"> <li>– Suppressor voltage has a short circuit.</li> <li>– MSV is faulty.</li> </ul>
E38	Suppressor potential too high!	<p>Suppressor potential is higher than 363V.</p> <p>MSV board is faulty.</p>
E39	Suppressor potential is too low.	<p>Supressor potential is lower than 297V.</p> <p>MSV board is faulty.</p>
E40	The anode potential exceeds its nominal value by over 10%!	<p>The actual anode potential exceeds its nominal value by 10%. The nominal value can be displayed in the service menu.</p> <p>MSV is faulty.</p> <p>MC 68 is faulty</p>
E41	The anode potential has dropped below its nominal value by over 10%!	<p>The actual anode potential has dropped below its nominal value by 10%. The nominal value can be displayed in the service menu.</p> <p>MSV is faulty.</p> <p>MC 68 is faulty.</p>
E42	Nominal value of the anode potential is too high!	<p>Signal MFAZH on MSV board is active.</p> <p>Anode voltage has been short circuited.</p> <p>Nominal value of the anode voltage is too high. Anode voltage is limited to about 1,200 V.</p>
E43	Cathode current is too high! MSV Cat-Heater >>	<p>Signal MPKZH on MSV board is active. Cathode current is too high, <math>I &gt; 3.6 \text{ A}</math>.</p> <p>MSV is faulty.</p>

# Troubleshooting

No.	Displayed Message	Description and possible solutions
E44	Cathode current is too low!	Signal MPKZN on MSV board is active. Cathode current is too low, $I < 0.2 \text{ A}$ . MSV is faulty. Faulty ion source connector or cable.
W45	Emission for cathode 1 can not be switched on!	Signal MSIBE on MSV board is not active. Emission for cathode 1 can not be switched on. PhoenixXL switches to cathode 2. Please order a new ion source. Cathode 1 is defective MSV board is defective
W46	Emission for cathode 2 can not be switched.	Signal MSIBE on MSV board is not active. Emission for cathode 2 can not be switched on. PhoenixXL switches to cathode 1. Order a new ion source. Cathode 2 is defective. MSV board is defective.
E47	Emission for both cathodes can not be switched on!	Signal MSIBE on MSV board is not active. Emission can not be switched on. Exchange the cathode by changing the ion source. After having exchanged the ion source it must be possible to switch on both cathodes manually via the service menu. Replace ion source. MSV board is defective.
E48	Anode heater is faulty!	Signal MSAFD on MSV board is active. Anode heater fuse has blown. Replace fuse F2 on the MSV board.
E50	No communication with turbo pump converter.	Clock from the frequency converter has failed. No communication to the frequency converter. Fuse F4 on the wiring backplane has blown. Drive electronics Turbo Drive S is defective.
E51	Unknown TMP error	The frequency converter Turbo Drive S indicates an unknown error code. Inform Leybold service
E52	TMP frequency is too low!	TMP frequency is too low! Frequency converter is faulty. Turbomolecular pump is faulty.
W53	Temperature at electronic unit is too high ( $>59^\circ\text{C}$ )	Ambient temperature too high. Ventilation failure. Air filter dirty and have to be changed.
E54	Temperatur at electronic unit is too high ( $>60^\circ\text{C}$ ).	Ambient temperature is too high. Internal ventilation has failed. Air filters are dirty and must be exchanged.

# Troubleshooting

No.	Displayed Message	Description and possible solutions
W55	Temperature at electronic unit is too low (< 2°C)	<p>The temperature sensor on the wiring plane indicates <math>T &lt; 2 \text{ }^{\circ}\text{C}</math>. Run-up time for the forevacuum pump will be longer.</p> <p>Temperature sensor is faulty.</p> <p>Ambient temperature is too low.</p>
E56	Inlet pressure p1 too low!	<p>Output voltage Pirani P1 <math>U &lt; 0,27 \text{ V}</math>.</p> <p>Pirani sensor P1 is defective.</p> <p>Pirani electronics on the I/O board is defective.</p>
E58	Foreline pressure p2 too low!	<p>Output voltage Pirani P2 <math>U &lt; 0,27 \text{ V}</math>.</p> <p>Pirani sensor P2 is defective.</p> <p>Pirani electronics on the I/O board is defective.</p>
E60	p2>10mbar after 5 minutes since power on	<p>Run-up time of the forevacuum pump is too long.</p> <p>Forepump is faulty.</p> <p>Valve V2 does not open.</p> <p>Leak in the high vacuum system.</p>
E61	Emission fail.	<p>Emission could not be switched on. MSV subassembly indicates a fault. MENB emission current not within range.</p> <p>MSV board is defective.</p> <p>Both cathodes are defective, replace ion source.</p>
W62	Flow through capillary to low.	<p>In the sniffer mode the intake pressure of the sniffer line is controlled. If the pressure falls below the minimum limit, the flow through the capillary is too low (contamination) or the capillary is blocked (foreign objects, particles).</p> <p>The minimum limit can be set by the menu. Default value is 0.05 mbar.</p> <p>Filter in the tip is clogged.</p>
W63	Capillary broken	<p>In the sniffer mode the intake pressure of the sniffer line is controlled. If the pressure exceeds the maximum limit, the flow through the capillary is too high (no leak tightness, broken capillary).</p> <p>The maximum limit can be set by the menu. Default value is 0,15 mbar.</p> <p>The capillary is broken or has been torn off.</p>
E64	TMP error: Nominal speed has been exceeded by over 10%	<p>Nominal speed of the pump has been exceeded by over 10%</p> <p>EMC problems: Check connecting cable, insert it properly. Switch the power supply voltage off and then on again.</p> <p>Turbo.Drive S faulty: Inform Leybold Service</p>

# Troubleshooting

No.	Displayed Message	Description and possible solutions
E65	TMP error: Pass through time exceeded	<p>Max. time for passing through the critical frequencies has been exceeded.</p> <p>Forevacuum or high-vacuum pressure too high: see chapter 6.6.7.1 to reduce the inlet pressure of the PhoeniXL</p> <p>Bearing defective: Inform Leybold service for repair</p>
E66	TMP error: Bearing temperature too high (>67°C)	<p>Max. bearing temperature has been exceeded</p> <p>Forevacuum or high-vacuum pressure too high: see chapter 6.6.7.1 to reduce the inlet pressure of the PhoeniXL</p> <p>Fan defective: Replace the fan</p> <p>Ambient temperature too high: Feed cooler air to the PhoeniXL</p> <p>Bearing defective: Inform Leybold service for repair</p>
E67	TMP error: Short circuit in TMP-motor or connecting cable	<p>Short circuit in the pump's motor or the connecting cable</p> <p>Check to see if the connecting cable is undamaged, exchange if required.</p> <p>Inform Leybold service in case of short circuit in TMP motor</p>
E68	TMP error: temperature converter too high (>75°C)	<p>Maximum temperature for the converter has been exceeded.</p> <p>Ambient temperature too high: Feed cooler air to the PhoeniXL</p> <p>Fan defective: Replace the fan</p> <p>Forevacuum or high-vacuum pressure too high: see chapter 6.6.7.1 to reduce the inlet pressure of the PhoeniXL</p>
E69	TMP error: Runup timeout	<p>Max. time after which the pump must enter its normal operation mode has been exceeded.</p> <p>Forevacuum or high-vacuum pressure too high: see chapter 6.6.7.1 to reduce the inlet pressure of the PhoeniXL</p> <p>Bearing defective: Inform Leybold service for repair</p>
E70	TMP error: TMP motor temperature too high (>90°C)	<p>Max. motor temperature has been exceeded.</p> <p>Forevacuum or high-vacuum pressure too high: see chapter 6.6.7.1 to reduce the inlet pressure of the PhoeniXL</p> <p>Fan defective: Replace the fan</p> <p>Ambient temperature too high: Feed cooler air to the PhoeniXL</p> <p>Bearing defective: Inform Leybold service for repair</p>
E71	TMP error: TMP could not be identified	<p>Pump could not be identified or no pump is connected.</p> <p>Pump not connected to Turbo.Drive S: Check connecting cable</p>
E72	Emission off (P1 too high)	Air inrush
E73	Emission off (p2 too high)	<p>The emission is switched off as soon as the pressure <math>P_2 &gt; 0.2</math> mbar or 1,5 mbar in the measurement mode. If after closing the inlet valve the pressure drops again, the leak detector will revert to the standby mode.</p> <p>Air inrush in the measurement mode.</p>



# Trouble shooting

No.	Displayed Message	Description and possible solutions
W74	Error proportional valve	Proportional valve is faulty. I/O board is faulty.
W76	Maximum of evacuation time was exceeded.	Within the pre set evacuation time the pressure threshold of 100 mbar was not reached. Test sample has got a GROSS leak. Wrong setting ( too short) of the max. time of evacuation.
W77	Peak not in Range	The signal maximum has shifted to mass range alignment limits. Signal of leak rate was instable during mass adjustment. Calibrate again. Check the basic setting for the anode voltage through the service menu. Check calibrated leak.
W78	Differences of signal between test leak open and closed is too low.	The amplifier voltage difference between opened and closed calibrated leak is less than 10 mV. Calibrated leak has not been closed properly.
W79	Signal of test leak is too small	Calibrated leak is too small or has not been opened. Preamplifier voltage < 10 mV.
W80	Please calibrate machine newly	The automatic request of calibration is activated and has fulfilled at least one of the conditions: 30 minutes are passed since power on. Temperature of the pre-amplifier has changed more than 5°C since the last calibration. Mass adjustments were changed. Change of TMP speed to 920 Hz, Gross only mode
W81	CAL Factor too low	The calculated factor falls out of the valid range (<0,1). The old factor is retained. Possible fault cause: The conditions for calibration have not been maintained. The leak rate of the internal calibrated leak which was entered is much too small. The internal test leak is defect.
W82	CAL Factor too high	The calculated factor is out of the valid range (>10). The old factor is retained. Possible fault cause: The conditions for calibration have not been maintained. The leak rate of the internal calibrated leak which was entered is much too high or much too small.

# Troubleshooting

No.	Displayed Message	Description and possible solutions
W83	All EEPROM parameter lost. Please check your settings.	EEPROM on back plane is empty and was initialized with default values. Enter all parameters again.  The EEPROM might be faulty when warning comes up again after power up.
W84	EEPROM parameter initialized. Please check your settings	Software update has been installed
W85	Lost EEPROM parameter! Please check your settings!	Writing access was interrupted. Please check all adjustments.  An software update was done. In this case the notice can be ignored.  When warning comes up again after powering up the EEPROM might be faulty.

## **6 Waste Disposal**

The equipment may have been contaminated by the process or by environmental influences. In this case the equipment must be decontaminated in accordance with the relevant regulations. We offer this service at fixed prices.

Further details are available on request.

Contaminated parts can be detrimental to health and environment. Before beginning any work, first find out whether any part are contaminated. Adhere to the relevant regulations and take the necessary precautions when handling contaminated parts.

Separate clean components according to their materials, and dispose of these accordingly. We offer this service. Further details are available on request.

When sending us any equipment, observe the regulations given in Section 5.3 Oerlikon Leybold Vacuum Service.

# Certificates

**oerlikon**  
leybold vacuum



## EC Declaration of Conformity

**The manufacturer:** Oerlikon Leybold Vacuum GmbH  
Bonner Straße 498  
D-50968 Köln  
Tel.: +49 (0) 221 347-0  
info.vacuum@oerlikon.com

herewith declares that the products specified and listed below, which we have placed on the market, comply with the applicable EC Council Directives.

This declaration becomes invalid if modifications are made to the product without agreement of Oerlikon Leybold Vacuum GmbH.

Compliance with the EMC Directives requires that the components are installed within a system or machine in a manner adapted to EMC requirements.

**Product designation:** leak detector

**Type designation:** PhoeniXL<sup>300</sup>; PhoeniXL<sup>300 Dry</sup>; PhoeniXL<sup>300 Modul</sup>

**Catalogue No.:** 250000; 250001; 250002; 251000; 251001; 251100; 251101

### The product complies to the following European Council Directives:

- EC-Machinery Directive (2006/42/EC)
- EC-low-voltage directive (2006/95/EC)
- EC-Directive relating to electromagnetic compatibility (2004/108/EC)

### The following harmonised standards have been applied:

- EN 61010 - 1: 2001
- EN 61000-6-4: 2002, Part EN 55011 Class B
- EN 61000-6-3: 2002, Part EN 61000-3-2
- EN 61000-6-2: 2000, Parts EN 61000-4-2  
EN 61000-4-3  
EN 61000-4-4  
EN 61000-4-5  
EN 61000-4-6  
EN 61000-4-11
- DIN EN ISO 12100-1 / DIN EN ISO 12100-2

### Documentation Officer:

Herbert Etges  
Tel.: +49 (0) 221 347-0  
Fax: +49 (0) 221 347-1250  
E-Mail: info.vacuum@oerlikon.com  
Oerlikon Leybold Vacuum GmbH  
Bonner Straße 498, D-50968 Köln, Germany

Cologne, dated 10-01-15

Cologne, dated 10-01-15

Dr. Monika Mattern-Klosson  
Head of Research & Development

Harald Udelhoven  
Head of Quality Management

A		
	Autoranging	6
B		
	Background in Stand-by	58
C		
	Calibrated leak TL7	96
	Calibration request	77
D		
	Define PLC inputs	50
	Define PLC outputs	49
	Define recorder output	46
F		
	fine	7
G		
	gross	7
I		
	Internal Calibration	85
L		
	List of Errors & Warnings	98
M		
	Menu	7
	MENU Button	43
N		
	Numerical Entries	44
P		
	Partial flow setup	69
	precision	7
R		
	RS232	49
S		
	START Button	42
	STOP Button	42

# Index

T	
Trigger & Alarms	60
Troubleshooting	98
Turbo molecular pump	96
V	
Vacuum ranges	68
Vacuum settings	66
Z	
ZERO Button	42

